## How to Download a Parameter file to the Kollmorgen S300

## Connect

- Connect the interface cable to a serial interface on your PC and to the serial interface X6 of the servo amplifier. USB to serial converter can be used optionally.
- Switch on the 24 V power supply for the servo amplifier.
- Wait about 30 seconds, until the front display of the servo amplifier displays the current class (e.g. 48 a for 48 A) If the power supply voltage is switched on, too, a leading P is displayed (e.g. 68 a for Power, 48 A).

NOTE

8.3.2

If a fault code ( $\mathbb{R} \oplus \mathbb{R}$ ) or a warning ( $\mathbb{R} \oplus \mathbb{R}$ ) or a status message (./\_ / E/S) appears in the display, you will find the description on page 114 / 115. If a fault message appears, fix the problem.



Double-Click the DRIVEGUI.EXE icon on your Windows desktop to start the software.

Drive	GUI 🛛 🔣
?	Would you like to connect to a drive? (Press "Yes" to connect or "No" to work offline)
	Ja S Nein

You can work offline or online with DRIVEGUI.EXE. Work ONLINE now.



If the communication is started for the first time, you have to setup the communication parameters. Choose the communication system and the interface, where the servo amplifier is connected to. Click OK.

The software tries to communicate with these parameters. If it's not successful, you receive this error message:

Drive	GUI 🛛 🔀
1	Communication Error: Communication timed out.

Frequent causes:

- wrong interface chosen
- wrong connector chosen at the servo amplifier
- interface is used by another software
- 24 V auxiliary voltage for the servo amplifier not working
- interface cable broken or wrong wiring

Quit the error message. The software starts in the offline mode now, that requires the manual selection of the amplifier's type. Quit this selection by closing the window. Fix the communication problem. Restart the software in Online mode.



When the GUI opens and connects to the S700 drive it will look similar to screen shown above. The Online LED will turn green if the drive is communicating with the GUI.



Select the Setup Wizzard in the Tree of the GUI

D Untitled - DriveGUI		
File Edit Communication Drive Tools	View Help	
📋 🗅 🕰 🖪   X 🖻 🛍 X   v   4	😼 😰 Help (F1) 💦 🛛 🔶 🕩 🗘 🚳 E	EN DIS 🚵 💑 👫 🛓 OPMODE 1: Analog Velocity 🔹
DRIVED     DRIVED     Setup Wizawe     w-Ca. Basic Setup	Basic Setup	
Units / Mechanical	et films Stell der	Amplifier
. CAN / Field Bus Setting	et the rolder	Hardware
Feedback	Regen Resistor	Drive 6A
• Wotor	🗇 Internal	Firmware
Current Loop		V5.50 DBIVE Rev create d Apr 10 13:34:21 2013
, Velocity Loop	Value max. Regen Power	Sarial Number Pun Time Name
	External 0 Ohms 75 W	966990003 1899-59 k DBIVED
Position Registers		
Electronic Gearing	Mains Voltage	Rated Current Peak Current Command Delay
- Second Encoder Emulation		6 A 18 A U ms
fy Analog I/O	Response to Loss of Junuit Phone	E Cat Cathorne Fachle an Bachar
Digital I/O	Three-Phase Error F19	Set Software-Enable on Boordp
		C Activate Multidrive support
Monitor		
- Homing	Controller settings	DRVCNFG settings
لله Motion Tasks	PWM = 8 kHz, current loop = 16 kHz, position loop = 4 kHz	DRVCNFG DRVCNFG2 DRVCNFG3 DRVCNFG4
	Pw/M = 16 kHz_current loop = 16 kHz_position loop = 4 kHz	0 268435456 24 0
	Pu/M = 8 kHz ourrent loop = 16 kHz position loop = 8 kHz	
	Public Alle superblass 10 bills successful lass Alle	Configure Configure Configure
Auto-Tuning	PWM = 4 KH2, Current loop = 16 KH2, position loop = 4 KH2	
SD-Card		
So-card		
		Next >
		······
Ready	S706 (DRIVE0) @ COM3 (38,4 kBaud)	🧿 Online No SW EN 🥥 O.K. not hom

Select the Open Folder at the top left of screen



Select the Parameter File to Download to the S700 Drive

Untitled - DriveGUI File Edit Communication Drive Tools	View Help	
🗋 🗅 🚅 🔛   % 🖻 🛍 X   ဟ   4	🐉 🕐 Help (F1) 💦 🔷 🗣 🕼 🗘 😨	EN DIS 🚵 💑 👫 🛓 OPMODE 1: Analog Velocity 🔹
DRIVEO     Setup Wizard     Setup Wizard     Divis / Mechanical     CAN / Field Bus Settings     CAN / Field Bus Settings     CAN / Field Bus Settings     Setup // Volocity Loop     Setup // Volocity Loop     Position Registers     Setup // Analog I/O     Digital I/O     Motion Service     Status (Errors / Warnings)     Motinor     Homing     Motion Tasks     Oscilloscope     Bode Plot     Terminal     Auto-Tuning     EtherCAT     SD-Card	<ul> <li>Iz) Help (F1) N?</li> <li>Iz) Help (F1) N?</li> <li>Basic Setup</li> <li>Power Supply</li> <li>Regen Resistor</li> <li>Internal</li> <li>Value</li> <li>max. Regen Power</li> <li>DriveGUI</li> <li>Would you like to connect to a drive?</li> <li>(Press "Yes" to connect or "No" to work off</li> <li>Respo</li> <li>Three</li> <li>Ves</li> <li>Controller settings</li> <li>PWM = 8 kHz, current loop = 16 kHz, position loop = 4 kHz</li> <li>PWM = 8 kHz, current loop = 16 kHz, position loop = 8 kHz</li> <li>PWM = 8 kHz, current loop = 16 kHz, position loop = 8 kHz</li> <li>PWM = 8 kHz, current loop = 16 kHz, position loop = 4 kHz</li> <li>PWM = 4 kHz, current loop = 16 kHz, position loop = 4 kHz</li> </ul>	EN DIS A A PLY OPMODE 1: Analog Velocity
Ready	S706 (DRIVE0) @ COM3 (38,4 kBaud)	🕗 Online No SW EN 🍊 O.K. not hom 🖉

Select Yes to start the parameter download Procedure



Make sure Reset Parameter before download is select, then select Yes



## Select Yes

Write-Protection Override
Force the following parameters to be overwritten, if present in the parameter set:
Address
V Name
Reference Offset

## Select Name



Select Yes to Save parameters to EEprom and Coldstart the drive



Select No to Download CAN SDOs



Select No to Download Motion Tasks