

Servostar CD AGND connections

ServoStar CD Control Board

RGND = gnd for Resolver to Digital Converter
AGND = gnd for Analog circuits
DGND = gnd for digital circuits

ServoStar CD Power Board

ServoStar CD Chasies

Metallic Chassis

Metallic Spacers

Flex Cable

DC to DC

AGND (gnd for Analog circuits)

BP202 RESISTOR 0 Ohm 1206

BP201 RESISTOR 0 Ohm 1206

DGND (gnd for digital circuits)

5 Volt

Encoder 5 Volt

+ 15 Volt

- 15 Volt

GND

Chassies

R117

RESISTOR 0 Ohm 1206

C4 user I/O connector

C4 pin 4

GND connection screw