

***ADDENDUM TO***  
***INSTALLATION AND***  
***OPERATIONAL***  
***MANUAL***  
**Q7000 SERIES**

Detailed changes to software programs are introduced frequently. Please ensure that this manual refers to the software version you are using.

For your safety and for proper operation, please take time to carefully read all instructions before installing and operating this unit.

**Danaher Motion**  
**Engineered Systems Center**  
13500-J SOUTHPOINT BLVD. , CHARLOTTE, N.C. 28273  
PHONE: (704)-588-5693; FAX: (704)-588-5695

The following tables are missing from page 12, Section 3.3b-Current Scaling

**CURRENT RANGE ( J6 ) POSITION TABLES**

<b>Model 7006</b>		<b>115VAC</b>	<b>230VAC</b>
<b>J6 Position</b>	<b>Nominal Current AMPS</b>	<b>HP 90VDC</b>	<b>HP 180VDC</b>
A	1	---	---
B	1.5	1/8	1/4
C	2	---	---
D	3	1/4	1/2
E	5	1/2	3/4-1

<b>Model 7002</b>		<b>115VAC</b>	<b>230VAC</b>
<b>J6 Position</b>	<b>Nominal Current AMPS</b>	<b>HP 90VDC</b>	<b>HP 180VDC</b>
A	2	---	1/4
B	3	1/4	1/2
C	4	1/3	3/4
D	6	1/2	1
E	10	3/4-1	1 1/2 -2

<b>Model 7005</b>		<b>115VAC</b>	<b>230VAC</b>
<b>J6 Position</b>	<b>Nominal Current AMPS</b>	<b>HP 90VDC</b>	<b>HP 180VDC</b>
A	5	1/2	---
B	7.5	3/4	---
C	10	1	---
D	15	2	3
E	25	---	5