

Kollmorgen Automation Suite

KAS Getting Started - v5.00

User Manual



Document Edition: JJ, July 2026

Valid for KAS Software Revision: 5.00

Valid for Kollmorgen Essentials Drive Firmware Version: 02-16-00-003

Part Number: 959713



For safe and proper use, follow these instructions.
Keep for future use.

KOLLMORGEN

A REGAL REXNORD BRAND

Table of Contents

1	Introduction	4
1.1	Related Documents	4
1.2	Alerts and Warnings	4
2	System Overview	5
2.1	Software Packages	5
2.2	Hardware Components	6
2.3	Digital Signatures	7
3	Install KAS-IDE	8
3.1	System Requirements	8
3.2	Digital Signatures	9
3.3	Download	9
3.4	KAS-IDE Installation	10
3.4.1	WebView2 Installation	15
3.4.2	User Data	15
3.5	Additional Literature	16
4	Installing KAS Runtime	17
4.1	Update the Runtime on PCMM2G	17
4.1.1	PCMM2G File Type: .ZIP	18
4.1.1.0.1	Operating System (OS) + KAS Runtime (RT)	18
4.1.1.0.2	OS Only	18
4.1.1.0.3	KAS Runtime (RT) Only	18
4.1.1.1	Model Code	18
5	Install Hardware (HW)	21
5.1	HMI - Graphic Operator Interface	26
5.2	Install Controllers	26
5.3	EtherCAT Motion Bus	26
5.4	Remote Input/Output - I/O Terminal	27
5.5	Install AKD Drives	29
5.6	Install AKM or AKM2G Motors	29
5.7	SafePLC2 Projects	30
6	Kollmorgen Servo Drives Firmware	31
6.1	Verify Kollmorgen Servo Drives Firmware	31
6.2	Update Kollmorgen Servo Drives Firmware	31
7	Installing Kollmorgen Visualization Builder	34
7.1	Download	34
7.2	Installation Procedure	34
8	Finalize Installation	36
8.1	Test the Installation	36
9	Troubleshooting	37
10	Kollmorgen Documentation Legal Information	38
10.1	KAS - Copyrights, Trademarks, Patents, Licenses, and Disclaimers	39
10.2	Kollmorgen Trademarks	39
10.3	Kollmorgen Patents	39
10.4	PCMM2G	40
10.5	Other Trademarks	41
10.6	3rd-party Licenses	42

10.7 Disclaimers	44
Support and Services	46

1 Introduction

This guide covers these main procedures to have your KAS system up and running:

- **Hardware (HW) Installation** (Connection and Wiring): Wiring and hardware details, connectors, system diagrams.
- **HW Configuration**: Basic configuration and settings needed to start the HW components (e.g., HMI, Industrial PC, Fieldbus, I/O).
- **Software (SW) Installation**: KAS software setup.

1.1 Related Documents

See the [Kollmorgen Downloads](#) page for documentation about controllers, drives, motors, and other components.

1.2 Alerts and Warnings

When alert symbols are seen in a manual, be aware of the potential for personal injury.

Follow the recommended precautions and safe operating practices included with the alert symbols.

- Safety notices in the manuals provide important information.
- Read and be familiar with these instructions before attempting to install, operate, or perform maintenance.
- This section alerts users to possible safety hazards associated with equipments and the precautions that need to be taken to reduce the risk of personal injury and damage to the equipment.
- Failure to observe these precautions could result in serious bodily injury, damage to the equipment, or operational difficulty.

2 System Overview

The Kollmorgen Automation Suite (KAS) is a complete system solution.

This includes a variety of software packages designed for complete control over your hardware.

2.1 Software Packages

Software	Description
KAS-IDE	The KAS Integrated Development Environment (KAS-IDE) provides all necessary tools for designing, programming, configuring, debugging, and maintaining machine applications.
KAS Runtime	The KAS Runtime engine includes a soft PLC and a motion controller.
KVB (optional)	The Kollmorgen Visualization Builder assists in designing an HMI panel.

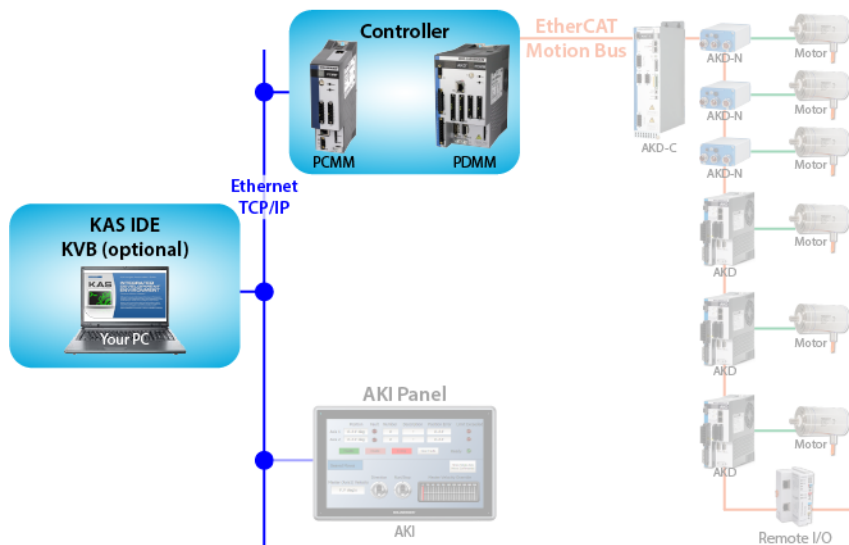


Figure 2-1: Software

2.2 Hardware Components

The KAS system is comprised of these hardware components.

Component	Models	Description
Controller	PCMM2G	- Standalone programmable controller. - Provides a real-time platform with a PLC engine and motion engine to execute application programs and communicate with all network devices (e.g., remote I/O, drives, HMI, other PLCs, etc.)
Drive	AKD AKD2G AKD-C AKD-N	Servo drives specifically designed with versatility, communications, and power to expand machine performance.
HMI	AKI AKI2G	Provides a graphical interface for the operator to manage the machine's operations.
Motor	AKM AKM2G	Servo motor is an actuator used for precise control of position, velocity, and acceleration by closing the control loop with a feedback device.
Remote I/O	AKT AKT2G	Digital and analog input and output signals . These signals provide sensor feedback and actuation between an automation system and the physical world.

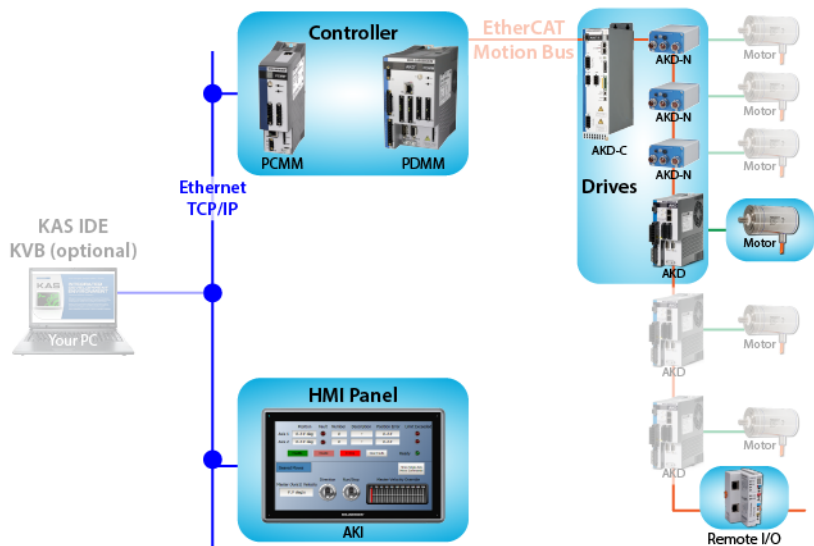


Figure 2-2: Hardware

2.3 Digital Signatures

The KAS-IDE Installer and the executables are digitally signed to protect the integrity of these files and identify the distributor of the software components.

The digital signature appears as part of the file properties.

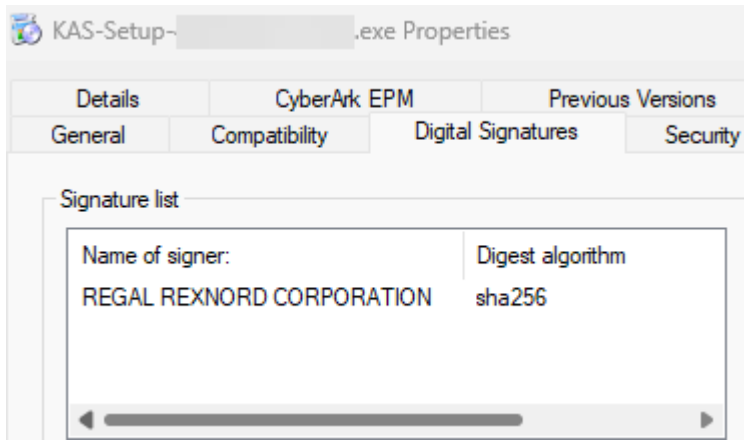


Figure 2-3: Example: KAS Setup Properties Digital Signature

3 Install KAS-IDE

3.1 System Requirements

These are the minimum system requirements for the KAS-IDE.

Component	Description
Supported Operating Systems	• Microsoft Windows 11 (64-bit). • Microsoft Windows 10 (32-bit or 64-bit). • For optimal performance, verify the operating system is fully updated with the latest patches.
Connectivity	• 1 Ethernet port or WiFi connectivity, at either 100 MB or 1 GB. • See Note #2.
Display	• WXGA+ (1440 x 900) or higher-resolution monitor with 24-bit, 16.7M colors. • See Note #1.
Hard Disk	Free space required on hard disk: • 32-bit hard disk: 16GB • 64-bit hard disk: 20GB
Network	Internet connection for downloading and updating WebView2 Runtime.
Processor	Intel Pentium M or equivalent processor at 1.5GHz or greater.
RAM	• 32-bit: 1GB RAM • 64-bit: 2GB RAM or greater • Recommended for complex applications.
Software	• Microsoft Edge WebView2 Runtime (Evergreen) version 133.0.3956.59 or newer. • .NET Framework 4.8.1 or newer.
Web Browser	• A modern web browser is required to access the controller Web server and online help. • We recommend Microsoft Edge.

NOTE

1. Better results are achieved with OpenGL and 3D cards.
 2. A 100MB or 1GB network is required to allow the KAS-IDE to Runtime communication to work in all conditions.
The AKD WorkBench AutoTuner and Scope both require 100MB of bandwidth to function properly.

TIP

- See [Connect Remotely](#) about the ports used by the KAS.
 - The ports may need to be opened to support connecting to a controller from an external network.

3.2 Digital Signatures

The KAS-IDE Installer and the executables are digitally signed to protect the integrity of these files and identify the distributor of the software components.

The digital signature appears as part of the file properties.

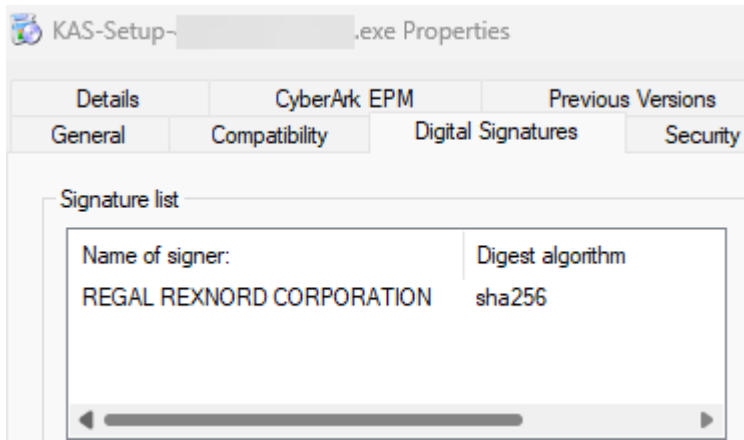


Figure 3-1: Example: KAS Setup Properties Digital Signature

3.3 Download

The latest version of the Kollmorgen Automation Suite is available from the Kollmorgen Support Network here: [KAS IDE Distribution](#).

NOTE

- This is a restricted site.
- You must be given access based on having purchased KAS.
- If you do not have access, contact "Support and Services" (→ p. 46).

Procedure

1. Open the [KAS IDE Distribution](#) site.
2. Login to the site.
3. In the table, click the applicable Full or Small Installer link.
The file starts downloading.
4. When the download is completed, continue with the "KAS-IDE Installation" (→ p. 10).

3.4 KAS-IDE Installation

ⓘ IMPORTANT

- Installation of the KAS-IDE can require you to change firewall settings.
- If you do not have sufficient privileges to configure your firewall, you must stop the relevant Windows Service.

🔑 TIP

- Adding the **KAS-IDE** application as an exception in your firewall settings is recommended to avoid security issues.
- See the [FAQ > Setup](#) entry **How can I fix security issues?** about firewall recommendations.

Procedure

1. On the computer, locate the folder where the EXE file was downloaded to.
2. Double-click the EXE file.

The Kollmorgen Automation Suite Setup starts loading.

ⓘ IMPORTANT

The **Verified Publisher** in the installation wizard dialog must be **REGAL REXNORD CORPORATION**.

3. Wait for the setup splash screen to vanish after being displayed.
The Kollmorgen Automation Suite Setup wizard starts.
The **Welcome** window opens showing the version number of the KAS-IDE. (Figure 3-2)

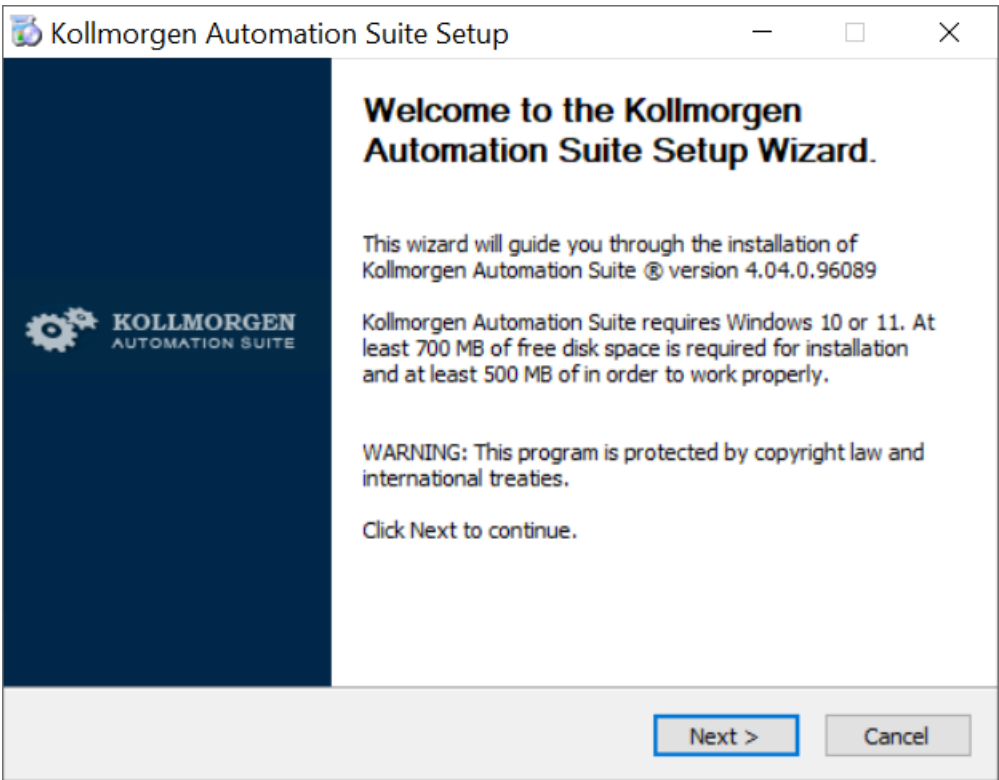


Figure 3-2: Welcome window

4. Click **Next**.
The **License Agreement** window opens. (Figure 3-3)

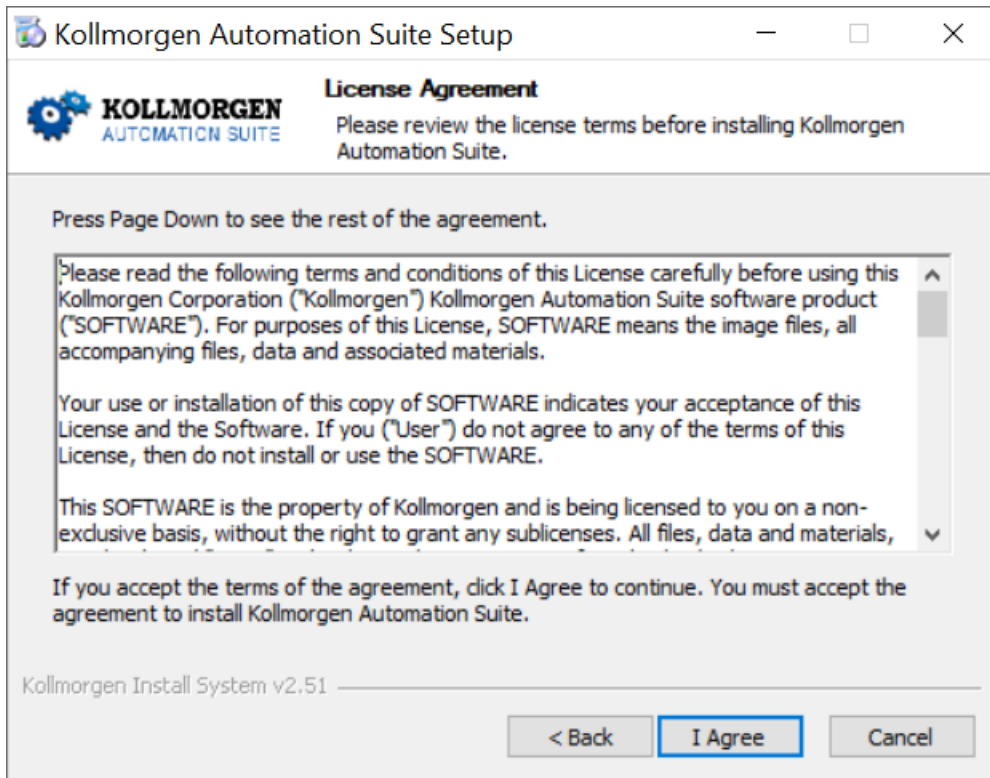


Figure 3-3: License Agreement window

5. Review the License Agreement and click **I Agree**.

NOTE

You must accept the agreement to install KAS.

The **Choose Components** window opens. (Figure 3-4)

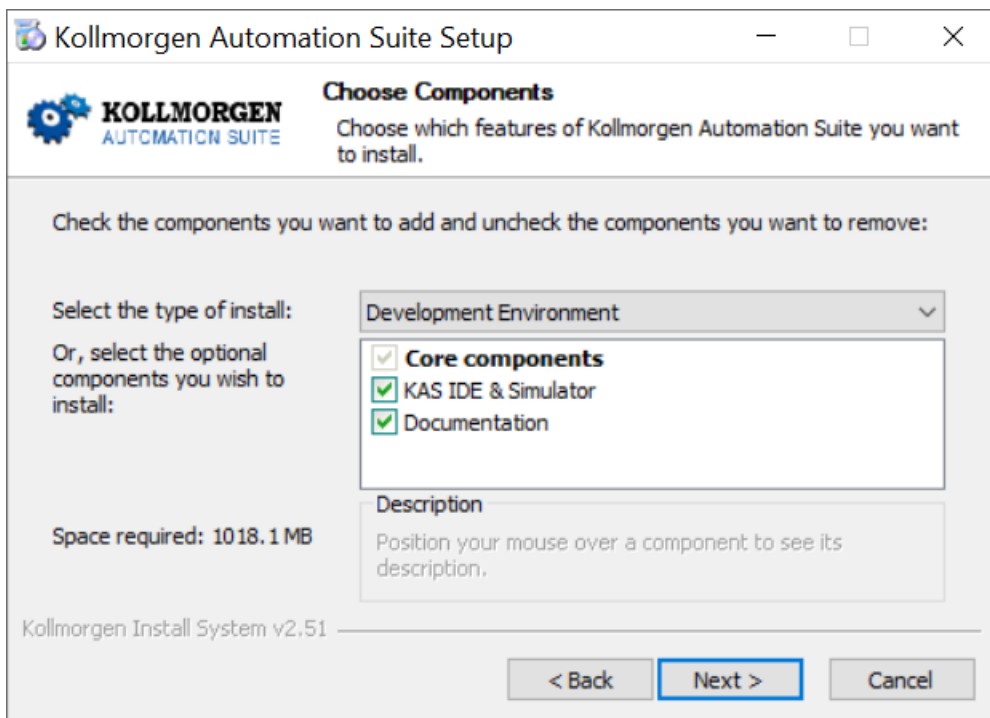


Figure 3-4: Choose Components window

6. From the drop-down menu, verify the **Development Environment** installation type is selected.
7. Click **Next**.

The **Choose Users** window opens. (Figure 3-5)

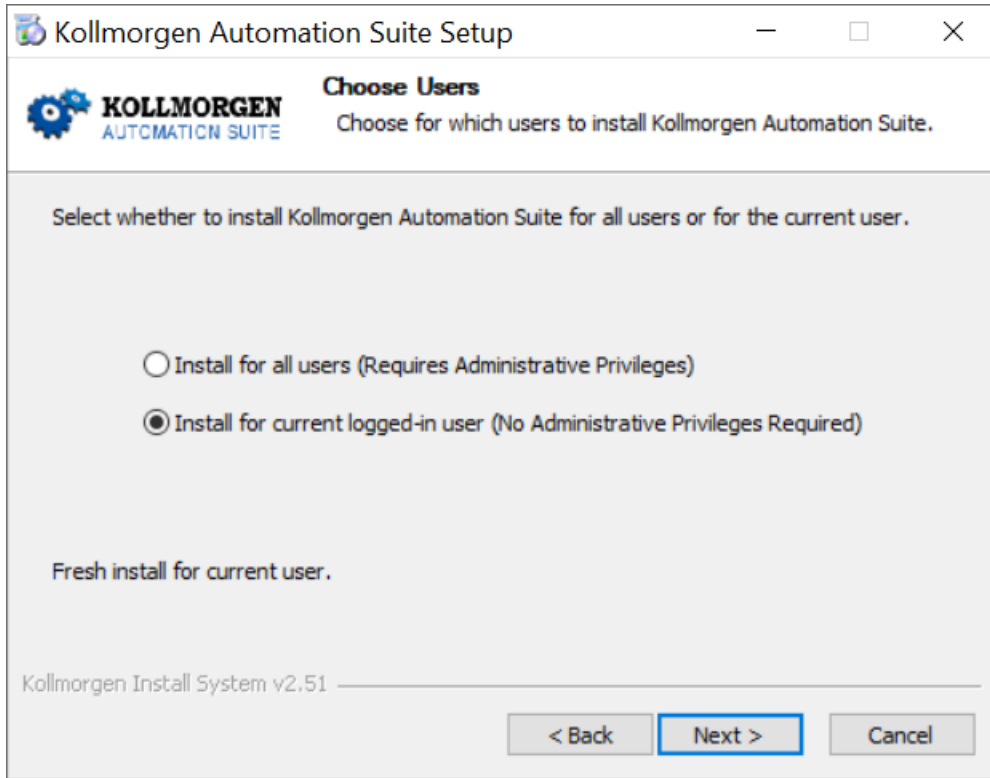


Figure 3-5: Choose Users window

8. Select either:
 - Install for all users (Requires Administrative Privileges)
 - Install for current logged-in user (No Administrative Privileges Required)

TIP

Kollmorgen recommends installing for **All Users** if this is a first time KAS-IDE installation on the computer.

NOTE

The KAS-IDE software requires these Windows components to be installed on your system:

- .NET Framework 4.8.1 Runtime
- WebView2 Runtime

If these components are not already installed, the installer prompts you to install them.

Administrative privileges may be required for the initial installation of these components.

9. Click **Next**.
The **Choose Install Location** window opens. (Figure 3-6)

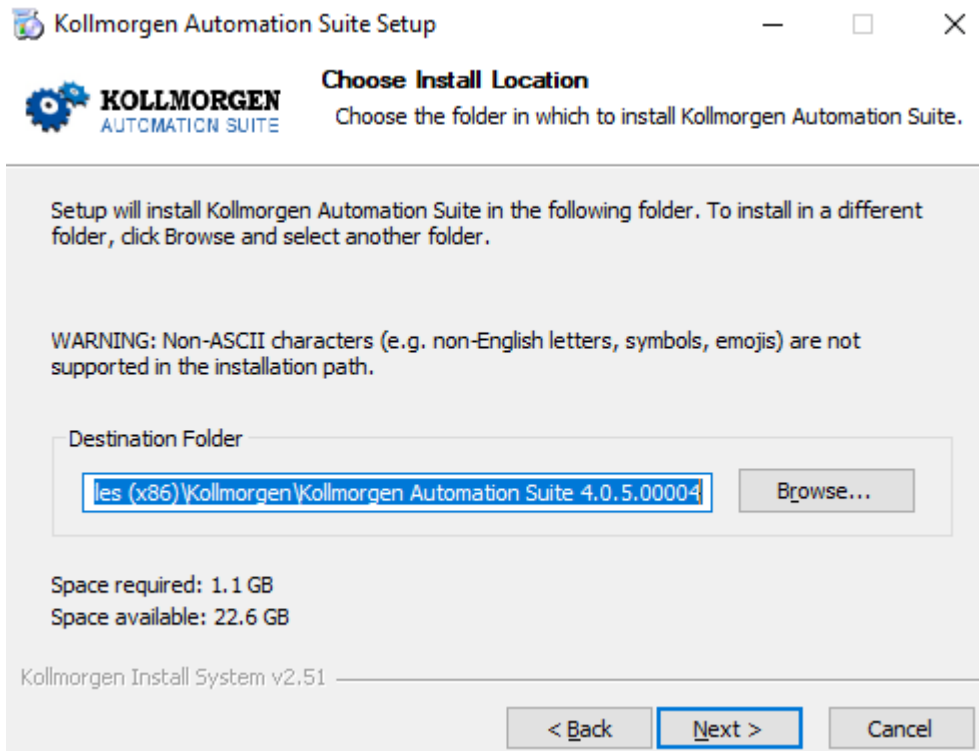


Figure 3-6: Choose Install Location window

10. Accept the recommended default location.
Option: Click **Browse** to specify a custom install directory.

⚠ WARNING

Kollmorgen does not support non-ASCII characters in the install location path.
If these characters exist in the path, you must specify a different installation directory.

📌 TIP

Kollmorgen recommends accepting the default destination folder:

- For the All Users option, the location is here:
 - C:\Program Files\Kollmorgen\Kollmorgen Automation Suite\Kollmorgen Automation Suite <<KAS-VERSION-ID>>.
- For the Current User option, the location is here:
 - C:\Users\{{user.name}}\AppData\Local\Kollmorgen\Kollmorgen Automation Suite <<KAS-VERSION-ID>>.

11. Click **Next**.
The **Choose Start Menu Folder** window opens. (Figure 3-7)

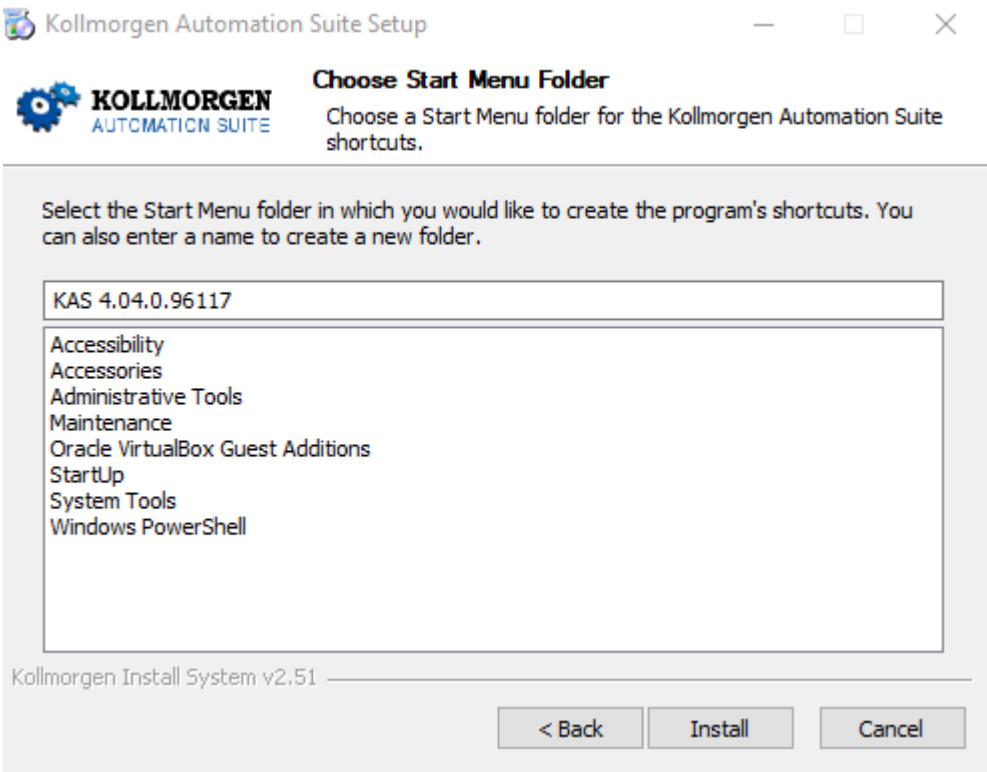


Figure 3-7: Choose Start Menu Folder window

- 12. Accept the recommended default folder name.
Option: Edit the text to specify a custom folder name.
- 13. Click **Install**.
KAS-IDE is installed in the designated install location.
 - a. If WebView2 is **not** installed, the Figure 3-8 message appears.

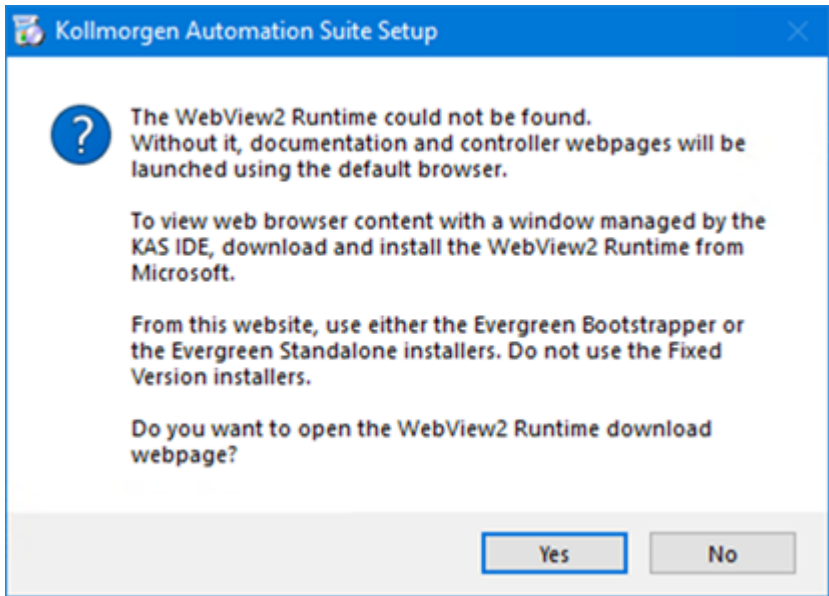


Figure 3-8: WebView2 Confirmation message

- b. Continue with "WebView2 Installation" (→ p. 15).

When the installation is complete, the **Completing KAS Setup** window opens. (Figure 3-9)

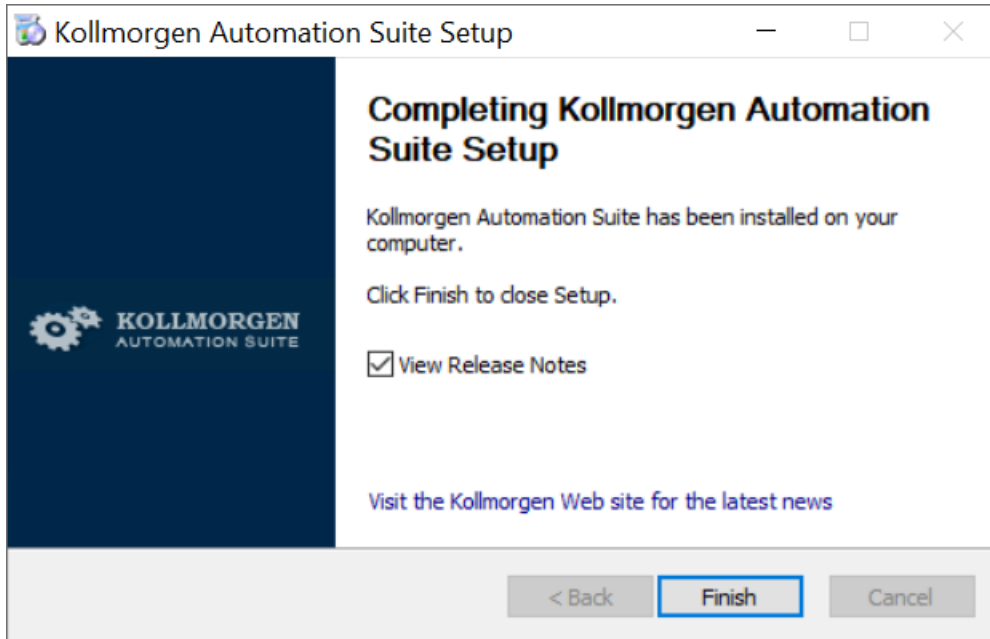


Figure 3-9: Completing KAS Setup window

14. Click **Finish** to close the wizard and open the Release Notes.

3.4.1 WebView2 Installation

❗IMPORTANT

- The KAS software uses Microsoft WebView2 Runtime software to display the documentation and web server pages from the KAS-IDE.

Notes

- If Microsoft WebView2 is **NOT** installed, the KAS-IDE installer prompts the user to download and install it from the Microsoft website here: [Microsoft Edge WebView2 Runtime software](#).
- Use either the Evergreen Bootstrapper or the Evergreen Standalone installers.
 - **Do not use the Fixed version installers!**
- The user must follow the provided link to install WebView2 to view the documentation and access the web server from the KAS-IDE.

Procedure

1. Click **Yes**.
The Download area of the Microsoft Edge WebView2 website opens.
 - Use either the Evergreen Bootstrapper or the Evergreen Standalone installers.
 - **Do not use the Fixed version installers!**
2. Download the applicable Evergreen installer.
3. Click the Accept and Download link to the license terms and download the software.
4. Locate and install the MicrosoftEdgeWebview2Setup.exe file.
Wait until the installation process is complete.

3.4.2 User Data

- User-generated data (e.g., log files, project sources, field bus configurations, function blocks, etc.) are stored in the Windows User directory and are maintained between installations.
- This applies to files on PCMM2G and Simulator files.

3.5 Additional Literature

Document Title	Description
Release Notes	The KAS Release Notes contain a summary of: • New features, fixed and known limitations, workarounds • Information on all hardware and software components that have been updated, changed, or added in the release. • See KAS Release Notes EN.
Getting Started	Contains these main steps to get the KAS system up and running. • Hardware (HW) Installation (Connection and Wiring): Wiring and hardware details, connectors, system diagrams. • HW Configuration: Basic configuration and settings needed to start the HW components (e.g., HMI, Industrial PC, Fieldbus, I/O). • Software (SW) Installation: KAS software setup. • See KAS IDE Getting Started EN.
30 Minutes to Motion	Contains the main topics to get started quickly with KAS-IDE. The objective is to familiarize you with the basic principles and the way the program works by creating a simple motion application project. See KAS IDE 30 Minutes to Motion EN about: • Key Features in KAS. • Explore the Workspace • See Describing the KAS Graphical User Interface. • Build a Motion Project • Start Projects - Create a project from scratch or modify an existing project. See Create a Project. • Add Components - Add necessary elements to build the project and control the motion part of the system. This includes: Create Variables, Adding Motion, and Programs: Structure and Syntax. • Build Output - Select a device and generate the application to deliver to users. See Run the Project. • Run Output - Make the output accessible to end-users.
KAS-IDE User Manual	Contains content to help with KAS-IDE except the topics included in the Reference Manuals. See KAS-IDE User Manual EN.
KAS-IDE PLC Library Reference Manual	Contains Technical References on PLC Programming Languages and Library. See KAS-IDE PLC Library Reference Manual EN.
KAS-IDE Motion Library Reference Manual	Contains Technical References on Motion Library for Pipe Network and PLCopen. See KAS-IDE Motion Library Reference Manual EN.

4 Installing KAS Runtime

The controller has all the necessary software installed (including KAS Runtime).

NOTE

KAS Runtime is only supported with Kollmorgen controllers.

4.1 Update the Runtime on PCMM2G

The KAS Runtime is contained in the PCMM2G firmware and comes pre-installed.

This procedure is for updating the firmware and runtime using the KAS web server.

ⓘ IMPORTANT

The firmware files for "Update the Runtime on PCMM2G" (→ p. 17) are different than those for "PCMM2G File Type: .ZIP" (→ p. 18).

4.1.1 PCMM2G File Type: .ZIP

- .ZIP File Formats
 - "Operating System (OS) + KAS Runtime (RT)" (→ p. 18)
 - "OS Only" (→ p. 18)
 - "KAS Runtime (RT) Only" (→ p. 18)
- "Model Code" (→ p. 18)

4.1.1.0.1 Operating System (OS) + KAS Runtime (RT)

- These files contain both the operating system and the KAS runtime.

Firmware File	File Name Format	Example File Name
Operating System (OS) + KAS Runtime (RT)	KAS-PCMM2G-{Processor/RAM Code}-{Storage-Code}-{OS-Version}-{RT-Version}.zip	KAS-PCMM2G-Cx-08-OS-1.0.0.00288-RT-4.01.0.91998.zip

4.1.1.0.2 OS Only

- Operating system security update.
- These are provided as security patches.
- The KAS Runtime is not affected, but must not be less than a specific version.

Firmware File	File Name Format	Example File Name
OS Only	KAS-PCMM2G-{Processor/RAM Code}-{Storage Code}-{OS-Version}.zip	KAS-PCMM2G-Cx-08-OS-1.0.0.00281.zip

4.1.1.0.3 KAS Runtime (RT) Only

- Unofficial runtime patch file.
 - These files are very small.
 - They may be sent to individual users when troubleshooting specific issues.

Firmware File	File Name Format	Example File Name
KAS Runtime (RT) Only	KAS-PCMM2G-{Processor/RAM Code}-{Storage Code}-{RT-Version}.zip	KAS-PCMM2G-Cx-08-RT-4.01.0.91978.zip

4.1.1.1 Model Code

Processor / RAM / Storage Code	CPU Speed	Core	RAM	Storage
Cx-08	1.5GHz	Quad	2 / 4 / 8GB	8GB

Procedure

1. Download the latest drive firmware and/or runtime firmware from [Kollmorgen.com](https://kollmorgen.com).
2. Open the controller's web server in your web browser by entering its IP address.
3. Select the **Settings** tabbed-page.
4. In the **Firmware** pane, click the **Choose File** button to select the new firmware image file for the KAS Runtime.

The recommended file is shown in the **Firmware Information** section.

Examples:

PCMM2G

Firmware Information	
OS version	1.0.0.00281
Runtime version	4.01.0.91992
Recommended file name	KAS-PCMM2G-Cx-08-OS-{OS version}-RT-{Runtime version}.zip

5. Click **Upgrade** to start the procedure.

TIP

- If the **Upgrade** button is disabled, log into the webserver.
- Click **Login** at the top of the web page and enter the password.

A message and a throbber are shown across the web page, indicating that maintenance is in progress. The 7-segment display on the controller animates with chasing lights.

Successful Upgrade	• The controller automatically reboots with new firmware. • Press <CTRL+F5> in the web browser to force a page refresh so the Firmware Version updates to the new version number.
Incompatible Firmware	Example: PCMM2G Runtime Error Message Minimum runtime version requirement not met.

6. After the download is complete, click **Reboot**.

A message and a throbber are shown over the web server while the reboot is in progress.

The login session is no longer valid when the reboot is complete.

The webserver displays a message to indicate the user has been logged out.

NOTE

This step is not necessary if the controller automatically reboots during the upgrade (previous step).

7. Press **<CTRL+F5>** to force the web browser to refresh the page.

ⓘ IMPORTANT

Do **not** try to refresh the web page until firmware upgrade is completed.

5 Install Hardware (HW)

Before a motion application can be up and running, all hardware components need to be connected, wired, and configured.

The **Getting Started** guide contains procedures for installing and configuring hardware components (e.g., HMI, controllers, I/O Terminals, EtherCAT Motion Bus, AKD2G Drive, and AKM2G Motor).

NOTE


For extensive information about installing the different hardware components, see:



- www.Kollmorgen.com
- KAS-IDE online help (after KAS has been installed)

This table has links to installation procedures for hardware components.

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Controller	PCMM2G		Programmable Drive Multi-axis Master: Controllers	• Install the PCMM2G controller. • See "Install Controllers" (→ p. 26).	• Add the Controller • Configure the Controller	Controllers

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Drives	AKD AKD-C AKD-N AKD2G S300 S700		• Drives	• Install a AKD or AKD2G Drive. • See either the: • AKD Installation Manual • AKD Quick Start • Available from: AKD Downloads.	• Add and Configure a Servo Drive • AKD Drive Configuration • "Update Kollmorgen Servo Drives Firmware" (→ p. 31)	Drives
Fieldbus	EtherCAT		EtherCAT	• Set up EtherCAT Motion Bus Communication. • See AKD®EtherCAT Communication.	Configure EtherCAT Motion Bus	Motion Bus and Fieldbuses Cables
HMI	Human-Machine Interface			• Install the graphic operator interface. • See "HMI - Graphic Operator Interface" (→ p. 26).	• Use the Kollmorgen Visualization Builder (KVB) • Add an HMI Device	HMI

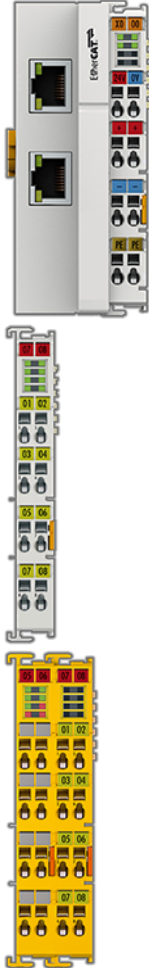Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
I/O Terminal			EtherCAT	- Install the remote Input/Output Terminal. - See "Remote Input/Output - I/O Terminal" (→ p. 27).	- Add and Configure I/O Slices - Map Input and Output to Variables	Remote Input/Output Terminals

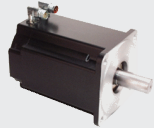Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Mechanical						Linear Actuators Gearheads
Motion Engines		 	Motion Concept: • Pipe Network Concept • PLCopen		• Design Pipe Network • Pipe Network Editor • Create Cam Profile • Cam Profile Editor • Soft Oscilloscope	
Motors	AKM AKM2G		Kollmorgen Servomotor	• Install the AKM or AKM2G Motor. • Mechanical and Electrical installation. • Available from: • AKM Downloads • AKM2G Downloads		• AKM • AKM2G • Cartridge DDR • Direct Drive Linear • Housed DDR • KBM • TBM
PLC			IEC 61131-3		• Free Form Ladder Diagram (FFLD) Editor • Function Block Diagram (FBD) Editor • Sequential Function Chart (SFC) Editor • Soft Oscilloscope (Softscope) • Structured Text (ST) / Instruction List (IL) Editor • Variables tab for Dictionary	• FBD Language • FFLD Language • IL Language • SFC Language • ST Language

Domain	Product	Product Example Image	Concept (Technology)	Installation	Tasks (Tools)	Reference
Safety			Safety over EtherCAT	"SafePLC2 Projects" (→ p. 30)	1. "SafePLC2 Projects" (→ p. 30) 2. Set Up a Variable to Monitor Safety Data 3. AKD2G Safety Parametrization Using FSoE with SCU-1-EC and PxMM / PCMM2G 4. Set Up FSoE Master and an AKD2G with SafeMotion Monitor	• BBH FSoE Master • Related Documents • AKT2G-SDI-004-000 • AKT2G-SDO-004-000

5.1 HMI - Graphic Operator Interface

NOTE

Download the applicable documentation from here: [KAS HMI Panel Downloads](#).

HMI Part Number	Description	KVB
AKI-CDC-MOD-21T-000	Graphical Display 21.5" TFT LCD, Touchscreen	v2.0
AKI-CDC-MOD-15T-000	Graphical Display 15.4" TFT LCD, Touchscreen	v2.0
AKI-CDC-MOD-12T-000	Graphical Display 12.1" TFT LCD, Touchscreen	v2.0
AKI2G-CDA-MOD-07T-000	Graphical Display 5" TFT LCD, Touchscreen	v2.20
AKI2G-CDA-MOD-05T-000	Graphical Display 7" TFT LCD, Touchscreen	v2.20
AKI2G-CDB-MOD-12T-000	Graphical Display 12" TFT LCD, Touchscreen	v2.20
AKI2G-CDB-MOD-07T-000	Graphical Display 7" TFT LCD, Touchscreen	v2.20

5.2 Install Controllers

The controller installation information is found here:

Document Title	Description
PCMM2G Installation Manual	- Covers the most important points of the installation and setup of the controller. - See PCMM2G Installation Manual

5.3 EtherCAT Motion Bus

One EtherCAT master must be connected with all the slaves (drives and I/O terminals) of your system.

Details about the installation procedure for the EtherCAT Motion Bus are here:

- AKD2G: Website - [Installation and Setup](#)
 - Click **Apply** to set the Fieldbus filters on the website.
- AKD: Website - [Download - AKD EtherCAT Communications Manual](#)
 - Select the PDF from the list.

5.4 Remote Input/Output - I/O Terminal

This is a list of available I/O components.

See the AKT2G I/O Manual or the online help for detailed information on setting up I/O.

I/O Terminal Part Number	I/O Terminal Description
AKT2G-AC-FAN-001	Fan cartridge for EtherCAT and Bus Terminals.
AKT2G-AN-240-000	2-channel input terminal PT100 (RTD) for resistance sensors. 16-bit, 2-, 3-wire system.
AKT2G-AN-400-000	4-channel thermocouple input terminal. - Preset to type K, with wire breakage detection. 16-bit
AKT2G-AN-430-000	4-channel analog input. - Parameter capable -10/0 to 10V -20/0/+4 to +20mA 16-bit
AKT2G-AT-410-000	4-channel analog output terminal. 0 to 10V 1-wire system 12-bit
AKT2G-AT-425-000	4-channel analog output terminal. -10V to +10V 4 x 2-wire system 12-bit
AKT2G-BRC-000-000	Brake Chopper Terminal
AKT2G-DN-002-000	- Up/down counter 24 VDC 100 kHz 32-bit counter depth
AKT2G-DN-008-000	8-channel digital input terminal 24 VDC. - Filter 3.0ms 1-wire system
AKT2G-DNH-008-000	8-channel digital input terminal 24 VDC. - Filter 10µs 1-wire system
AKT2GJ-DT-008-000	8-channel digital output terminal 24 VDC 0.5 A 1-wire system
AKT2G-ECT-000-000	EtherCAT Coupler for E-bus terminals
AKT2G-EM-000-000	- Bus end cover for E-bus terminals - Cover for power and E-bus contacts, gray
AKT2G-ENC-180-000	1-channel incremental encoder interface 32-bit
AKT2G-ENC-190-000	- Incremental encoder interface with differential input 16-bit / 32-bit

I/O Terminal Part Number	I/O Terminal Description
AKT2G-PSF-024-000	• Power supply terminal with fuse • 24 VDC
AKT2G-SDI-004-000	• 4-channel digital input terminal 24 VDC. • Safety
AKT2G-SDO-004-000	• 4-channel digital input terminal 24 VDC. • Safety • 0.5 A
AKT2G-SM-L15-000	• Stepper motor terminal • 24 VDC • 1.5 A • Vector control
AKT2G-SM-L50-000	• Stepper motor terminal • 50 VDC • 5A • Vector control

5.5 Install AKD Drives

Drive Manuals	Description
AKD EtherCAT Manual	Describes the installation, setup, range of functions, and software protocol for the EtherCAT AKD product series.
AKD Installation Manual	• Installation manual for AKD and AKD PDMM drives. • Describes the AKD series of digital drives and includes mechanical, electrical, and software installation information needed to safely install AKD.
AKD, AKD2G, S700 (in NA) Accessories Manual	Describes the accessories for Kollmorgen digital drive systems and servo drive motors.
AKD2G EtherCAT Manual	Describes the installation, setup, range of functions, and software protocol for the AKD2G product series.
AKD2G Installation Manual	• Describes the AKD2G series of digital drives. • Includes mechanical, electrical, software, and functional safety options.
MKD Installation Manual	• Installation manual for MKD drive system modules: • MKD-C power supply. • MKD-N servo drives. • It includes mechanical, electrical and software installation information needed to safely install the MKD system modules.
S300 Reference Documentation	Kollmorgen website with access to all S300 manuals.
S700 Reference Documentation	Kollmorgen website with access to all S700 manuals.


5.6 Install AKM or AKM2G Motors

See either the [AKM Instructions Manual](#) or the [AKM2G Installation Manual](#).

5.7 SafePLC2 Projects

A node can be added to the Project tree connected to a [SafePLC2](#) project.

- This is used to synchronize a SafePLC2 project with a KAS project.
- The KAS-IDE automatically generates the PDOs for the connected devices and establishes the Black Channel with the EtherCAT Safety network.

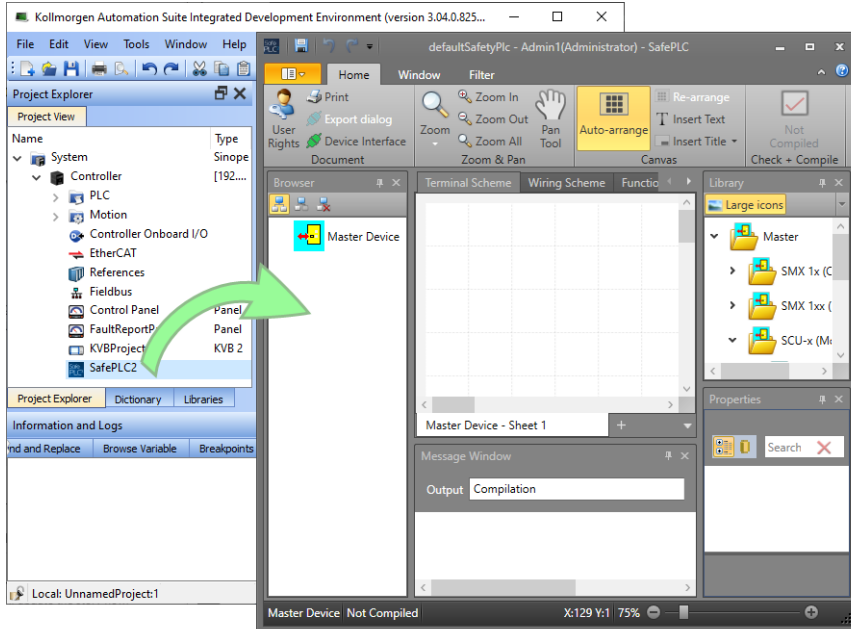

See the online help or the AKT2G I/O Manual for more information.

6 Kollmorgen Servo Drives Firmware

6.1 Verify Kollmorgen Servo Drives Firmware


This procedure is for the [Kollmorgen AKD Series Servo Drives](#) and [Kollmorgen Essentials™ Servo Drive](#).

Procedure

1. Create a new project.
2. Set the controller type and IP address.
3. In the Project Explorer, double-click the **EtherCAT** node to open the EtherCAT Devices summary window.
4. In the Devices tab, click the **Scan Devices** button.
5. Choose the **Create...** option to map the physical device to a new device.

NOTE

- If a Kollmorgen drive is showing the firmware version as **Unknown**, the drive has valid resident firmware (to boot from), but does not have valid operational firmware.
- Download and install the latest operational firmware and reboot the AKD / AKD2G.

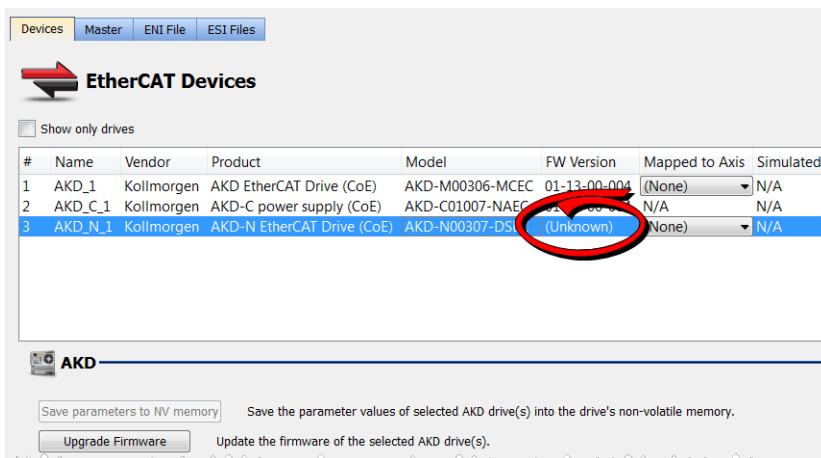

6. If the version is not correct, continue with this procedure:
7. Compile the project.
8. Connect to the controller.
9. Download the project to the controller.
10. If the version is not correct, download the new firmware from these product sites:
 - [AKD2G Servo Drive](#)
 - [AKD Series Servo Drives](#)
 - [AKD-N Decentralized Servo Drive](#)
 - [Kollmorgen Essentials Servo Drive](#)
11. Continue with "Update Kollmorgen Servo Drives Firmware" (→ p. 31).

6.2 Update Kollmorgen Servo Drives Firmware

This procedure is for the [Kollmorgen AKD Series Servo Drives](#) and [Kollmorgen Essentials™ Servo Drive](#).

Product	Firmware Download Link
AKD	AKD Servo Drive Firmware Download
AKD2G	AKD2G Servo Drive Firmware Download
Kollmorgen Essentials Drive (KED)	KED Servo Drive Firmware

ⓘ IMPORTANT

This procedure **cannot** be used when applications are running and when the drive is in Online Configuration Mode.


Procedure

1. Scan the devices to verify all devices are created.
2. Compile the project.
3. Connect to the controller.
4. Download the project to the controller.
5. Open the **EtherCAT Devices** tab.
6. Select the drives requiring the same firmware version to be updated.

NOTE

Multiple drives of the same type can be selected.
The firmware download is limited to 16 drives at a time.

- **AKD-C:** Devices with the product description **AKD-C String 2** do not support firmware download.

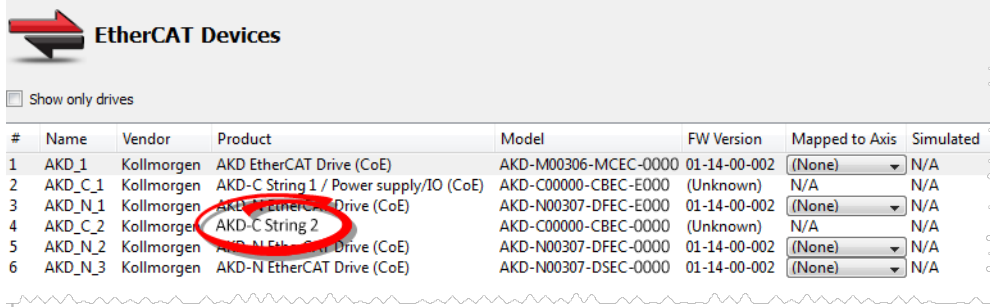

EtherCAT Devices

☐ Show only drives


#	Name	Vendor	Product	Model	FW Version	Mapped to Axis	Simulated
1	AKD_1	Kollmorgen	AKD EtherCAT Drive (CoE)	AKD-M00306-MCEC-0000	01-14-00-002	(None)	N/A
2	AKD_C_1	Kollmorgen	AKD-C String 1 / Power supply/IO (CoE)	AKD-C00000-CBEC-E000	(Unknown)	N/A	N/A
3	AKD_N_1	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DFEC-E000	01-14-00-002	(None)	N/A
4	AKD_C_2	Kollmorgen	AKD-C String 2	AKD-C00000-CBEC-0000	(Unknown)	N/A	N/A
5	AKD_N_2	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DFEC-0000	01-14-00-002	(None)	N/A
6	AKD_N_3	Kollmorgen	AKD-N EtherCAT Drive (CoE)	AKD-N00307-DSEC-0000	01-14-00-002	(None)	N/A

- **AKD-N:** The last four characters can be different.
However, the firmware file selected to download must support all the selected models.
The file AKD-N-xxEC-*****.i00 supports multiple AKD-N models.
- **AKD-P:** The last four letters of the model number must be the same for simultaneous firmware download.

NOTE

The firmware download is limited to 16 drives at a time.

7. Click the **Upgrade Firmware** button.

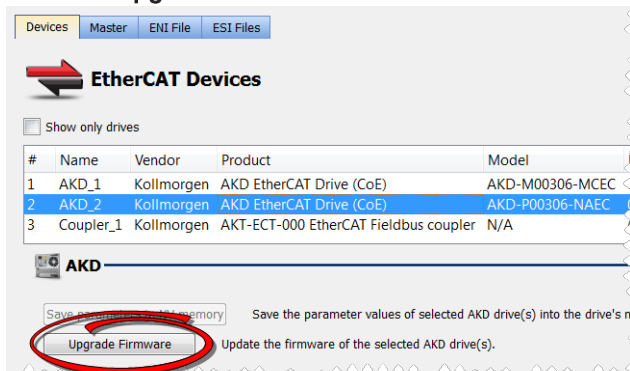

ⓘ IMPORTANT

Warning dialogs may appear at this point.
These warnings include important information about preventing damage to the drives.

8. Browse to the new firmware file.
See the Release Notes for the latest supported firmware.
9. Click **Open** to start the updating procedure.

ⓘ IMPORTANT

This procedure **cannot** be used when applications are running and when the drive is in Online Configuration Mode.

During the firmware download, the Firmware Update window displays a progress bar and these messages appear:

- Uploading firmware to the drive.
 - During the download process, the drive LED displays [dL].
 - Additional codes may appear during the download.
 - See these Display Codes for a code descriptions related to the firmware download:
 - AKD: Fault and Warning Messages
 - AKD2G: Faults and Warning Messages
 - Kollmorgen Essentials Drive: Faults and Warnings
- Resetting the drive.
- Firmware update is complete.

CAUTION

- While the firmware is downloading to your drive, **do not** remove the 24 VDC logic power.
- If you remove the 24 VDC logic power during a firmware download, a severe drive crash can occur.
- If a crash occurs, the drive will restart in a special mode and prompt you to reload the firmware.

IMPORTANT

- An AKD drive executing the resident firmware is detected as a different device than an AKD or AKD2G drive executing the operational firmware.
- Re-scan the network and compile it if a drive's executed firmware has changed since the last scan.
- KAS uses the File Access over EtherCAT (FoE) protocol.

TIP

Power cycling is recommended after completing the update for all drives.

7 Installing Kollmorgen Visualization Builder

Kollmorgen Visualization Builder (KVB) is used to design HMI running on AKI panels.
KVB is an optional feature that is only included in some licenses.

NOTE

Kollmorgen Visualization Builder contains these two installation packages:

- Kollmorgen Visualization Builder(KVB IDE) for development PC
- Visualizer RT (KVB RT) for AKI panel runtime

7.1 Download

Component	Version
Latest Version of Kollmorgen Visual Builder	v.2.40 [2.43.17.0]
Visualizer RT (KVB RT)	v.2.40 [2.43.17.0]

7.2 Installation Procedure

These programs automatically install during the KVB installation.

- Microsoft .NET Compact Framework 3.5
- Microsoft SQL Server Compact 3.5
- Microsoft Visual C++ 2013 - Redistributable Setup


Once Kollmorgen Visualization Builder has finished downloading, complete these installation steps:

1. Double-click the **Setup.exe** file to run the installation Wizard.

NOTE


If KVB was already installed and you want to update to a new version, then running **NeoSetup.msi** is enough.

2. Select the check box to accept the License agreement and click **Next** to start installing **Kollmorgen Visualization Builder**.
3. Select where you want to install **Kollmorgen Visualization Builder** and the application language, then click **Next**.

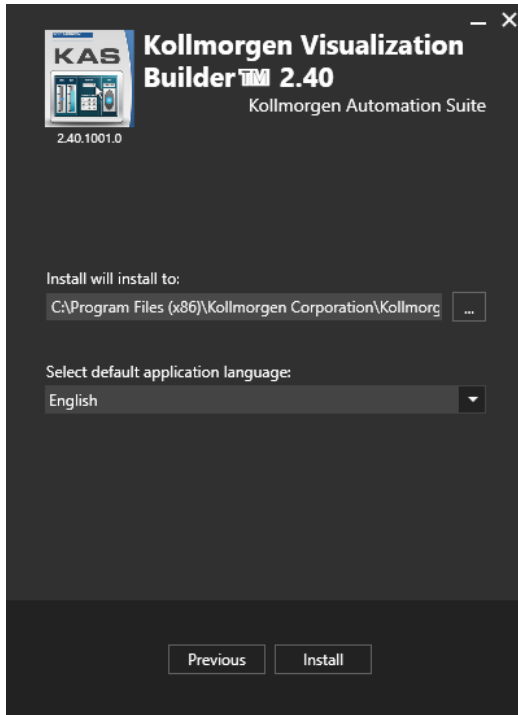

Kollmorgen strongly recommends accepting the default destination folder under `C:\Program Files (x86)\Kollmorgen\Kollmorgen Visualization Builder\`.

4. Click **Install** to start **Kollmorgen Visualization Builder** installation.

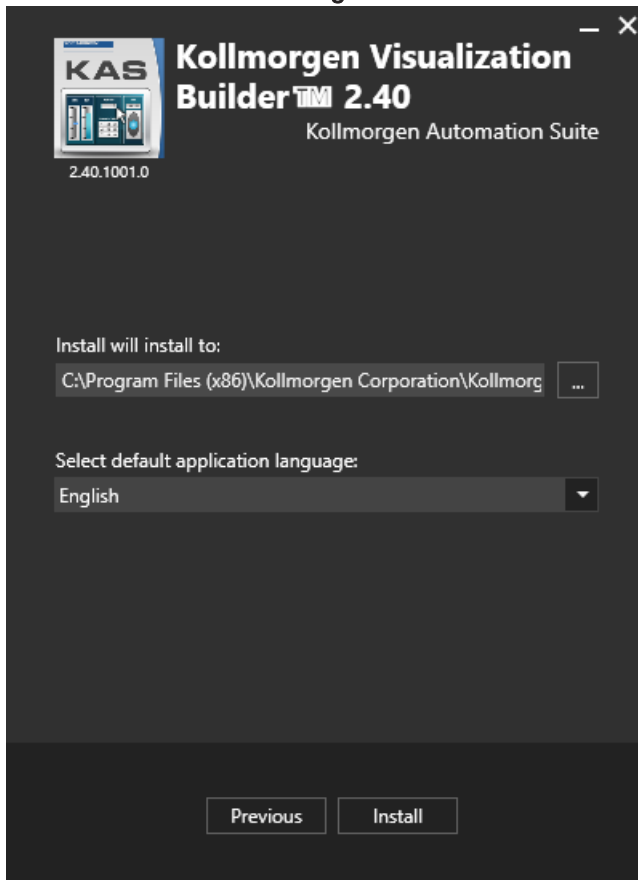

5. Click **Close** or to start using KVB right away, click **Launch**.

8 Finalize Installation

Optional: To complete the KAS installation, either:

- Test the system.
- Create a backup image.

8.1 Test the Installation

To conclude the installation, the whole system has to be tested.

A test could be done with the standard Two-Axis Template that corresponds to a simple application.

See the KAS **30 Minutes to Motion** User Manual.

9 Troubleshooting

Faults occur for a variety of reasons, depending on the conditions in your installation.

The causes of faults in multi-axis systems can be especially complex.

TIP

Find more information here:

- The **Troubleshooting** section here: [Troubleshooting](#).
- These sections:
 - [Controller Error and Alarm Descriptions](#)
 - [AKD2G Faults and Warnings](#)
 - [AKD Faults and Warnings](#)
- Search the Kollmorgen Support Network (KSN) at [Kollmorgen Support Network](#) for answers or submit a question.

10 Kollmorgen Documentation Legal Information

The information in these pages is only for the technical documentation (e.g., Safety Notes, User Manuals, etc.) legal information.

This information does not represent Kollmorgen company-wide legal information.

10.1 KAS - Copyrights, Trademarks, Patents, Licenses, and Disclaimers	39
10.2 Kollmorgen Trademarks	39
10.3 Kollmorgen Patents	39
10.4 PCMM2G	40
10.5 Other Trademarks	41
10.6 3rd-party Licenses	42
10.7 Disclaimers	44

10.1 KAS - Copyrights, Trademarks, Patents, Licenses, and Disclaimers

Copyright 2026 Regal Rexnord Corporation, All Rights Reserved.

Information in this document is subject to change without notice. The software package described in this document is furnished under a license agreement. The software package may be used or copied only in accordance with the terms of the license agreement.

This document is the intellectual property of Kollmorgen and contains proprietary and confidential information. The reproduction, modification, translation or disclosure to third parties of this document (in whole or in part) is strictly prohibited without the prior written permission of Kollmorgen.

Copyright © 2009-2026 Regal Rexnord Corporation, All Rights Reserved.

10.2 Kollmorgen Trademarks

Regal Rexnord and [Kollmorgen](#) are trademarks of [Regal Rexnord Corporation](#) or one of its affiliated companies.

These trademarks or trade names are owned by or under the control of Regal Rexnord Corporation or any of its affiliates:

- | | | |
|--------------------------------|------------------------------------|----------------------|
| • Kollmorgen Essentials System | • BLM | • P8000 |
| • Kollmorgen Essentials Cable | • Cartridge DDR | • PCMM |
| • Kollmorgen Essentials Drive | • DDL | • PCMM2G |
| • Kollmorgen Essentials Motor | • DDR | • PowerMax |
| • AKD | • Goldline | • Servostar |
| • AKD2G | • Kollmorgen Automation Suite | • SafeMotion Monitor |
| • AKD PDMM | • KAS | • SMM |
| • AKM | • Kollmorgen Visualization Builder | • TBM |
| • AKMA | • KVB | • TBM2G |
| • AKME | • MKD | • WorkBench |
| • AKMH | • Motioneering | |

10.3 Kollmorgen Patents

Any of these Kollmorgen patents may be used and/or identified in Kollmorgen products, firmware, and/or software.

- US Patent 2017/0211640 (method and apparatus for power saving, fail-safe control of an electromechanical brake), patent pending.
- US Patent 8,154,228 (Dynamic Braking For Electric Motors).
- US Patent 8,214,063 (Auto-tune of a Control System Based on Frequency Response).
- US Patent 8,566,415 (Safe Torque Off over network wiring).
- US Patent 10,374,468 (System and method for improved DC power line communication).
- US Patent 10,520,050 (Method and apparatus for power-saving, fail-safe control of an electromechanical brake).
- US Patent 10,840,696 (Method and apparatus for limiting the output voltages of switch mode power supplies).
- US Patent 16,247,478 (method and apparatus for limiting the output voltages of switching mode power supplies), patent pending.

Patents referring to fieldbus functions are listed in the matching fieldbus manual.

10.4 PCMM2G

The PCMM2G's Operating System (OS) and boot loader ([U-Boot](#)) are based on free and open-source software.

- The individual copyright notices, license texts, and disclaimers of warranty for the software components are located in the controller, under the directory: /usr/share/common-licenses/.
 - For more information about accessing the PCMM2G's files, see [SSH Login to a Controller](#).
- The OS, bootloader, and their software component's source codes including modifications, copyright notices, license texts, disclaimers of warranty, and the compilation scripts to build the OS image are available at the Kollmorgen webpage [PCMM2G Operating System \(OS\) License Sources](#).
- The OS image and its corresponding sources file is identified by an "OS-Sources" designator, followed by its version number: OS-Sources-x.xx.x.xxxxx.
- The compilation scripts and sources file are available at the Kollmorgen webpage [PCMM2G Operating System \(OS\) Build Sources](#).
- See [PCMM2G - File Naming Conventions](#) in the KAS online help.

10.5 Other Trademarks

Any of these other trademarks and/or trade names may be used and/or identified in Kollmorgen products, firmware, and/or software.

These are believed to be the trademarks and/or trade names of their respective owners and are not owned or controlled by Regal Rexnord Corporation:

- BiSS: iC-Haus GmbH.
- CANopen: CAN in Automation (CiA).
- DRIVE-CLiQ: Siemens Aktiengesellschaft.
- EnDat: Dr. Johannes Heidenhain GmbH.
- EtherCAT und Safety over EtherCAT: Beckhoff Automation GmbH.
- EtherCAT: Beckhoff Automation GmbH.
- EtherNet/IP Kommunikationsstack: Rockwell Automation.
- EtherNet/IP: ODVA, Inc.
- [Ghostscript](#): Artifex Software, Inc. (unter der [AGPL](#) Lizenz verbreitet).
- HIPERFACE DSL: SICK AG.
- HIPERFACE: SICK AG.
- HUMMEL: HUMMEL AG.
- Hysol: Hysol Huawei Electronics Co.,LTD.
- Instapak: Sealed Air Corporation.
- INTERCONTEC: INTERCONTEC Pfeiffer Industrie-Steckverbindungen GmbH.
- LOCTITE 640: Henkel AG & CO. KGAA.
- LOCTITE: Henkel AG & CO. KGAA.
- Modbus: Schneider Electric USA, Inc.
- MOLYKOTE: DDP Specialty Electronic Materials US 9, LLC.
- Mylar: DUPONT Teijin Films U.S.
- P3-topax: Henkel KGaA.
- PHOENIX CONTACT: Phoenix Contact GmbH & Co. KG.
- [PLCopen](#): An association registered with the Chamber of Commerce in The Netherlands (Reg. 40240111).
- PROFINET: PROFIBUS Nutzerorganisation e.V.
- Scotch-Weld 2214: 3M Company.
- sercos: Sercos International E.V.
- SIMATIC: Siemens Aktiengesellschaft.
- SpeedTec: Liqui-Moly GmbH or TE Connectivity Industrial GmbH.
If SpeedTec is used as a lubricant, it belongs to Liqui-Moly GmbH.
If SpeedTec is used as a connector, it belongs to TE Connectivity Industrial GmbH
- Teflon: The Chemours Company FC, LLC.
- Viton: The Chemours Company FC, LLC.
- Windows: Microsoft Corporation.

10.6 3rd-party Licenses

Any of these 3rd-party licenses may be used and/or identified in Kollmorgen products, firmware, and/or software.

Library	Product	License
7-zip	https://www.7-zip.org/	7-zip - License
Adafruit core graphics library	https://github.com/adafruit	https://github.com/adafruit/Adafruit-GFX-Library/blob/master/license.txt
Adafruit display library	https://github.com/adafruit	https://github.com/adafruit/Adafruit-ST7735-Library/blob/master/README.txt
Arduino Map function	http://creativecommons.org	http://creativecommons.org/licenses/by-sa/3.0/
C++ Mathematical Expression Library	http://www.partow.net/programming/exptrk/index.html	MIT License
civetweb: Embedded C/C++ web server	https://github.com/civetweb/civetweb	MIT License
CoreSight Library	http://www.apache.org	http://www.apache.org/licenses/LICENSE-2.0
curl software library		curl license
DockPanelSuite	http://sourceforge.net/projects/dockpanelsuite/	https://opensource.org/licenses/MIT
EtherNet/IP Communication Stack		Software Distribution License
FatFs	https://github.com/abbrev/fatfs	https://github.com/stm32duino/FatFs/blob/master/Licence.md
FileHelpers	http://sourceforge.net/projects/filehelpers	https://opensource.org/licenses/MIT
Font Awesome	https://fontawesome.com	https://fontawesome.com/license/free
Ghostscript	https://ghostscript.com/index.html	AGPL
Google Fonts Roboto Condensed	http://www.apache.org	http://www.apache.org/licenses/
GSL - Guideline Support Library	https://github.com/Microsoft/GSL	https://github.com/Microsoft/GSL/blob/master/LICENSE

Library	Product	License
libsodium	https://libsodium.org	https://github.com/jedisct1/libsodium/blob/master/LICENSE
jsoncpp software		jsoncpp License
log4net	http://logging.apache.org/log4net/	http://www.apache.org/licenses/LICENSE-2.0
LVGL	https://github.com/lvgl/lvgl	https://github.com/lvgl/lvgl/blob/master/LICENSE.txt
LwIP	https://savannah.nongnu.org	https://savannah.nongnu.org/projects/lwip/
mbd Microcontroller Library	http://www.apache.org	http://www.apache.org/licenses/LICENSE-2.0
mbd TLS	http://www.apache.org	http://www.apache.org/licenses/LICENSE-2.0
Microsoft Edge WebView2	https://developer.microsoft.com/en-us/microsoft-edge/webview2	Microsoft Edge WebView2 Runtime LICENSE
MigraDoc	http://www.pdfsharp.net/migradocoverview.ashx	http://www.pdfsharp.net/MigraDoc_License.ashx
Mongoose Library	https://github.com/cesanta/mongoose/tree/	Mongoose license
MVVM Light Toolkit	https://github.com/lbugnion/mvtmlight	https://galasoft.ch/license_MIT.txt
OpENer EtherNet/IP	https://github.com/EIPStackGroup/OpENer	http://eipstackgroup.github.io/OpENer/de/d7e/license.html
PdfSharp	http://www.pdfsharp.net/migradocoverview.ashx	http://www.pdfsharp.net/PDFsharp_License.ashx
Qt Framework	https://www.qt.io/product/framework	terms of the LGPL3
Qwt project	http://qwt.sourceforge.net/	Qwt
SharpZipLib	https://github.com/icsharpcode/SharpZipLib	https://github.com/icsharpcode/SharpZipLib/blob/master/LICENSE.txt
SNMP		http://www.net-snmp.org/about/license.html
SQLite	https://system.data.sqlite.org	https://system.data.sqlite.org/index.html/doc/trunk/www/copyright.wiki
U-Boot	http://www.denx.de/wiki/U-Boot	GNU General Public License 2.0
Zed Graph	http://sourceforge.net/projects/zedgraph/	https://opensource.org/licenses/LGPL-2.0
Zlib software library	https://www.zlib.net/	Zlib License

10.7 Disclaimers

Technical changes which improve the performance of the device may be made without prior notice!

This document is the intellectual property of Kollmorgen. All rights reserved. No part of this work may be reproduced in any form (by photocopying, microfilm or any other method) or stored, processed, copied or distributed by electronic means without the written permission of Kollmorgen.

The information in this document is believed to be accurate and reliable at the time of its release. Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

All timing diagrams, whether produced by Kollmorgen or included by courtesy of the PLCopen organization, are provided with accuracy on a best-effort basis with no warranty, explicit or implied, by Kollmorgen. The user releases Kollmorgen from any liability arising out of the use of these timing diagrams.

Technische Änderungen, die der Verbesserung der Geräte dienen, vorbehalten!

Dieses Dokument ist geistiges Eigentum von Kollmorgen. Alle Rechte vorbehalten. Kein Teil dieses Werkes darf in irgendeiner Form (Fotokopie, Mikrofilm oder in einem anderen Verfahren) ohne schriftliche Genehmigung von Kollmorgen reproduziert oder unter Verwendung elektronischer Systeme verarbeitet, vervielfältigt oder verbreitet werden.

Die Genauigkeit und Verlässlichkeit der Informationen in diesem Dokument entspricht dem Kenntnisstand zum Zeitpunkt der Veröffentlichung. Kollmorgen übernimmt keine Verantwortung für Schäden oder Verluste, die sich aus der Verwendung dieser Hilfe ergeben, und lehnt ausdrücklich jegliche Haftung sowie Schadensersatzansprüche für Datenverlust, entgangene Nutzung und Sachschäden jeglicher Art ab, inklusive direkter, zufälliger oder Folgeschäden im Zusammenhang mit der Funktion oder Form des hierin oder in einem der mit diesem Dokument gelieferten Software enthaltenen Materials.

Es posible que se implementen sin aviso previo cambios técnicos que mejoran el rendimiento del dispositivo.

La propiedad intelectual de este documento pertenece a Kollmorgen. Todos los derechos reservados. Se prohíbe la reproducción de este documento por ningún medio (fotocopia, microfilm u otro método), así como su almacenamiento, procesamiento, copia o distribución por medios electrónicos, sin el consentimiento por escrito de Kollmorgen.

La información incluida en este documento se considera correcta y confiable en el momento de su publicación. Kollmorgen no asume ninguna responsabilidad por ningún daño o pérdida causados por el uso de este documento de ayuda y rechaza explícitamente toda responsabilidad o daño por pérdida de datos, pérdida de uso y daños en la propiedad de cualquier tipo, ya sea directos, incidentales o consecuentes, en relación con el rendimiento o la forma de los materiales aquí publicados, o con los programas de software que acompañan a este documento, o que surjan de estos.

Les modifications techniques qui améliorent les performances du dispositif peuvent être apportées sans avis préalable !

Ce document est la propriété intellectuelle de Kollmorgen. Tous droits réservés. Aucune partie de ce document ne peut être reproduite sous quelque forme que ce soit (photocopie, microfilm ou autre méthode) ni stockée, traitée, copiée ou distribuée de manière électronique sans l'autorisation écrite de Kollmorgen.

Les informations contenues dans ce document sont considérées exactes et fiables au moment de leur publication. Kollmorgen n'assume aucune responsabilité pour tout dommage ou perte résultant de l'utilisation de cette aide, et rejette expressément toute responsabilité ou tous dommages pour la perte de données, la perte d'utilisation et les dommages matériels de toute nature, directs, accessoires ou indirects, en ce qui concerne ou découlant des performances ou de la forme des matériaux présentés ici ou dans tout programme logiciel accompagnant ce document.

Modifiche tecniche volte a migliorare le prestazioni del dispositivo possono essere apportate senza preavviso.

Il presente documento è proprietà intellettuale di Kollmorgen. Tutti i diritti riservati. È vietata la riproduzione di qualsiasi parte di quest'opera in qualsiasi forma (fotocopia, microfilm o qualunque altro metodo) così come la memorizzazione, il trattamento, la copia o la distribuzione tramite mezzi elettronici senza l'autorizzazione scritta di Kollmorgen.

Le informazioni contenute nel presente documento sono ritenute accurate e affidabili al momento della pubblicazione. Kollmorgen non si assume alcuna responsabilità per eventuali danni o perdite risultanti dall'uso di questa guida e declina espressamente qualsiasi responsabilità o danni dovuti a perdita di dati, mancato utilizzo e danni materiali di qualunque tipo, diretti, accidentali o consequenziali, in relazione a o derivanti dal funzionamento o dalla forma dei materiali presentati qui o in eventuali programmi software che accompagnano il presente documento.

デバイスの性能の向上のため、予告なく技術的な変更が実装される場合があります。

本書の知的財産権はKollmorgenに帰属しており、無断複写・転載は禁じられています。本書のいずれの部分も、Kollmorgenの書面による許可なしに、いかなる複製(写真、マイクロフィルムまたはその他の手段)、保管、改変、複写または電子的配布を行うことはできません。

本書に記載されている情報は、発行時において正確かつ信頼できるものですが、Kollmorgenはこのヘルプの使用により生じるいかなる損害や損失についても責任を負いません。また、本書の履行、資料形式または付随するあらゆるソフトウェアプログラムに関連して、あるいはこれらが原因で発生する、直接的、偶発的または結果的な、いかなるデータの損失、利用機会の喪失および財産の損害に対しても、一切の責任や損害賠償を明示的に否認します。

기기의 성능을 향상시키는 기술적 변경 사항은 사전 공지 없이 이루어질 수 있습니다!

본 문서의 지적 재산권은 Kollmorgen에 있습니다. All rights reserved. 본 저작물의 어떤 부분도 Kollmorgen의 서면 허가 없이 어떠한 형태(사진 복사, 마이크로필름 또는 기타 방법)로든 복제하거나 전자 수단으로 저장, 처리, 복사 또는 배포할 수 없습니다.

본 문서의 정보는 공개 시점을 기준으로 정확하고 신뢰할 수 있는 것으로 간주됩니다. Kollmorgen은 본 도움말의 사용으로 인한 어떠한 피해나 손실에 대해 책임을 지지 않으며, 본 문서 또는 본 문서와 함께 제공되는 소프트웨어 프로그램에 제시된 자료의 성능 또는 형태와 관련하여 또는 그로 인해 직접적, 우발적 또는 결과적으로 발생한 모든 유형의 데이터 손실, 사용 손실, 재산상의 피해에 대한 책임이나 손해를 명시적으로 부인합니다.

Alterações técnicas que melhoram o desempenho do dispositivo podem ser feitas sem aviso prévio!

Este documento é propriedade intelectual da Kollmorgen. Todos os direitos reservados. Nenhuma parte deste trabalho pode ser reproduzida sob qualquer forma (por fotocópia, microfilme ou qualquer outro método) ou armazenada, processada, copiada ou distribuída por meios eletrônicos sem a permissão escrita da Kollmorgen.

Acredita-se que as informações contidas neste documento sejam precisas e confiáveis no momento de sua divulgação. A Kollmorgen não assume nenhuma responsabilidade por quaisquer danos ou perdas resultantes do uso desta ajuda, e se isenta expressamente de qualquer responsabilidade ou danos por perda de dados, perda de uso e danos materiais de qualquer espécie, direta, incidental ou subsequente em relação a ou resultante do desempenho ou da forma dos materiais apresentados aqui ou em quaisquer programas de software que acompanhem este documento.

我们可能会进行技术更改以提高设备性能，恕不另行通知！

本文档知识产权归 Kollmorgen 所有，Kollmorgen 保留所有权利。未经 Kollmorgen 书面许可，不得以任何形式（影印、缩微胶片或其他任何方式）复制本文档任何内容，亦不得以任何电子手段存储、处理、复制或分发本文档的任何内容。

据我们所知，本文档所含信息截至发布日是准确可靠的。对于因使用本帮助文档而导致的任何损害或损失，Kollmorgen 概不承担任何责任。Kollmorgen 特此明确声明，对于因本文档中的任何材料或随附本文档之任何软件程序的性能或形式导致的或与之相关的任何类型的数据丢失、使用中断损失或财产损失（包括直接、间接和衍生性损失或损害），Kollmorgen 不承担任何法律责任或损害赔偿赔偿责任。

Support and Services

About Kollmorgen

When you need motion and automation systems for your most demanding applications and environments, count on Kollmorgen - the innovation leader for more than 100 years. We deliver the industry's highest-performing, most reliable motors, drives, AGV control solutions and automation platforms, with over a million standard and easily modifiable products to meet virtually any motion challenge. We offer manufacturing facilities, distributors and engineering expertise in all major regions around the world, so you can bring a better machine to market faster and keep it profitable for many years to come.

Kollmorgen Support Network



See the [Kollmorgen Support Network](#) for product support, product downloads, knowledge base answers, and information.



Kollmorgen Support Locations

North America

Kollmorgen Corporation

201 West Rock Road
Radford, VA 24141, USA

Web: www.kollmorgen.com

Email: kollmorgen.support@regalrexnord.com

Tel.: +1-540-633-3545

Fax: +1-540-639-4162

Europe

Kollmorgen Europe GmbH

Pempelfurtstr. 1
40880 Ratingen, Germany

Web: www.kollmorgen.com

Email: kollmorgen.tech.emeai@regalrexnord.com

Tel.: +49-2102-9394-0

Fax: +49-2102-9394-3155

South America

Altra Industrial Motion do Brasil Equipamentos Industriais Ltda.

Avenida João Paulo Ablas, 2970
Jardim da Glória, Cotia – SP
CEP 06711-250, Brazil

Web: www.kollmorgen.com

Email: kollmorgen.contato@regalrexnord.com

Tel.: (+55 11) 4615-6300

China and SEA

Kollmorgen (Shanghai)

Room 1201, Building A,
Mangoo Hub, No.7 Longai Road,
Xuhui District, Shanghai, China
(Service available in English and Chinese)

Web: www.kollmorgen.cn

Email: kollmorgen.motion.sales.china@regalrexnord.com

Tel.: +86-400 668 2802