

Kollmorgen Automation Suite

KAS Reference Manual - PLC Library



Document Edition: D

October 2013

Valid for Software Revision 2.7

Valid for AKD PDMM firmware version: 1.10

Part Number: 959717

Keep all manuals as a product component during the life span of the product.
Pass all manuals to future users / owners of the product.

KOLLMORGEN

Because Motion Matters™

Trademarks and Copyrights

Copyrights

Copyright © 2009-13 Kollmorgen™

Information in this document is subject to change without notice. The software package described in this document is furnished under a license agreement or non-disclosure agreement. The software may be used or copied only in accordance with the terms of those agreements.

This document is the intellectual property of Kollmorgen™ and contains proprietary and confidential information. The reproduction, modification, translation or disclosure to third parties of this document (in whole or in part) is strictly prohibited without the prior written permission of Kollmorgen™.

Trademarks

KAS and AKD are registered trademarks of Kollmorgen™.

SERVOSTAR is a registered trademark of Kollmorgen™.

Kollmorgen™ is part of the Danaher Motion company.

Windows® is a registered trademark of Microsoft Corporation

EnDat is a registered trademark of Dr. Johannes Heidenhain GmbH.

EtherCAT® is registered trademark of Ethercat Technology Group.

PLCopen® is an independent association providing efficiency in industrial automation.

INTime® is a registered trademark of TenAsys® Corporation.

Codemeter is a registered trademark of WIBU-Systems AG.

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

Kollmorgen Automation Suite is based on the work of:

- AdvXMLLoader, an XML file parser modified to handle the ALS project (distributed under the terms of the license).
- AjaxFileUpload, software (distributed under the MPL License).
- Apache log4net library for output logging (distributed under the Apache License).
- bsdtar and libarchive2, a utility and library to create and read several different archive formats (distributed under the terms of the BSD License).
- bzip2.dll, a data compression library (distributed under the terms of the BSD License).
- Curl software library
- DockPanel Suite, a docking library for .Net Windows Forms (distributed under the MIT License).
- FileHelpers library to import/export data from fixed length or delimited files.
- [GNU gzip¹](http://www.gnu.org/licenses/gpl-2.0.html) (www.gnu.org) is used by the PDMM (distributed under the terms of the GNU General Public License <http://www.gnu.org/licenses/gpl-2.0.html>).
- [GNU Tar²](http://www.gnu.org/licenses/gpl-2.0.html) (www.gnu.org) is used by the PDMM (distributed under the terms of the GNU General Public License <http://www.gnu.org/licenses/gpl-2.0.html>).
- jQuery.Cookies, a Javascript library for accessing and manipulating HTTP cookies in the web browser (distributed under the MIT License).

¹Copyright (C) 2007 Free Software Foundation, Inc. Copyright (C) 1993 Jean-loup Gailly. This is free software. You may redistribute copies of it under the terms of the GNU General Public License <<http://www.gnu.org/licenses/gpl.html>>. There is NO WARRANTY, to the extent permitted by law. Written by Jean-loup Gailly.

²Copyright (C) 2007 Free Software Foundation, Inc. License GPLv2+: GNU GPL version 2 or later <<http://gnu.org/licenses/gpl.html>> This is free software: you are free to change and redistribute it. There is NO WARRANTY, to the extent permitted by law. Written by John Gilmore and Jay Fenlon.

- jQuery File Tree, a file browser plugin (distributed under the MIT License).
- jQueryRotate, a plugin which rotates images (img html objects) by a given angle on web pages (distributed under the MIT License, <http://opensource.org/licenses/mit-license.php>).
- JsonCpp software (distributed under the MIT License –see terms see <http://json-cpp.sourceforge.net/LICENSE> for terms).
- LZMA SDK (<http://www.7-zip.org/sdk.html>), used to compress crash dump information (available as public domain).
- Mongoose v3.7, an embedded web server library (distributed under the MIT License).
- MVVM Light Toolkit components for Model – View –ViewModel patterns with Windows Presentation Foundation (distributed under the MIT License).
- Qwt project (distributed under the terms of the GNU Lesser General Public License).
- U-Boot, a universal boot loader is used by the AKD-PDMM (distributed under the terms of the GNU General Public License, <http://www.gnu.org/licenses/gpl-2.0.html>). The U-Boot source files, copyright notice, and readme are available on the distribution disk that is included with the AKD-PDMM.
- ZedGraph class library, user control, and web control for .NET (distributed under the LGPL License).
- Zlib software library
- Zlib1.dll, a data compression library (distributed under the terms of the BSD License).

All other product and brand names listed in this document may be trademarks or registered trademarks of their respective owners.

Disclaimer

The information in this document (Version 2.7 published on 10/7/2013) is believed to be accurate and reliable at the time of its release. Notwithstanding the foregoing, Kollmorgen assumes no responsibility for any damage or loss resulting from the use of this help, and expressly disclaims any liability or damages for loss of data, loss of use, and property damage of any kind, direct, incidental or consequential, in regard to or arising out of the performance or form of the materials presented herein or in any software programs that accompany this document.

All timing diagrams, whether produced by Kollmorgen or included by courtesy of the PLCoopen organization, are provided with accuracy on a best-effort basis with no warranty, explicit or implied, by Kollmorgen. The user releases Kollmorgen from any liability arising out of the use of these timing diagrams.

This page intentionally left blank.

Table of Contents

Kollmorgen Automation Suite	1
KAS Reference Manual - PLC Library	1
Trademarks and Copyrights	2
Copyrights	2
Trademarks	2
Disclaimer	3
Table of Contents	5
1 Programming languages	43
1.1 Sequential Function Chart (SFC)	43
1.1.1 SFC Execution at Runtime	43
1.1.2 Hierarchy of SFC programs	44
1.1.3 User-Defined Function Blocks Programmed in SFC	45
1.1.3.1 Declaration of UDFBs in SFC	45
1.1.3.2 UDFB Parameters	45
1.1.3.3 Steps in UDFBs	46
1.1.3.4 Execution of UDFBs	46
1.2 Free Form Ladder Diagram (FFLD)	46
1.2.1 Use of the "EN" input and the "ENO" output for blocks	46
1.2.2 Contacts and coils	47
1.2.2.1 Contacts	47
1.2.2.2 Coils	49
2 Programming features and standard blocks	53
2.1 Basic Operations	53
2.1.1 := FFLD FFLDN ST STN	54
2.1.1.1 Inputs	54
2.1.1.2 Outputs	54
2.1.1.3 Remarks	54
2.1.1.4 ST Language	54
2.1.1.5 FBD Language	54
2.1.1.6 FFLD Language	55
2.1.1.7 IL Language:	55
2.1.2 Access to bits of an integer	55
2.1.3 Calling a sub-program	55

2.1.3.1	ST Language	55
2.1.3.2	FBD and FFID Languages	56
2.1.3.3	IL Language	56
	2.1.4 CASE OF ELSE END_CASE	56
2.1.4.1	Syntax	56
2.1.4.2	Remarks	56
2.1.4.3	ST Language	57
2.1.4.4	FBD Language	57
2.1.4.5	FFLD Language	57
2.1.4.6	IL Language	57
	2.1.5 COUNTOF	57
2.1.5.1	Inputs	57
2.1.5.2	Outputs	57
2.1.5.3	Remarks	57
2.1.5.4	ST Language	58
2.1.5.5	FBD Language	58
2.1.5.6	FFLD Language	58
2.1.5.7	IL Language	58
	2.1.6 DEC	58
2.1.6.1	Inputs	58
2.1.6.2	Outputs	58
2.1.6.3	Remarks	58
2.1.6.4	ST Language	59
2.1.6.5	FBD Language	59
2.1.6.6	FFLD Language	59
2.1.6.7	IL Language	59
	2.1.7 EXIT	59
2.1.7.1	Remarks	59
2.1.7.2	ST Language	59
2.1.7.3	FBD Language	59
2.1.7.4	FFLD Language	59
2.1.7.5	IL Language	60
	2.1.8 FOR TO BY END_FOR	60
2.1.8.1	Syntax	60
2.1.8.2	Remarks	60

2.1.8.3	ST Language	60
2.1.8.4	FBD Language	60
2.1.8.5	FFLD Language	60
2.1.8.6	IL Language	60
2.1.9	IF THEN ELSE ELSIF END_IF	60
2.1.9.1	Syntax	61
2.1.9.2	Remarks	61
2.1.9.3	ST Language	61
2.1.9.4	FBD Language	61
2.1.9.5	FFLD Language	61
2.1.9.6	IL Language	61
2.1.10	INC	62
2.1.10.1	Inputs	62
2.1.10.2	Outputs	62
2.1.10.3	Remarks	62
2.1.10.4	ST Language	62
2.1.10.5	FBD Language	62
2.1.10.6	FFLD Language	62
2.1.10.7	IL Language	62
2.1.11	MOVEBLOCK	62
2.1.11.1	Inputs	63
2.1.11.2	Outputs	63
2.1.11.3	Remarks	63
2.1.11.4	ST Language	63
2.1.11.5	FBD Language	63
2.1.11.6	FFLD Language	64
2.1.11.7	IL Language	64
2.1.12	NEG -	64
2.1.12.1	Inputs	64
2.1.12.2	Outputs	64
2.1.12.3	Truth table (examples)	64
2.1.12.4	Remarks	64
2.1.12.5	ST Language	64
2.1.12.6	FBD Language	65
2.1.12.7	FFLD Language	65
2.1.12.8	IL Language	65

2.1.13 ON	65
2.1.13.1 Syntax	65
2.1.13.2 Remarks	65
2.1.13.3 ST Language	65
2.1.14 ()	65
2.1.14.1 Remarks	66
2.1.14.2 ST Language	66
2.1.14.3 FBD Language	66
2.1.14.4 FFLD Language	66
2.1.14.5 IL Language	66
2.1.15 REPEAT UNTIL END_REPEAT	66
2.1.15.1 Syntax	66
2.1.15.2 Remarks	67
2.1.15.3 ST Language	67
2.1.15.4 FBD Language	67
2.1.15.5 FFLD Language	67
2.1.15.6 IL Language	67
2.1.16 RETURN RET RETC RETNC RETCN	67
2.1.16.1 Remarks	67
2.1.16.2 ST Language	67
2.1.16.3 FBD Language	68
2.1.16.4 FFLD Language	68
2.1.16.5 IL Language	68
2.1.17 WHILE DO END WHILE	69
2.1.17.1 Syntax	69
2.1.17.2 Remarks	69
2.1.17.3 ST Language	69
2.1.17.4 FBD Language	69
2.1.17.5 FFLD Language	69
2.1.17.6 IL Language	69
2.2 Boolean operations	69
2.2.1 FLIPFLOP	70
2.2.1.1 Inputs	70
2.2.1.2 Outputs	70
2.2.1.3 Remarks	70

2.2.1.4 ST Language	70
2.2.1.5 FBD Language	70
2.2.1.6 FFLD Language	71
2.2.1.7 IL Language	71
2.2.2 F_TRIG	71
2.2.2.1 Inputs	71
2.2.2.2 Outputs	71
2.2.2.3 Truth table	71
2.2.2.4 Remarks	71
2.2.2.5 ST Language	71
2.2.2.6 FBD Language	72
2.2.2.7 FFLD Language	72
2.2.2.8 IL Language:	72
2.2.3 NOT	72
2.2.3.1 Inputs	72
2.2.3.2 Outputs	72
2.2.3.3 Truth table	72
2.2.3.4 Remarks	72
2.2.3.5 ST Language	72
2.2.3.6 FBD Language	73
2.2.3.7 FFLD Language	73
2.2.3.8 IL Language:	73
2.2.4 R	73
2.2.4.1 Inputs	73
2.2.4.2 Outputs	73
2.2.4.3 Truth table	73
2.2.4.4 Remarks	74
2.2.4.5 ST Language	74
2.2.4.6 FBD Language	74
2.2.4.7 FFLD Language	74
2.2.4.8 IL Language:	74
2.2.5 RS	74
2.2.5.1 Inputs	74
2.2.5.2 Outputs	74
2.2.5.3 Truth table	74
2.2.5.4 Remarks	75

2.2.5.5 ST Language	75
2.2.5.6 FBD Language	75
2.2.5.7 FFLD Language	75
2.2.5.8 IL Language:	75
2.2.6 R_TRIG	75
2.2.6.1 Inputs	75
2.2.6.2 Outputs	75
2.2.6.3 Truth table	76
2.2.6.4 Remarks	76
2.2.6.5 ST Language	76
2.2.6.6 FBD Language	76
2.2.6.7 FFLD Language	76
2.2.6.8 IL Language:	76
2.2.7 S	76
2.2.7.1 Inputs	76
2.2.7.2 Outputs	77
2.2.7.3 Truth table	77
2.2.7.4 Remarks	77
2.2.7.5 ST Language	77
2.2.7.6 FBD Language	77
2.2.7.7 FFLD Language	77
2.2.7.8 IL Language:	77
2.2.8 SEMA	77
2.2.8.1 Inputs	77
2.2.8.2 Outputs	77
2.2.8.3 Remarks	77
2.2.8.4 ST Language	78
2.2.8.5 FBD Language	78
2.2.8.6 FFLD Language	78
2.2.8.7 IL Language:	78
2.2.9 SR	78
2.2.9.1 Inputs	78
2.2.9.2 Outputs	78
2.2.9.3 Truth table	79
2.2.9.4 Remarks	79
2.2.9.5 ST Language	79

2.2.9.6 FBD Language	79
2.2.9.7 FFID Language	79
2.2.9.8 IL Language:	79
2.2.10 XOR XORN	79
2.2.10.1 Inputs	80
2.2.10.2 Outputs	80
2.2.10.3 Truth table	80
2.2.10.4 Remarks	80
2.2.10.5 ST Language	80
2.2.10.6 FBD Language	80
2.2.10.7 FFID Language	80
2.2.10.8 IL Language	80
2.3 Arithmetic operations	81
2.3.1 + ADD	81
2.3.1.1 Inputs	81
2.3.1.2 Outputs	81
2.3.1.3 Remarks	81
2.3.1.4 ST Language	81
2.3.1.5 FBD Language	81
2.3.1.6 FFID Language	82
2.3.1.7 IL Language:	82
2.3.2 / DIV	82
2.3.2.1 Inputs	82
2.3.2.2 Outputs	82
2.3.2.3 Remarks	82
2.3.2.4 ST Language	82
2.3.2.5 FBD Language	82
2.3.2.6 FFID Language	82
2.3.2.7 IL Language:	83
2.3.3 NEG -	83
2.3.3.1 Inputs	83
2.3.3.2 Outputs	83
2.3.3.3 Truth table (examples)	83
2.3.3.4 Remarks	83
2.3.3.5 ST Language	83

2.3.3.6 FBD Language	83
2.3.3.7 FFID Language	84
2.3.3.8 IL Language	84
2.3.4 LIMIT	84
2.3.4.1 Inputs	84
2.3.4.2 Outputs	84
2.3.4.3 Function diagram	84
2.3.4.4 Remarks	84
2.3.4.5 ST Language	84
2.3.4.6 FBD Language	85
2.3.4.7 FFID Language	85
2.3.4.8 IL Language:	85
2.3.5 MAX	85
2.3.5.1 Inputs	85
2.3.5.2 Outputs	85
2.3.5.3 Remarks	85
2.3.5.4 ST Language	85
2.3.5.5 FBD Language	85
2.3.5.6 FFID Language	86
2.3.5.7 IL Language:	86
2.3.6 MIN	86
2.3.6.1 Inputs	86
2.3.6.2 Outputs	86
2.3.6.3 Remarks	86
2.3.6.4 ST Language	86
2.3.6.5 FBD Language	86
2.3.6.6 FFID Language	86
2.3.6.7 IL Language:	87
2.3.7 MOD / MODR / MODLR	87
2.3.7.1 Remarks	87
2.3.7.2 ST Language	87
2.3.7.3 FBD Language	87
2.3.7.4 FFID Language	87
2.3.7.5 IL Language	88
2.3.8 * MUL	88

2.3.8.1 Inputs	88
2.3.8.2 Outputs	88
2.3.8.3 Remarks	88
2.3.8.4 ST Language	88
2.3.8.5 FBD Language	88
2.3.8.6 FFLD Language	88
2.3.8.7 IL Language:	89
2.3.9 ODD	89
2.3.9.1 Inputs	89
2.3.9.2 Outputs	89
2.3.9.3 Remarks	89
2.3.9.4 ST Language	89
2.3.9.5 FBD Language	89
2.3.9.6 FFLD Language	89
2.3.9.7 IL Language:	89
2.3.10 - SUB	90
2.3.10.1 Inputs	90
2.3.10.2 Outputs	90
2.3.10.3 Remarks	90
2.3.10.4 ST Language	90
2.3.10.5 FBD Language	90
2.3.10.6 FFLD Language	90
2.3.10.7 IL Language:	90
2.4 Comparison Operations	91
2.4.1 CMP	91
2.4.1.1 Inputs	91
2.4.1.2 Outputs	91
2.4.1.3 Remarks	91
2.4.1.4 ST Language	91
2.4.1.5 FBD Language	91
2.4.1.6 FFLD Language	91
2.4.1.7 IL Language:	91
2.4.2 >= GE	92
2.4.2.1 Inputs	92
2.4.2.2 Outputs	92

2.4.2.3	Remarks	92
2.4.2.4	ST Language	92
2.4.2.5	FBD Language	92
2.4.2.6	FFLD Language	92
2.4.2.7	IL Language:	92
2.4.3 > GT	92
2.4.3.1	Inputs	93
2.4.3.2	Outputs	93
2.4.3.3	Remarks	93
2.4.3.4	ST Language	93
2.4.3.5	FBD Language	93
2.4.3.6	FFLD Language	93
2.4.3.7	IL Language:	93
2.4.4 = EQ	93
2.4.4.1	Inputs	93
2.4.4.2	Outputs	94
2.4.4.3	Remarks	94
2.4.4.4	ST Language	94
2.4.4.5	FBD Language	94
2.4.4.6	FFLD Language	94
2.4.4.7	IL Language:	94
2.4.5 <> NE	94
2.4.5.1	Inputs	94
2.4.5.2	Outputs	94
2.4.5.3	Remarks	95
2.4.5.4	ST Language	95
2.4.5.5	FBD Language	95
2.4.5.6	FFLD Language	95
2.4.5.7	IL Language:	95
2.4.6 <= LE	95
2.4.6.1	Inputs	95
2.4.6.2	Outputs	95
2.4.6.3	Remarks	96
2.4.6.4	ST Language	96
2.4.6.5	FBD Language	96
2.4.6.6	FFLD Language	96

2.4.6.7 IL Language:	96
2.4.7 < LT	96
2.4.7.1 Inputs	96
2.4.7.2 Outputs	96
2.4.7.3 Remarks	96
2.4.7.4 ST Language	97
2.4.7.5 FBD Language	97
2.4.7.6 FFLD Language	97
2.4.7.7 IL Language:	97
2.5 Type conversion functions	97
2.5.1 ANY_TO_BOOL	98
2.5.1.1 Inputs	98
2.5.1.2 Outputs	98
2.5.1.3 Remarks	98
2.5.1.4 ST Language	98
2.5.1.5 FBD Language	98
2.5.1.6 FFLD Language	98
2.5.1.7 IL Language:	98
2.5.1.8 See also	98
2.5.2 ANY_TO_DINT / ANY_TO_UDINT	98
2.5.2.1 Inputs	98
2.5.2.2 Outputs	99
2.5.2.3 Remarks	99
2.5.2.4 ST Language	99
2.5.2.5 FBD Language	99
2.5.2.6 FFLD Language	99
2.5.2.7 IL Language:	99
2.5.2.8 See also	99
2.5.3 ANY_TO_INT / ANY_TO_UINT	99
2.5.3.1 Inputs	99
2.5.3.2 Outputs	99
2.5.3.3 Remarks	100
2.5.3.4 ST Language	100
2.5.3.5 FBD Language	100
2.5.3.6 FFLD Language	100

2.5.3.7 IL Language:	100
2.5.3.8 See also	100
2.5.4 ANY_TO_LINT / ANY_TO_ULINT	100
2.5.4.1 Inputs	100
2.5.4.2 Outputs	100
2.5.4.3 Remarks	100
2.5.4.4 ST Language	101
2.5.4.5 FBD Language	101
2.5.4.6 FFID Language	101
2.5.4.7 IL Language:	101
2.5.4.8 See also	101
2.5.5 ANY_TO_LREAL	101
2.5.5.1 Inputs	101
2.5.5.2 Outputs	101
2.5.5.3 Remarks	101
2.5.5.4 ST Language	101
2.5.5.5 FBD Language	102
2.5.5.6 FFID Language	102
2.5.5.7 IL Language:	102
2.5.5.8 See also	102
2.5.6 ANY_TO_REAL	102
2.5.6.1 Inputs	102
2.5.6.2 Outputs	102
2.5.6.3 Remarks	102
2.5.6.4 ST Language	102
2.5.6.5 FBD Language	102
2.5.6.6 FFID Language	103
2.5.6.7 IL Language:	103
2.5.6.8 See also	103
2.5.7 ANY_TO_TIME	103
2.5.7.1 Inputs	103
2.5.7.2 Outputs	103
2.5.7.3 Remarks	103
2.5.7.4 ST Language	103
2.5.7.5 FBD Language	103
2.5.7.6 FFID Language	103

2.5.7.7 IL Language:	104
2.5.7.8 See also	104
2.5.8 ANY_TO_SINT / ANY_TO_USINT	104
2.5.8.1 Inputs	104
2.5.8.2 Outputs	104
2.5.8.3 Remarks	104
2.5.8.4 ST Language	104
2.5.8.5 FBD Language	104
2.5.8.6 FFID Language	104
2.5.8.7 IL Language	105
2.5.8.8 See also	105
2.5.9 ANY_TO_STRING	105
2.5.9.1 Inputs	105
2.5.9.2 Outputs	105
2.5.9.3 Remarks	105
2.5.9.4 ST Language	105
2.5.9.5 FBD Language	105
2.5.9.6 FFID Language	105
2.5.9.7 IL Language:	105
2.5.9.8 See also	106
2.5.10 NUM_TO_STRING	106
2.5.10.1 Inputs	106
2.5.10.2 Outputs	106
2.5.10.3 Remarks	106
2.5.10.4 Examples	106
2.5.11 BCD_TO_BIN	106
2.5.11.1 Inputs	106
2.5.11.2 Outputs	106
2.5.11.3 Truth table (examples)	107
2.5.11.4 Remarks	107
2.5.11.5 ST Language	107
2.5.11.6 FBD Language	107
2.5.11.7 FFID Language	107
2.5.11.8 IL Language:	107
2.5.12 BIN_TO_BCD	107

2.5.12.1 Inputs	107
2.5.12.2 Outputs	107
2.5.12.3 Truth table (examples)	108
2.5.12.4 Remarks	108
2.5.12.5 ST Language	108
2.5.12.6 FBD Language	108
2.5.12.7 FFLD Language	108
2.5.12.8 IL Language:	108
2.6 Selectors	108
2.6.1 MUX4	108
2.6.1.1 Inputs	109
2.6.1.2 Outputs	109
2.6.1.3 Truth table	109
2.6.1.4 Remarks	109
2.6.1.5 ST Language	109
2.6.1.6 FBD Language	109
2.6.1.7 FFLD Language	109
2.6.1.8 IL Language	110
2.6.2 MUX8	110
2.6.2.1 Inputs	110
2.6.2.2 Outputs	110
2.6.2.3 Truth table	110
2.6.2.4 Remarks	110
2.6.2.5 ST Language	110
2.6.2.6 FBD Language	111
2.6.2.7 FFLD Language	111
2.6.2.8 IL Language	111
2.6.3 SEL	111
2.6.3.1 Inputs	111
2.6.3.2 Outputs	111
2.6.3.3 Truth table	112
2.6.3.4 Remarks	112
2.6.3.5 ST Language	112
2.6.3.6 FBD Language	112
2.6.3.7 FFLD Language	112
2.6.3.8 IL Language	112

2.7 Registers	112
2.7.1 AND_MASK	113
2.7.1.1 Inputs	113
2.7.1.2 Outputs	113
2.7.1.3 Remarks	113
2.7.1.4 ST Language	114
2.7.1.5 FBD Language	114
2.7.1.6 FFLD Language	114
2.7.1.7 IL Language:	114
2.7.2 HIBYTE	114
2.7.2.1 Inputs	114
2.7.2.2 Outputs	114
2.7.2.3 Remarks	114
2.7.2.4 ST Language	114
2.7.2.5 FBD Language	115
2.7.2.6 FFLD Language	115
2.7.2.7 IL Language:	115
2.7.3 LOBYTE	115
2.7.3.1 Inputs	115
2.7.3.2 Outputs	115
2.7.3.3 Remarks	115
2.7.3.4 ST Language	115
2.7.3.5 FBD Language	115
2.7.3.6 FFLD Language	116
2.7.3.7 IL Language:	116
2.7.4 HIWORD	116
2.7.4.1 Inputs	116
2.7.4.2 Outputs	116
2.7.4.3 Remarks	116
2.7.4.4 ST Language	116
2.7.4.5 FBD Language	116
2.7.4.6 FFLD Language	116
2.7.4.7 IL Language:	117
2.7.5 LOWORD	117
2.7.5.1 Inputs	117

2.7.5.2 Outputs	117
2.7.5.3 Remarks	117
2.7.5.4 ST Language	117
2.7.5.5 FBD Language	117
2.7.5.6 FFLD Language	117
2.7.5.7 IL Language:	117
2.7.6 MAKEDWORD	118
2.7.6.1 Inputs	118
2.7.6.2 Outputs	118
2.7.6.3 Remarks	118
2.7.6.4 ST Language	118
2.7.6.5 FBD Language	118
2.7.6.6 FFLD Language	118
2.7.6.7 IL Language:	118
2.7.7 MAKEWORD	118
2.7.7.1 Inputs	119
2.7.7.2 Outputs	119
2.7.7.3 Remarks	119
2.7.7.4 ST Language	119
2.7.7.5 FBD Language	119
2.7.7.6 FFLD Language	119
2.7.7.7 IL Language:	119
2.7.8 MBSHIFT	119
2.7.8.1 Inputs	120
2.7.8.2 Outputs	120
2.7.8.3 Remarks	120
2.7.8.4 ST Language	120
2.7.8.5 FBD Language	120
2.7.8.6 FFLD Language	120
2.7.8.7 IL Language:	120
2.7.9 NOT_MASK	121
2.7.9.1 Inputs	121
2.7.9.2 Outputs	121
2.7.9.3 Remarks	121
2.7.9.4 ST Language	121
2.7.9.5 FBD Language	121

2.7.9.6 FFLD Language	121
2.7.9.7 IL Language:	121
2.7.10 OR_MASK	121
2.7.10.1 Inputs	121
2.7.10.2 Outputs	121
2.7.10.3 Remarks	122
2.7.10.4 ST Language	122
2.7.10.5 FBD Language	122
2.7.10.6 FFLD Language	122
2.7.10.7 IL Language:	122
2.7.11 PACK8	122
2.7.11.1 Inputs	122
2.7.11.2 Outputs	122
2.7.11.3 Remarks	122
2.7.11.4 ST Language	123
2.7.11.5 FBD Language	123
2.7.11.6 FFLD Language	123
2.7.11.7 IL Language	123
2.7.12 ROL	123
2.7.12.1 Inputs	123
2.7.12.2 Outputs	123
2.7.12.3 Diagram	124
2.7.12.4 Remarks	124
2.7.12.5 ST Language	124
2.7.12.6 FBD Language	124
2.7.12.7 FFLD Language	124
2.7.12.8 IL Language:	124
2.7.13 ROR	124
2.7.13.1 Inputs	124
2.7.13.2 Outputs	124
2.7.13.3 Diagram	125
2.7.13.4 Remarks	125
2.7.13.5 ST Language	125
2.7.13.6 FBD Language	125
2.7.13.7 FFLD Language	125
2.7.13.8 IL Language:	125

2.7.14 RORb / ROR_SINT / ROR_USINT / ROR_BYTE	125
2.7.14.1 Inputs	125
2.7.14.2 Outputs	125
2.7.14.3 Diagram	126
2.7.14.4 Remarks	126
2.7.14.5 ST Language	126
2.7.14.6 FBD Language	126
2.7.14.7 FFLD Language	126
2.7.14.8 IL Language:	126
2.7.14.9 See also	126
2.7.15 RORw / ROR_INT / ROR_UINT / ROR_WORD	126
2.7.15.1 Inputs	126
2.7.15.2 Outputs	126
2.7.15.3 Diagram	127
2.7.15.4 Remarks	127
2.7.15.5 ST Language	127
2.7.15.6 FBD Language	127
2.7.15.7 FFLD Language	127
2.7.15.8 IL Language:	127
2.7.15.9 See also	127
2.7.16 SETBIT	127
2.7.16.1 Inputs	127
2.7.16.2 Outputs	127
2.7.16.3 Remarks	128
2.7.16.4 ST Language	128
2.7.16.5 FBD Language	128
2.7.16.6 FFLD Language	128
2.7.16.7 IL Language	128
2.7.17 SHL	128
2.7.17.1 Inputs	128
2.7.17.2 Outputs	128
2.7.17.3 Diagram	129
2.7.17.4 Remarks	129
2.7.17.5 ST Language	129
2.7.17.6 FBD Language	129
2.7.17.7 FFLD Language	129

2.7.17.8 IL Language:	129
2.7.18 SHR	129
2.7.18.1 Inputs	129
2.7.18.2 Outputs	129
2.7.18.3 Diagram	130
2.7.18.4 Remarks	130
2.7.18.5 ST Language	130
2.7.18.6 FBD Language	130
2.7.18.7 FFLD Language	130
2.7.18.8 IL Language:	130
2.7.19 TESTBIT	130
2.7.19.1 Inputs	130
2.7.19.2 Outputs	130
2.7.19.3 Remarks	131
2.7.19.4 ST Language	131
2.7.19.5 FBD Language	131
2.7.19.6 FFLD Language	131
2.7.19.7 IL Language	131
2.7.20 UNPACK8	131
2.7.20.1 Inputs	131
2.7.20.2 Outputs	131
2.7.20.3 Remarks	131
2.7.20.4 ST Language	132
2.7.20.5 FBD Language	132
2.7.20.6 FFLD Language	132
2.7.20.7 IL Language:	132
2.7.21 XOR_MASK	133
2.7.21.1 Inputs	133
2.7.21.2 Outputs	133
2.7.21.3 Remarks	133
2.7.21.4 ST Language	133
2.7.21.5 FBD Language	133
2.7.21.6 FFLD Language	133
2.7.21.7 IL Language:	133
2.8 Counters	133

2.8.1 CTD / CTDr	134
2.8.1.1 Inputs	134
2.8.1.2 Outputs	134
2.8.1.3 Remarks	134
2.8.1.4 ST Language	134
2.8.1.5 FBD Language	134
2.8.1.6 FFID Language	134
2.8.1.7 IL Language:	135
2.8.2 CTU / CTUr	135
2.8.2.1 Inputs	135
2.8.2.2 Outputs	135
2.8.2.3 Remarks	135
2.8.2.4 ST Language	135
2.8.2.5 FBD Language	135
2.8.2.6 FFID Language	136
2.8.2.7 IL Language:	136
2.8.3 CTUD / CTUDr	136
2.8.3.1 Inputs	136
2.8.3.2 Outputs	136
2.8.3.3 Remarks	136
2.8.3.4 ST Language	136
2.8.3.5 FBD Language	137
2.8.3.6 FFID Language	137
2.8.3.7 IL Language:	137
2.9 Timers	137
2.9.1 BLINK	137
2.9.1.1 Inputs	138
2.9.1.2 Outputs	138
2.9.1.3 Time diagram	138
2.9.1.4 Remarks	138
2.9.1.5 ST Language	138
2.9.1.6 FBD Language	138
2.9.1.7 FFID Language	138
2.9.1.8 IL Language	138
2.9.2 BLINKA	138

2.9.2.1	Inputs	139
2.9.2.2	Outputs	139
2.9.2.3	Time diagram	139
2.9.2.4	Remarks	139
2.9.2.5	ST Language	139
2.9.2.6	FBD Language	139
2.9.2.7	FFLD Language	139
2.9.2.8	IL Language:	140
	2.9.3 PLS	140
2.9.3.1	Inputs	140
2.9.3.2	Outputs	140
2.9.3.3	Time diagram	140
2.9.3.4	Remarks	140
2.9.3.5	ST Language	140
2.9.3.6	FBD Language	140
2.9.3.7	FFLD Language	140
2.9.3.8	IL Language	141
	2.9.4 Sig_Gen	141
2.9.4.1	Inputs	141
2.9.4.2	Outputs	141
2.9.4.3	FFLD Language	142
	2.9.5 TMD	142
2.9.5.1	Inputs	142
2.9.5.2	Outputs	142
2.9.5.3	Time diagram	142
2.9.5.4	Remarks	142
2.9.5.5	ST Language	143
2.9.5.6	FBD Language	143
2.9.5.7	FFLD Language	143
2.9.5.8	IL Language	143
	2.9.6 TMU / TMUse	143
2.9.6.1	Inputs	143
2.9.6.2	Outputs	143
2.9.6.3	Time diagram	144
2.9.6.4	Remarks	144
2.9.6.5	ST Language	144

2.9.6.6 FBD Language	144
2.9.6.7 FFID Language	144
2.9.6.8 IL Language:	144
2.9.7 TOF / TOFR	145
2.9.7.1 Inputs	145
2.9.7.2 Outputs	145
2.9.7.3 Time diagram	145
2.9.7.4 Remarks	145
2.9.7.5 ST Language	145
2.9.7.6 FBD Language	145
2.9.7.7 FFID Language	146
2.9.7.8 IL Language:	146
2.9.8 TON	146
2.9.8.1 Inputs	146
2.9.8.2 Outputs	146
2.9.8.3 Time diagram	146
2.9.8.4 Remarks	146
2.9.8.5 ST Language	146
2.9.8.6 FBD Language	147
2.9.8.7 FFID Language	147
2.9.8.8 IL Language:	147
2.9.9 TP / TPR	147
2.9.9.1 Inputs	147
2.9.9.2 Outputs	147
2.9.9.3 Time diagram	147
2.9.9.4 Remarks	148
2.9.9.5 ST Language	148
2.9.9.6 FBD Language	148
2.9.9.7 FFID Language	148
2.9.9.8 IL Language:	148
2.10 Mathematic operations	148
2.10.1 ABS / ABSL	149
2.10.1.1 Inputs	149
2.10.1.2 Outputs	149
2.10.1.3 Remarks	149

2.10.1.4	ST Language	149
2.10.1.5	FBD Language	149
2.10.1.6	FFLD Language	149
2.10.1.7	IL Language	149
	2.10.2 EXPT	149
2.10.2.1	Inputs	149
2.10.2.2	Outputs	149
2.10.2.3	Remarks	150
2.10.2.4	ST Language	150
2.10.2.5	FBD Language	150
2.10.2.6	FFLD Language	150
2.10.2.7	IL Language:	150
	2.10.3 LOG	150
2.10.3.1	Inputs	150
2.10.3.2	Outputs	150
2.10.3.3	Remarks	150
2.10.3.4	ST Language	150
2.10.3.5	FBD Language	151
2.10.3.6	FFLD Language	151
2.10.3.7	IL Language:	151
	2.10.4 POW ** POWL	151
2.10.4.1	Inputs	151
2.10.4.2	Outputs	151
2.10.4.3	Remarks	151
2.10.4.4	ST Language	151
2.10.4.5	FBD Language	151
2.10.4.6	FFLD Language	152
2.10.4.7	IL Language:	152
	2.10.5 ScaleLin	152
2.10.5.1	Inputs	152
2.10.5.2	Outputs	152
2.10.5.3	Truth table	152
2.10.5.4	Remarks	152
2.10.5.5	ST Language	152
2.10.5.6	FBD Language	153
2.10.5.7	FFLD Language	153

2.10.5.8 IL Language	153
2.10.6 SQRT / SQRTL	153
2.10.6.1 Inputs	153
2.10.6.2 Outputs	153
2.10.6.3 Remarks	153
2.10.6.4 ST Language	153
2.10.6.5 FBD Language	153
2.10.6.6 FFLD Language	154
2.10.6.7 IL Language:	154
2.10.7 TRUNC / TRUNCL	154
2.10.7.1 Inputs	154
2.10.7.2 Outputs	154
2.10.7.3 Remarks	154
2.10.7.4 ST Language	154
2.10.7.5 FBD Language	154
2.10.7.6 FFLD Language	154
2.10.7.7 IL Language:	154
2.11 Trigonometric functions	155
2.11.1 ACOS / ACOSL	155
2.11.1.1 Inputs	155
2.11.1.2 Outputs	155
2.11.1.3 Remarks	155
2.11.1.4 ST Language	155
2.11.1.5 FBD Language	155
2.11.1.6 FFLD Language	155
2.11.1.7 IL Language:	156
2.11.2 ASIN / ASINL	156
2.11.2.1 Inputs	156
2.11.2.2 Outputs	156
2.11.2.3 Remarks	156
2.11.2.4 ST Language	156
2.11.2.5 FBD Language	156
2.11.2.6 FFLD Language	156
2.11.2.7 IL Language:	156
2.11.3 ATAN / ATANL	157

2.11.3.1	Inputs	157
2.11.3.2	Outputs	157
2.11.3.3	Remarks	157
2.11.3.4	ST Language	157
2.11.3.5	FBD Language	157
2.11.3.6	FFLD Language	157
2.11.3.7	IL Language:	157
	2.11.4 ATAN2 / ATAN2L	157
2.11.4.1	Inputs	157
2.11.4.2	Outputs	157
2.11.4.3	Remarks	158
2.11.4.4	ST Language	158
2.11.4.5	FBD Language	158
2.11.4.6	FFLD Language	158
2.11.4.7	IL Language	158
	2.11.5 COS / COSL	158
2.11.5.1	Inputs	158
2.11.5.2	Outputs	158
2.11.5.3	Remarks	158
2.11.5.4	ST Language	158
2.11.5.5	FBD Language	159
2.11.5.6	FFLD Language	159
2.11.5.7	IL Language:	159
	2.11.6 SIN / SINL	159
2.11.6.1	Inputs	159
2.11.6.2	Outputs	159
2.11.6.3	Remarks	159
2.11.6.4	ST Language	159
2.11.6.5	FBD Language	159
2.11.6.6	FFLD Language	159
2.11.6.7	IL Language:	160
	2.11.7 TAN / TANL	160
2.11.7.1	Inputs	160
2.11.7.2	Outputs	160
2.11.7.3	Remarks	160
2.11.7.4	ST Language	160

2.11.7.5	FBD Language	160
2.11.7.6	FFLD Language	160
2.11.7.7	IL Language:	160
2.11.8	2.11.8 UseDegrees	161
2.11.8.1	Inputs	161
2.11.8.2	Outputs	161
2.11.8.3	Remarks	161
2.11.8.4	ST Language	161
2.11.8.5	FBD Language	161
2.11.8.6	FFLD Language	161
2.11.8.7	IL Language	161
2.12	String operations	161
2.12.1	2.12.1 ArrayToString / ArrayToStringU	162
2.12.1.1	Inputs	162
2.12.1.2	Outputs	162
2.12.1.3	Remarks	162
2.12.1.4	ST Language	162
2.12.1.5	FBD Language	162
2.12.1.6	FFLD Language	163
2.12.1.7	IL Language	163
2.12.2	2.12.2 ASCII	163
2.12.2.1	Inputs	163
2.12.2.2	Outputs	163
2.12.2.3	Remarks	163
2.12.2.4	ST Language	163
2.12.2.5	FBD Language	163
2.12.2.6	FFLD Language	163
2.12.2.7	IL Language:	164
2.12.3	2.12.3 ATOH	164
2.12.3.1	Inputs	164
2.12.3.2	Outputs	164
2.12.3.3	Truth table (examples)	164
2.12.3.4	Remarks	164
2.12.3.5	ST Language	164
2.12.3.6	FBD Language	164

2.12.3.7 FFLD Language	164
2.12.3.8 IL Language:	165
2.12.4 CHAR	165
2.12.4.1 Inputs	165
2.12.4.2 Outputs	165
2.12.4.3 Remarks	165
2.12.4.4 ST Language	165
2.12.4.5 FBD Language	165
2.12.4.6 FFLD Language	165
2.12.4.7 IL Language:	165
2.12.5 CONCAT	166
2.12.6 CRC16	166
2.12.6.1 Inputs	166
2.12.6.2 Outputs	166
2.12.6.3 Remarks	166
2.12.6.4 ST Language	166
2.12.6.5 FBD Language	166
2.12.6.6 FFLD Language	166
2.12.6.7 IL Language:	166
2.12.7 DELETE	166
2.12.7.1 Inputs	166
2.12.7.2 Outputs	167
2.12.7.3 Remarks	167
2.12.7.4 ST Language	167
2.12.7.5 FBD Language	167
2.12.7.6 FFLD Language	167
2.12.7.7 IL Language:	167
2.12.8 FIND	167
2.12.8.1 Inputs	167
2.12.8.2 Outputs	167
2.12.8.3 Remarks	168
2.12.8.4 ST Language	168
2.12.8.5 FBD Language	168
2.12.8.6 FFLD Language	168
2.12.8.7 IL Language:	168

2.12.9 HTOA	168
2.12.9.1 Inputs	168
2.12.9.2 Outputs	168
2.12.9.3 Truth table (examples)	168
2.12.9.4 Remarks	169
2.12.9.5 ST Language	169
2.12.9.6 FBD Language	169
2.12.9.7 FFID Language	169
2.12.9.8 IL Language:	169
2.12.10 INSERT	169
2.12.10.1 Inputs	169
2.12.10.2 Outputs	169
2.12.10.3 Remarks	169
2.12.10.4 ST Language	169
2.12.10.5 FBD Language	170
2.12.10.6 FFID Language	170
2.12.10.7 IL Language:	170
2.12.11 LEFT	170
2.12.11.1 Inputs	170
2.12.11.2 Outputs	170
2.12.11.3 Remarks	170
2.12.11.4 ST Language	170
2.12.11.5 FBD Language	171
2.12.11.6 FFID Language	171
2.12.11.7 IL Language:	171
2.12.12 LoadString	171
2.12.12.1 Inputs	171
2.12.12.2 Outputs	171
2.12.12.3 Remarks	171
2.12.12.4 ST Language	171
2.12.12.5 FBD Language	171
2.12.12.6 FFID Language	172
2.12.12.7 IL Language:	172
2.12.13 MID	172
2.12.13.1 Inputs	172

2.12.13.2	Outputs	172
2.12.13.3	Remarks	172
2.12.13.4	ST Language	172
2.12.13.5	FBD Language	172
2.12.13.6	FFLD Language	172
2.12.13.7	IL Language:	173
	2.12.14 MLEN	173
2.12.14.1	Inputs	173
2.12.14.2	Outputs	173
2.12.14.3	Remarks	173
2.12.14.4	ST Language	173
2.12.14.5	FBD Language	173
2.12.14.6	FFLD Language	173
2.12.14.7	IL Language:	173
	2.12.15 REPLACE	174
2.12.15.1	Inputs	174
2.12.15.2	Outputs	174
2.12.15.3	Remarks	174
2.12.15.4	ST Language	174
2.12.15.5	FBD Language	174
2.12.15.6	FFLD Language	174
2.12.15.7	IL Language:	174
	2.12.16 RIGHT	175
2.12.16.1	Inputs	175
2.12.16.2	Outputs	175
2.12.16.3	Remarks	175
2.12.16.4	ST Language	175
2.12.16.5	FBD Language	175
2.12.16.6	FFLD Language	175
2.12.16.7	IL Language:	175
	2.12.17 StringTable	175
2.12.17.1	Inputs	176
2.12.17.2	Outputs	176
2.12.17.3	Remarks	176
2.12.17.4	ST Language	176
2.12.17.5	FBD Language	176

2.12.17.6 FFLD Language	176
2.12.17.7 IL Language:	176
2.12.18 StringToArray / StringToArrayU	176
2.12.18.1 Inputs	176
2.12.18.2 Outputs	177
2.12.18.3 Remarks	177
2.12.18.4 ST Language	177
2.12.18.5 FBD Language	177
2.12.18.6 FFLD Language	177
2.12.18.7 IL Language:	177
3 Advanced operations	179
3.1 ALARM_A	180
3.1.1 Inputs	180
3.1.2 Outputs	180
3.1.3 Sequence	180
3.1.4 Remarks	180
3.1.5 ST Language	180
3.1.6 FBD Language	181
3.1.7 FFLD Language	181
3.1.8 IL Language	181
3.2 ALARM_M	181
3.2.1 Inputs	181
3.2.2 Outputs	181
3.2.3 Sequence	182
3.2.4 Remarks	182
3.2.5 ST Language	182
3.2.6 FBD Language	182
3.2.7 FFLD Language	182
3.2.8 IL Language	182
3.3 ApplyRecipeColumn	183
3.3.1 Inputs	183
3.3.2 Outputs	184
3.3.3 Remarks	184
3.3.4 ST Language	185

3.3.5 FBD Language	185
3.3.6 FFLD Language	185
3.3.7 IL Language	185
3.4 AS-interface functions	185
3.5 AVERAGE / AVERAGEL	186
3.5.1 Inputs	186
3.5.2 Outputs	186
3.5.3 Remarks	186
3.5.4 ST Language	186
3.5.5 FBD Language	186
3.5.6 FFLD Language	187
3.5.7 IL Language:	187
3.6 CurveLin	187
3.6.1 Inputs	187
3.6.2 Outputs	187
3.6.3 Remarks	187
3.7 DERIVATE	188
3.7.1 Inputs	188
3.7.2 Outputs	188
3.7.3 Remarks	188
3.7.4 ST Language	188
3.7.5 FBD Language	188
3.7.6 FFLD Language	188
3.7.7 IL Language:	188
3.8 Dynamic memory allocation functions	189
3.9 EnableEvents	190
3.9.1 Inputs	190
3.9.2 Outputs	190
3.9.3 Remarks	190
3.9.4 ST Language	190
3.9.5 FBD Language	190
3.9.6 FFLD Language	190
3.9.7 IL Language:	190

3.10	FIFO	190
3.10.1	Inputs	190
3.10.2	Outputs	191
3.10.3	Remarks	191
3.10.4	ST Language	191
3.10.5	FBD Language	191
3.10.6	FFLD Language	192
3.10.7	IL Language	192
3.11	About the File Management Functions	192
3.11.1	SD Card Access	193
3.11.2	System Conventions	193
3.11.2.1	PAC Path Conventions	194
3.11.2.2	Simulator Path Conventions	194
3.11.2.3	AKD PDMM Path Conventions	194
3.11.2.4	SD Card Path Conventions	194
3.11.2.5	File Name Warning - Limitations	194
3.12	GETSYSINFO	195
3.12.1	Inputs	195
3.12.2	Outputs	195
3.12.3	Remarks	195
3.12.4	ST Language	195
3.12.5	FBD Language	196
3.12.6	FFLD Language	196
3.12.7	IL Language:	196
3.13	HYSTER	196
3.13.1	Inputs	196
3.13.2	Outputs	196
3.13.3	Remarks	196
3.13.4	ST Language	196
3.13.5	FBD Language	196
3.13.6	FFLD Language	197
3.13.7	IL Language:	197
3.14	INTEGRAL	197
3.14.1	Inputs	197

3.14.2 Outputs	197
3.14.3 Remarks	197
3.14.4 ST Language	197
3.14.5 FBD Language	198
3.14.6 FFID Language	198
3.14.7 IL Language:	198
3.15 LIFO	198
3.15.1 Inputs	198
3.15.2 Outputs	198
3.15.3 Remarks	199
3.15.4 ST Language	199
3.15.5 FBD Language	199
3.15.6 FFID Language	199
3.15.7 IL Language	199
3.16 LIM_ALRM	200
3.16.1 Inputs	200
3.16.2 Outputs	200
3.16.3 Remarks	200
3.16.4 ST Language	200
3.16.5 FBD Language	200
3.16.6 FFID Language	201
3.16.7 IL Language:	201
3.17 LogFileCSV	201
3.17.1 Inputs	201
3.17.2 Outputs	201
3.17.3 Remarks	202
3.17.4 ST Language	202
3.17.5 FBD Language	202
3.17.6 FFID Language	203
3.17.7 IL Language	203
3.18 MBSlaveRTU	203
3.18.1 Inputs	203
3.18.2 Outputs	203

3.18.3 Remarks	203
3.18.4 ST Language	204
3.18.5 FBD Language	204
3.18.6 FFID Language	204
3.18.7 IL Language:	204
3.19 MBSlaveUDP	204
3.19.1 Inputs	204
3.19.2 Outputs	204
3.19.3 Remarks	204
3.19.4 ST Language	205
3.19.5 FBD Language	205
3.19.6 FFID Language	205
3.19.7 IL Language:	205
3.20 PID	205
3.20.1 Inputs	206
3.20.2 Outputs	206
3.20.3 Diagram	207
3.20.4 Remarks	207
3.20.5 ST Language	207
3.20.6 FBD Language	208
3.20.7 FFID Language	208
3.20.8 IL Language	209
3.21 PID Functions	209
3.22 RAMP	209
3.22.1 Inputs	209
3.22.2 Outputs	209
3.22.3 Time diagram	210
3.22.4 Remarks	210
3.22.5 ST Language	210
3.22.6 FBD Language	210
3.22.7 FFID Language	210
3.22.8 IL Language	211
3.23 Real Time clock management functions	211

3.23.1 DAY_TIME	212
3.23.1.1 Inputs	212
3.23.1.2 Outputs	212
3.23.1.3 Remarks	213
3.23.1.4 ST Language	213
3.23.1.5 FBD Language	213
3.23.1.6 FFLD Language	213
3.23.1.7 IL Language	213
3.23.2 DTFORMAT	213
3.23.2.1 Inputs	213
3.23.2.2 Outputs	213
3.23.2.3 Remarks	214
3.23.2.4 ST Language	214
3.23.2.5 FBD Language	214
3.23.2.6 FFLD Language	214
3.23.2.7 IL Language	214
3.23.3 DTAT	214
3.23.3.1 Inputs	215
3.23.3.2 Outputs	215
3.23.3.3 Remarks	215
3.23.3.4 ST Language	215
3.23.3.5 FBD Language	215
3.23.3.6 FFLD Language	216
3.23.3.7 IL Language:	216
3.23.4 DTEVERY	216
3.23.4.1 Inputs	216
3.23.4.2 Outputs	216
3.23.4.3 Remarks	216
3.23.4.4 ST Language	216
3.23.4.5 FBD Language	217
3.23.4.6 FFLD Language	217
3.23.4.7 IL Language:	217
3.24 SERIALIZEIN	217
3.24.1 Inputs	217
3.24.2 Outputs	217

3.24.3 Remarks	217
3.24.4 ST Language	218
3.24.5 FBD Language	218
3.24.6 FFID Language	218
3.24.7 IL Language:	218
3.25 SERIALIZEDOUT	218
3.25.1 Inputs	218
3.25.2 Outputs	219
3.25.3 Remarks	219
3.25.4 ST Language	219
3.25.5 FBD Language	219
3.25.6 FFID Language	219
3.25.7 IL Language:	219
3.26 SerGetString	220
3.26.1 Inputs	220
3.26.2 Outputs	220
3.26.3 Remarks	220
3.26.4 ST Language	220
3.26.5 FBD Language	221
3.26.6 FFID Language	221
3.26.7 IL Language	221
3.27 SerPutString	221
3.27.1 Inputs	221
3.27.2 Outputs	221
3.27.3 Remarks	221
3.27.4 ST Language	222
3.27.5 FBD Language	222
3.27.6 FFID Language	222
3.27.7 IL Language:	222
3.28 SERIO	222
3.28.1 Inputs	223
3.28.2 Outputs	223
3.28.3 Remarks	223

3.28.4 ST Language	223
3.28.5 FBD Language	223
3.28.6 FFID Language	224
3.28.7 IL Language:	224
3.29 SigID	224
3.29.1 Inputs	224
3.29.2 Outputs	224
3.29.3 Remarks	224
3.29.4 ST Language	224
3.29.5 FBD Language	224
3.29.6 FFID Language	225
3.29.7 IL Language	225
3.30 SigPlay	225
3.30.1 Inputs	225
3.30.2 Outputs	225
3.30.3 Remarks	225
3.30.4 ST Language	225
3.30.5 FBD Language	226
3.30.6 FFID Language	226
3.30.7 IL Language	226
3.31 SigScale	226
3.31.1 Inputs	226
3.31.2 Outputs	226
3.31.3 Remarks	226
3.31.4 ST Language	227
3.31.5 FBD Language	227
3.31.6 FFID Language	227
3.31.7 IL Language	227
3.32 STACKINT	227
3.32.1 Inputs	227
3.32.2 Outputs	227
3.32.3 Remarks	228
3.32.4 ST Language	228

3.32.5 FBD Language	228
3.32.6 FFID Language	228
3.32.7 IL Language	228
3.33 SurfLin	228
3.33.1 Inputs	228
3.33.2 Outputs	229
3.33.3 Remarks	229
3.34 TCP-IP management functions	229
3.35 Text buffers manipulation	231
3.35.1 TxbManager	233
3.36 UDP management functions	246
3.37 VLID	247
3.37.1 Inputs	247
3.37.2 Outputs	247
3.37.3 Remarks	247
3.37.4 ST Language	248
3.37.5 FBD Language	248
3.37.6 FFID Language	248
3.37.7 IL Language	248
Global Support Contacts	249

1 Programming languages

This chapter presents details on the syntax, structure and use of the declarations and statements supported by the KAS IDE application language.

Below are the available programming languages of the IEC 61131-3 standard:

SFC: Sequential Function Chart

FBD: Function Block Diagram

FFLD: Free Form Ladder Diagram

ST: Structured Text

IL: Instruction List

Use of ST instructions in graphic languages

You have to select a language for each program or User-Defined Function Block of the application.

1.1 Sequential Function Chart (SFC)

The SFC language is a state diagram. Graphical steps are used to represent stable states, and transitions describe the conditions and events that lead to a change of state. Using SFC highly simplifies the programming of sequential operations as it saves a lot of variables and tests just for maintaining the program context.

IMPORTANT You must not use SFC as a decision diagram. Using a step as a point of decision and transitions as conditions in an algorithm must never appear in an SFC chart. Using SFC as a decision language leads to poor performance and complicate charts. ST must be preferred when programming a decision algorithm that has no sense in term of "program state"

Below are basic components of an SFC chart:

<i>Chart:</i>	<i>Programming:</i>
---------------	---------------------

Steps and initial steps

Actions within a step

Transitions and divergences

Timeout on a step

Parallel branches

Programming a transition condition

Macro-steps

How SFC is executed

Jump to a step

UDFBs programmed in SFC

The KAS IDE fully supports SFC programming with several hierarchical levels of charts: i.e. a chart that controls another chart. Working with a hierarchy of SFC charts is an easy and powerful way for managing complex sequences and saves performances at runtime. Refer to the following sections for further details:


Defining a hierarchy of SFC programs

How to control an SFC child?

1.1.1 SFC Execution at Runtime

SFC programs are executed sequentially within a target cycle, according to the order defined when entering programs in the hierarchy tree. A parent SFC program is executed before its children. This implies that when a parent starts or stops a child, the corresponding actions in the child program are performed during the same cycle.

Within a chart, all valid transitions are evaluated first, and then actions of active steps are performed. The chart is evaluated from the left to the right and from the top to the bottom. Below is an example:

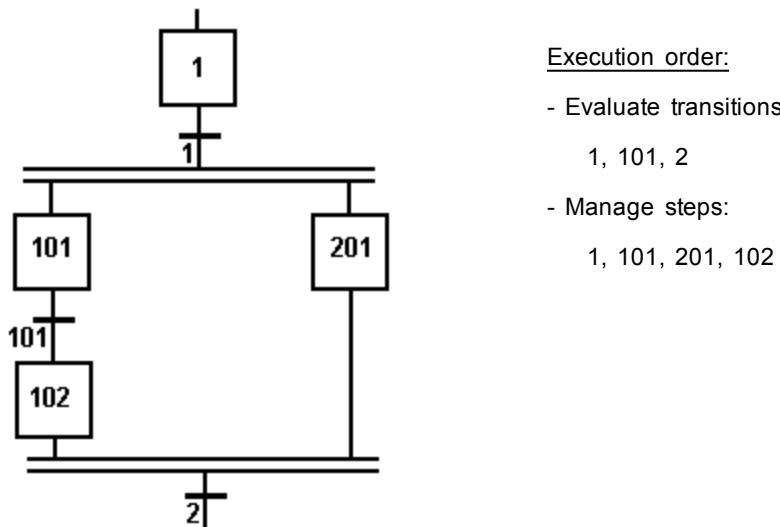

In case of a divergence, all conditions are considered as exclusive, according to a "left to right" priority order. It means that a transition is considered as FALSE if at least one of the transitions connected to the same divergence on its left side is TRUE.

The initial steps define the initial status of the program when it is started. All top level (main) programs are started when the application starts. Child programs are explicitly started from action blocks within the parent programs.

The evaluation of transitions leads to changes of active steps, according to the following rules:

- A transition is crossed if:
 - its condition is TRUE
 - and if all steps linked to the top of the transition (before) are active
- When a transition is crossed:
 - all steps linked to the top of the transition (before) are deactivated
 - all steps linked to the bottom of the transition (after) are activated

① IMPORTANT Execution of SFC within the IEC 61131 target is sampled according to the target cycles. When a transition is crossed within a cycle, the following steps are activated, and the evaluation of the chart will continue on the next cycle. If several consecutive transitions are TRUE within a branch, only one of them is crossed within one target cycle.

① IMPORTANT

- This section describes the execution model of a standard IEC 61131 target. SFC execution rules can differ for other target systems. Please refer to OEM instructions for further details about SFC execution at run time.
- Some run-time systems can support exclusivity of the transitions within a divergence or not. Please refer to OEM instructions for further information about SFC support.

1.1.2 Hierarchy of SFC programs

Each SFC program can have one or more "child programs". Child programs are written in SFC and are started (launched) or stopped (killed) in the actions of the

father program. A child program can also have children. The number of hierarchy levels must not exceed 19.

When a child program is stopped, its children are also implicitly stopped.

When a child program is started, it must explicitly in its actions start its children.

A child program is controlled (started or stopped) from the action blocks of its parent program. Designing a child program is a simple way to program an action block in SFC language.

Using child programs is very useful for designing a complex process and separate operations due to different aspects of the process. For instance, it is common to manage the execution modes in a parent program and to handle details of the process operations in child programs.

1.1.3 User-Defined Function Blocks Programmed in SFC

The KAS IDE enables you to create User-Defined Function Blocks (UDFBs) programmed with SFC language. This section details specific features related to such function blocks.

The execution of UDFBs written in SFC requires a runtime system version SR7-1 or later.

1.1.3.1 Declaration of UDFBs in SFC

From the Workspace contextual menu, run the "Insert New Program" command. Then specify a valid name for the function block. Select "SFC" language and "UDFB" execution style.

1.1.3.2 UDFB Parameters

When a UDFB programmed in SFC is created, the KAS IDE automatically declares 3 special inputs to the block:

RUN	The SFC state machine is not activated when this input is FALSE.
RESET	The SFC chart is reset to its initial situation when this input is TRUE.
KILL	Any active step of the SFC chart is deactivated when this input is TRUE.

You can freely add other input and output variables to the UDFB. You can also remove any of the automatically created input if not needed. If the RUN input is removed, then it is considered as always TRUE. If RESET or KILL inputs are removed, then they are considered as always FALSE. Below is the truth table showing priorities among special input:

RUN	RESET	KILL	
FALSE	FALSE	FALSE	do nothing
FALSE	FALSE	TRUE	kill the SFC chart
FALSE	TRUE	FALSE	reset the SFC chart
FALSE	TRUE	TRUE	kill the SFC chart
TRUE	FALSE	FALSE	activate the SFC chart
TRUE	FALSE	TRUE	kill the SFC chart
TRUE	TRUE	FALSE	reset the SFC chart
TRUE	TRUE	TRUE	kill the SFC chart

1.1.3.3 Steps in UDFBs

All steps inserted in the SFC chart of the UDFB are automatically declared as local instances of special reserved function blocks with the local variables of the UDFBs. The following FB types are used:

isfcSTEP	a normal step
isfcINITSTEP	an initial step

The editor takes care of updating the list of declared step instances. You should never remove, rename or change them in the variable editor. All steps are named with "GS" followed by their number.

1.1.3.4 Execution of UDFBs

The SFC chart is operated only when the UDFB is called by its parent program.

If the RESET input is TRUE, the SFC chart is reset to its initial situation. If the KILL input is TRUE, any active step of the SFC chart is deactivated.

When the RUN input is TRUE and KILL/RESET are FALSE, the SFC chart is operated in the same way as for other SFC programs:

1. Check valid transitions and evaluate related conditions
2. Cross TRUE valid transitions
3. Execute relevant actions of the active steps



In a UDFB programmed in SFC, you cannot use SFC actions to pilot a "child SFC program". This feature is reserved for SFC programs only. Instead, a UDFB programmed in SFC can pilot from its actions another UDFB programmed in SFC.

1.2 Free Form Ladder Diagram (FFLD)

A Ladder Diagram is a list of *rungs*. Each rung represents a boolean data flow from a power rail on the left. The power rail represents the TRUE state. The data flow must be understood from the left to the right. Each symbol connected to the rung either changes the rung state or performs an operation. Below are possible graphic items to be entered in FFLD diagrams:

Power Rails

Contacts and Coils

Operations, Functions and Function blocks, represented by rectangular blocks

Labels and Jumps

Use of ST instructions in graphic languages


1.2.1 Use of the "EN" input and the "ENO" output for blocks

The rung state in a FFLD diagram is always boolean. Blocks are connected to the rung with their first input and output. This implies that special "EN" and "ENO" input and output are added to the block if its first input or output is not boolean.

The "EN" input is a condition. It means that the operation represented by the block is not performed if the rung state (EN) is FALSE. The "ENO" output always represents the same status as the "EN" input: the rung state is not modified by a block having an ENO output.


Below is the example of the "XOR" block, having boolean inputs and outputs, and requiring no EN or ENO pin:

(* First input is the rung. The rung is the output *)

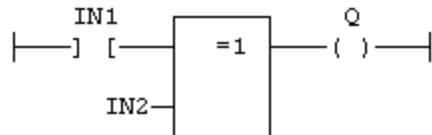


Below is the example of the ">" (greater than) block, having non boolean inputs and a boolean output. This block has an "EN" input in FFLD language:

(* The comparison is executed only if EN is TRUE *)

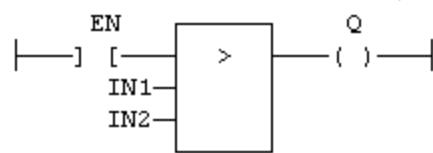


Below is the example of the "SEL" function, having a first boolean input, but an integer output. This block has an "ENO" output in FFLD language:

(* the input rung is the selector *)
(* ENO has the same value as SELECT *)

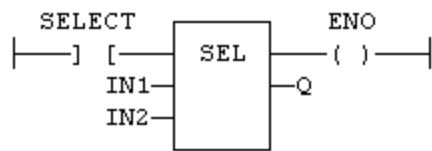

Finally, below is the example of an addition, having only numerical arguments. This block has both "EN" and "ENO" pins in FFLD language:

(* The addition is executed only if EN is TRUE *)
(* ENO is equal to EN *)

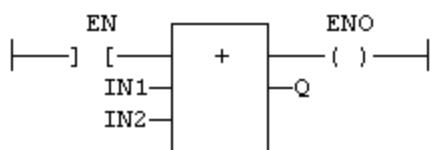

1.2.2 Contacts and coils


The table below contains a list of the contact and coil types available:

Contacts	Coils
Normally Open - -	Energize -()-
Normally Closed - / -	De-energize -(/)-
Positive Transition - P -	Set (Latch) -(S)-
Negative Transition - N -	Reset (Unlatch) -(R)-
Normally closed positive transition - P -	Positive transition sensing coil -(P)-
Normally closed negative transition - N -	Negative transition sensing coil -(N)-

1.2.2.1 Contacts

Contacts are basic graphic elements of the FFLD language. A contact is associated with a boolean variable which is displayed above the graphic symbol. A contact sets the state of the rung on its right-hand side, according to the value of the associated variable and the rung state on its left-hand side.


Below are the six possible contact symbols and how they change the flow:

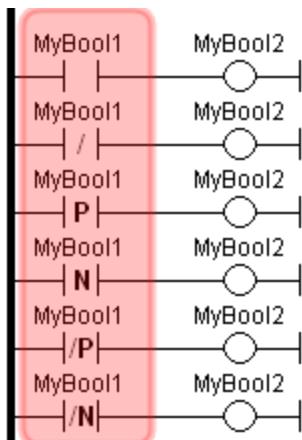


Contacts	Description
boolVariable -] [-	Normal: The flow on the right is the boolean AND operation between: (1) the flow on the left and (2) the associated variable.
boolVariable -]/[-	Negated: The flow on the right is the boolean AND operation between: (1) the flow on the left and (2) the negation of the associated variable.
boolVariable -] P [-	Positive Transition: The flow on the right is TRUE when the flow on the left is TRUE and the associated variable is TRUE and was FALSE the last time this contact was scanned (rising edge)
	
boolVariable -] N [-	Negative Transition: The flow on the right is TRUE when the flow on the left is TRUE and the associated variable is FALSE and was TRUE last time this contact was scanned (falling edge).
	
boolVariable -] /P [-	Normally Closed Positive Transition: The flow on the right is TRUE when the flow on the left is TRUE and the associated variable does not change from FALSE to TRUE from the last scan of this contact to this scan (NOT rising edge).
boolVariable -] /N [-	Normally Closed Negative Transition: The flow on the right is TRUE when the flow on the left is TRUE and the associated variable does not change from TRUE to FALSE from the last scan of this contact to this scan (NOT falling edge).

Serialized and Parallel contacts

Two serial normal contacts represent an AND operation.

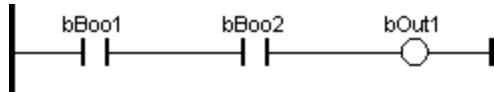

Two contacts in parallel represent an OR operation.

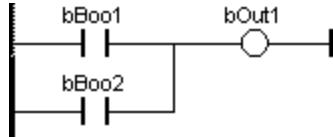


Transition Contacts


The transition contacts $-|P|$, $-|N -|P|$, and $-|/N|$ compare the current state of the boolean variable to the boolean's state the last time the contact was scanned. This means that the boolean variable could change states several times during a scan, but if it's back to the same state when the transition contact is scanned, the transition contact will not produce a TRUE. Also, some function blocks can complete immediately. Therefore a different approach, other than using transition contacts, is needed to determine if a function block completed successfully.

For example:

MC_GrpEnable executes and turns on its Done output immediately. In the following code, the GroupEnableDone positive transition contact will only provide a TRUE the first time MC_GrpEnable is executed. For all subsequent executions, the positive transition contact will not provide a TRUE since GroupEnableDone will be TRUE every time the contact is scanned.

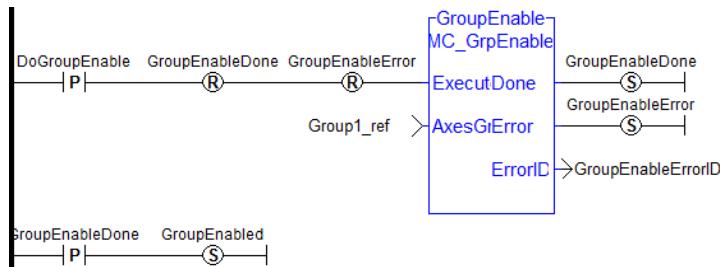


To remedy this, the following code uses the SET and RESET of a boolean (i.e. EnableRequest) to provide a way to detect each successful execution of the function block:

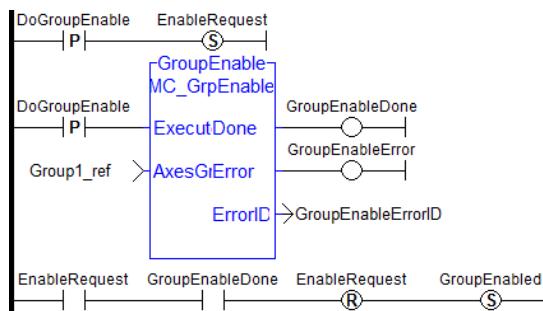

1.2.2.2 Coils

Coils are basic graphic elements of the FFLD language. A coil is associated with a boolean variable which is displayed above the graphic symbol. A coil performs a change of the associated variable according to the flow on its left-hand side.

Below are the six possible coil symbols:

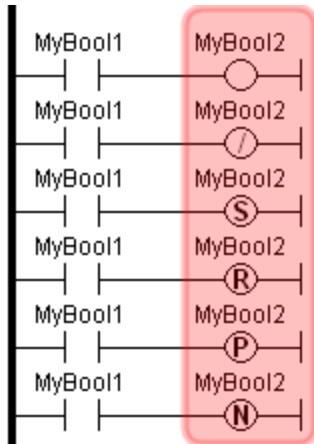

Coils	Description
boolVariable -()-	Normal: the associated variable is forced to the value of the flow on the left of the coil.
boolVariable -(/)-	Negated: the associated variable is forced to the negation of the flow on the left of the coil.
boolVariable -(S)-	Set: the associated variable is forced to TRUE if the flow on the left is TRUE. (no action if the flow is FALSE)
Rules for Set coil animation:	
	<ul style="list-style-type: none"> • Power Flow on left is TRUE: <ul style="list-style-type: none"> • The horizontal wires on either side of the (S) are red • The variable and the (S) are red • Power Flow on left is FALSE and the (S) variable is Energized (ON) <ul style="list-style-type: none"> • The horizontal lines on either side of (S) are black • The variable and the (S) are red • In all other cases: <ul style="list-style-type: none"> • The horizontal wires are black • The variable and the (S) are black

Coils	Description
boolVariable - (R) -	Reset: the associated variable is forced to FALSE if the flow on the left is TRUE. (no action if the rung state is FALSE)
	<p style="text-align: center;">Rules for Reset coil animation:</p> <ul style="list-style-type: none"> • Power Flow on left is TRUE: <ul style="list-style-type: none"> • The horizontal lines are red • The variable above (R) is black • The R and the circle around the R are black • Power Flow on left is FALSE and variable above reset coil is NOT Energized (OFF) <ul style="list-style-type: none"> • The horizontal lines are black • The variable above (R) is black • The R and the circle around the R are black • Power Flow on left is FALSE and variable above reset coil is Energized (ON) <ul style="list-style-type: none"> • The horizontal lines are black • The variable above (R) is red • The R and the circle around the R are red
boolVariable - (P) -	Positive transition: the associated variable is forced to TRUE if the flow on the left changes from FALSE to TRUE (and forced to FALSE in all other cases)
boolVariable - (N) -	Negative transition: the associated variable is forced to TRUE if the flow on the left changes from TRUE to FALSE (and forced to FALSE in all other cases)

(i) TIP

When a contact or coil is selected, you can press the **Spacebar** to change its type (normal, negated...)
 When your application is running, you can select a contact and press the **Spacebar** to swap its value between TRUE and FALSE

(i) IMPORTANT

Although coils are commonly put at the end, the rung can be continued after a coil. The flow is **never changed** by a coil symbol.

This page intentionally left blank.

2 Programming features and standard blocks

Refer to the following pages for an overview of the IEC 61131-3 programming languages:

Program organization units

Data types

Structures

Variables

Arrays

Constant expressions

Conditional compiling

Handling exceptions

SFC: Sequential Function Chart

FBD: Function Block Diagram

FFLD: Free Form Ladder Diagram

ST: Structured Text

IL: Instruction List

Use of ST instructions in graphic languages

The following topics detail the set of programming features and standard blocks:

Basic operations

Boolean operations

Arithmetic operations

Comparisons

Type conversion functions

Selectors

Registers

Counters

Timers

Maths

Trigonometrics

String operations

Advanced

Note: Some other functions not documented here are reserved for diagnostics and special operations. Please contact your technical support for further information.

2.1 Basic Operations

Below are the language features for basic data manipulation:

- Variable assignment
- Bit access
- Parenthesis
- Calling a function
- Calling a function block
- Calling a sub-program
- MOVEBLOCK: Copying/moving array items
- COUNTOF: Number of items in an array
- INC: Increase a variable
- DEC: decrease a variable
- NEG: integer negation (unary operator)

Below are the language features for controlling the execution of a program:

- Labels
- Jumps
- RETURN

Below are the structured statements for controlling the execution of a program:

IF	Conditional execution of statements.
WHILE	Repeat statements while a condition is TRUE.
REPEAT	Repeat statements until a condition is TRUE.
FOR	Execute iterations of statements.
CASE	Switch to one of various possible statements.
EXIT	Exit from a loop instruction.
WAIT	Delay program execution.
ON	Conditional execution.

2.1.1 := FFLD FFLDN ST STN

Operator - variable assignment.

2.1.1.1 Inputs

IN : ANY Any variable or complex expression

2.1.1.2 Outputs

Q : ANY Forced variable

2.1.1.3 Remarks

The output variable and the input expression must have the same type. The forced variable cannot have the "read only" attribute. In FFLD and FBD languages, the "1" block is available to perform a "1 gain" data copy (1 copy). In FFLD language, the input rung (EN) enables the assignment, and the output rung keeps the state of the input rung. In IL language, the FFLD instruction loads the first operand, and the ST instruction stores the current result into a variable. The current result and the operand of ST must have the same type. Both FFLD and ST instructions can be modified by "N" in case of a boolean operand for performing a boolean negation.

2.1.1.4 ST Language

```

Q := IN; (* copy IN into variable Q *)
Q := (IN1 + (IN2 / IN 3)) * IN4; (* assign the result of a complex expression *)
result := SIN (angle); (* assign a variable with the result of a function *)
time := MyTon.ET; (* assign a variable with an output parameter of a function block *)
*)


```

2.1.1.5 FBD Language



2.1.1.6 FFLD Language

(* The copy is executed only if EN is TRUE *)

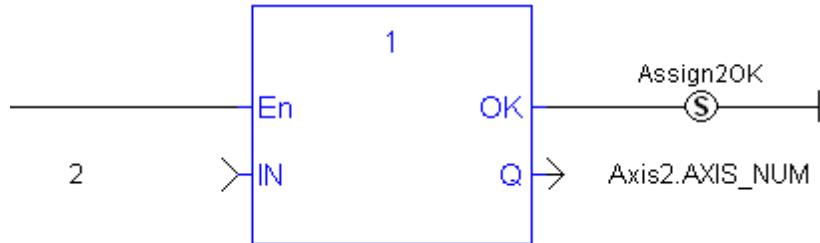

2.1.1.7 IL Language:

```

Op1: FFLD IN (* current result is: IN *)
      ST Q (* Q is: IN *)
      FFLDN IN1 (* current result is: NOT (IN1) *)
      ST Q (* Q is: NOT (IN1) *)
      FFID IN2 (* current result is: IN2 *)
      STN Q (* Q is: NOT (IN2) *)
  
```

See also:

Parenthesis

2.1.2 Access to bits of an integer

You can directly specify a bit within n integer variable in expressions and diagrams, using the following notation:

Variable.BitNo

Where:

Variable: is the name of an integer variable
BitNo: is the number of the bit in the integer.

The variable can have one of the following data types:

SINT, USINT, BYTE (8 bits from .0 to .7)
INT, UINT, WORD (16 bits from .0 to .15)
DINT, UDINT, DWORD (32 bits from .0 to 31)
LINT, ULINT, LWORD, (64 bits from 0 to 63)

0 always represents the less significant bit.

2.1.3 Calling a sub-program

A sub-program is called by another program. Unlike function blocks, local variables of a sub-program are not instantiated, and thus you do not need to declare instances. A call to a sub-program processes the block algorithm using the specified input parameters. Output parameters can then be accessed.

2.1.3.1 ST Language

To call a sub-program in ST, you have to specify its name, followed by the input parameters written between parentheses and separated by commas. To have access to an output parameter, use the name of the sub-program followed by a dot '.' and the name of the wished parameter:

```
MySubProg (i1, i2); (* calls the sub-program *)
Res1 := MySubProg.Q1;
Res2 := MySubProg.Q2;
```

Alternatively, if a sub-program has one and only one output parameter, it can be called as a function in ST language:

```
Res := MySubProg (i1, i2);
```

2.1.3.2 FBD and FFID Languages

To call a sub-program in FBD or FFID languages, you just need to insert the block in the diagram and to connect its inputs and outputs.

2.1.3.3 IL Language

To call a sub-program in IL language, you must use the CAL instruction with the name of the sub-program, followed by the input parameters written between parentheses and separated by commas. Alternatively the CALC, CALCN or CALNC conditional instructions can be used:

CAL	Calls the sub-program
CALC	Calls the sub-program if the current result is TRUE
CALNC	Calls the sub-program if the current result is FALSE
CALCN	same as CALNC

Here is an example:

```
Op1: CAL MySubProg (i1, i2)
FFLD MySubProg.Q1
ST Res1
FFLD MySubProg.Q2
ST Res2
```

2.1.4 CASE OF ELSE END_CASE

Statement - switch between enumerated statements.

2.1.4.1 Syntax

```
CASE <DINT expression> OF
<value> :
  <statements>
<value> , <value> :
  <statements>;
<value> .. <value> :
  <statements>;
ELSE
  <statements>
END_CASE;
```

2.1.4.2 Remarks

All enumerated values correspond to the evaluation of the DINT expression and are possible cases in the execution of the statements. The statements specified after the ELSE keyword are executed if the expression takes a value which is not enumerated in the switch. For each case, you must specify either a value, or a list of possible values separated by commas (",") or a range of values specified by a "min .. max" interval. You must enter space characters before and after the ".." separator.

2.1.4.3 ST Language

```
(* this example check first prime numbers *)
CASE iNumber OF
 0 :
  Alarm := TRUE;
  AlarmText := '0 gives no result';
 1 .. 3, 5 :
  bPrime := TRUE;
 4, 6 :
  bPrime := FALSE;
ELSE
  Alarm := TRUE;
  AlarmText := 'I don't know after 6 !';
END_CASE;
```

2.1.4.4 FBD Language

Not available

2.1.4.5 FFLD Language

Not available

2.1.4.6 IL Language

Not available

See also

IF WHILE REPEAT FOR EXIT

2.1.5 COUNTOF

Function - Returns the number of items in an array

2.1.5.1 Inputs

ARR : ANY Declared array

2.1.5.2 Outputs

Q : DINT Total number of items in the array

2.1.5.3 Remarks

The input must be an array and can have any data type. This function is particularly useful to avoid writing directly the actual size of an array in a program, and thus keep the program independent from the declaration. Example:

```
FOR i := 1 TO CountOf (MyArray) DO
  MyArray[i-1] := 0;
END_FOR;
```

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

Examples

array	return
Arr1 [0..9]	10
Arr2 [0..4 , 0..9]	50

2.1.5.4 ST Language

`Q := CountOf (ARR);`


2.1.5.5 FBD Language



2.1.5.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

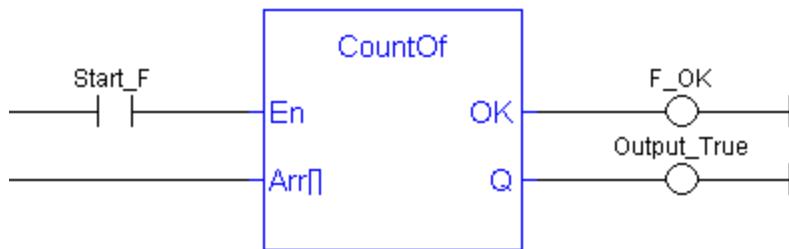

2.1.5.7 IL Language

Not available

2.1.6 DEC

Function - Decrease a numerical variable

2.1.6.1 Inputs

`IN : ANY` Numerical variable (increased after call).

2.1.6.2 Outputs

`Q : ANY` Decreased value

2.1.6.3 Remarks

When the function is called, the variable connected to the "IN" input is decreased and copied to Q. All data types are supported except BOOL and STRING: for these types, the output is the copy of IN.

For real values, variable is decreased by "1.0". For time values, variable is decreased by 1 ms.

The IN input must be directly connected to a variable, and cannot be a constant or complex expression.

This function is particularly designed for ST language. It allows simplified writing as assigning the result of the function is not mandatory.


2.1.6.4 ST Language

```
IN := 2;
Q := DEC (IN);
(* now: IN = 1 ; Q = 1 *)
DEC (IN); (* simplified call *)
```

2.1.6.5 FBD Language



2.1.6.6 FFLD Language

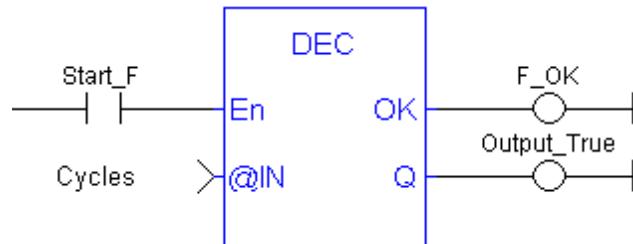

2.1.6.7 IL Language

not available

2.1.7 EXIT

Statement - Exit from a loop statement

2.1.7.1 Remarks

The EXIT statement indicates that the current loop (WHILE, REPEAT or FOR) must be finished. The execution continues after the END WHILE, END_REPEAT or END FOR keyword or the loop where the EXIT is. EXIT quits only one loop and cannot be used to exit at the same time several levels of nested loops.

①IMPORTANT loop instructions can lead to infinite loops that block the target cycle.

2.1.7.2 ST Language

```
(* this program searches for the first non null item of an array *)
iFound = -1; (* means: not found *)
FOR iPos := 0 TO (iArrayDim - 1) DO
    IF iPos <> 0 THEN
        iFound := iPos;
        EXIT;
    END_IF;
END_FOR;
```

2.1.7.3 FBD Language

Not available

2.1.7.4 FFLD Language

Not available

2.1.7.5 IL Language

Not available

See also

IF WHILE REPEAT FOR CASE

2.1.8 FOR TO BY END_FOR

Statement - Iteration of statement execution.

2.1.8.1 Syntax

```
FOR <index> := <minimum> TO <maximum> BY <step> DO
    <statements>
END_FOR;
```

index = DINT internal variable used as index

minimum = DINT expression: initial value for *index*

maximum = DINT expression: maximum allowed value for *index*

step = DINT expression: increasing step of *index* after each iteration (default is 1)

2.1.8.2 Remarks

The "BY <step>" statement can be omitted. The default value for the step is 1.

2.1.8.3 ST Language

```
iArrayDim := 10;

(* resets all items of the array to 0 *)
FOR iPos := 0 TO (iArrayDim - 1) DO
    MyArray[iPos] := 0;
END_FOR;

(* set all items with odd index to 1 *)
FOR iPos := 1 TO 9 BY 2 DO
    MyArray[iPos] := 1;
END_FOR;
```

2.1.8.4 FBD Language

Not available

2.1.8.5 FFLD Language

Not available

2.1.8.6 IL Language

Not available

See also

IF WHILE REPEAT CASE EXIT

2.1.9 IF THEN ELSE ELSIF END_IF

Statement - Conditional execution of statements.

2.1.9.1 Syntax

```
IF <BOOL expression> THEN
<statements>
ELSIF <BOOL expression> THEN
<statements>
ELSE
<statements>
END_IF;
```

2.1.9.2 Remarks

The IF statement is available in ST only. The execution of the statements is conditioned by a boolean expression. ELSIF and ELSE statements are optional. There can be several ELSIF statements.

2.1.9.3 ST Language

```
(* simple condition *)
    IF bCond THEN
        Q1 := IN1;
        Q2 := TRUE;
    END_IF;

(* binary selection *)
    IF bCond THEN
        Q1 := IN1;
        Q2 := TRUE;
    ELSE
        Q1 := IN2;
        Q2 := FALSE;
    END_IF;

(* enumerated conditions *)
    IF bCond1 THEN
        Q1 := IN1;
    ELSIF bCond2 THEN
        Q1 := IN2;
    ELSIF bCond3 THEN
        Q1 := IN3;
    ELSE
        Q1 := IN4;
    END_IF;
```

2.1.9.4 FBD Language

Not available

2.1.9.5 FFLD Language

Not available

2.1.9.6 IL Language

Not available

See also

WHILE REPEAT FOR CASE EXIT

2.1.10 INC

Function - Increase a numerical variable

2.1.10.1 Inputs

IN : ANY Numerical variable (increased after call).

2.1.10.2 Outputs

Q : ANY Increased value

2.1.10.3 Remarks

When the function is called, the variable connected to the "IN" input is increased and copied to Q. All data types are supported except BOOL and STRING: for these types, the output is the copy of IN.

For real values, variable is increased by "1.0". For time values, variable is increased by 1 ms.

The IN input must be directly connected to a variable, and cannot be a constant or complex expression.

This function is particularly designed for ST language. It allows simplified writing as assigning the result of the function is not mandatory.


2.1.10.4 ST Language

```
IN := 1;
Q := INC (IN);
(* now: IN = 2 ; Q = 2 *)
INC (IN); (* simplified call *)
```

2.1.10.5 FBD Language



2.1.10.6 FFLD Language

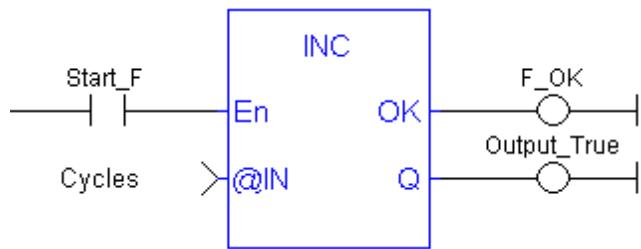

2.1.10.7 IL Language

not available

2.1.11 MOVEBLOCK

Function - Move/Copy items of an array.

2.1.11.1 Inputs

SRC: ANY (*)	Array containing the source of the copy
DST : ANY (*)	Array containing the destination of the copy
PosSRC: DINT	Index of the first character in SRC
PosDST : DINT	Index of the destination in DST
NB : DINT	Number of items to be copied

(*) SRC and DST cannot be a STRING

2.1.11.2 Outputs

OK : BOOL	TRUE if successful
-----------	--------------------

2.1.11.3 Remarks

Arrays of string are not supported by this function.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The function is not available in IL language.


The function copies a number (NB) of consecutive items starting at the PosSRC index in SRC array to PosDST position in DST array. SRC and DST can be the same array. In that case, the function avoids lost items when source and destination areas overlap.

This function checks array bounds and is always safe. The function returns TRUE if successful. It returns FALSE if input positions and number do not fit the bounds of SRC and DST arrays.

2.1.11.4 ST Language


```
OK := MOVEBLOCK (SRC, DST, PosSRS, PosDST, NB);
```

2.1.11.5 FBD Language

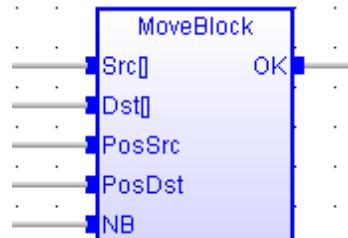

2.1.11.6 FFLD Language

(* The function is executed only if EN is TRUE *)

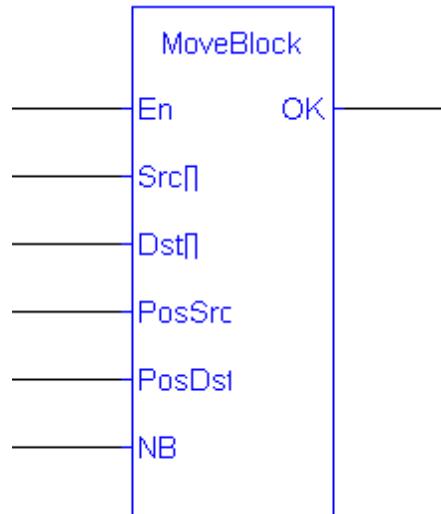

2.1.11.7 IL Language

Not available

2.1.12 NEG -

Operator - Performs an integer negation of the input.

2.1.12.1 Inputs

IN : DINT Integer value

2.1.12.2 Outputs

Q : DINT Integer negation of the input

2.1.12.3 Truth table (examples)

IN	Q
0	0
1	-1
-123	123

2.1.12.4 Remarks

In FBD and FFLD language, the block "NEG" can be used.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

This feature is not available in IL language. In ST language, "-" can be followed by a complex boolean expression between parentheses.

2.1.12.5 ST Language

```


Q := -IN;
Q := - (IN1 + IN2);
  
```

2.1.12.6 FBD Language



2.1.12.7 FFLD Language

(* The negation is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

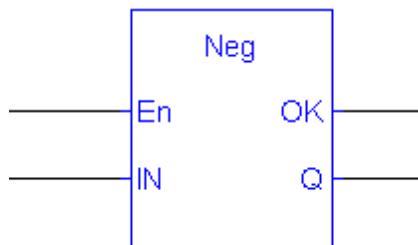

2.1.12.8 IL Language

Not available

2.1.13 ON

Statement - Conditional execution of statements.

The ON instruction provides a simpler syntax for checking the rising edge of a Boolean condition.

2.1.13.1 Syntax

```
ON <BOOL expression> DO
    <statements>
END_DO;
```

2.1.13.2 Remarks

Statements within the ON structure are executed only when the boolean expression rises from FALSE to TRUE. The ON instruction avoids systematic use of the R_TRIG function block or other "last state" flags.

The ON syntax is available in any program, sub-program or UDFB. It is available in both T5 p-code or native code compilation modes.

This statement is an extension to the standard and is not IEC61131-3 compliant.

IMPORTANT This instruction **should not be used inside UDFBs**. This instruction is not UDFB safe.

2.1.13.3 ST Language

```
(* This example counts the rising edges of variable bIN *)
ON bIN DO
    diCount := diCount + 1;
END_DO;
```

2.1.14 ()

Operator - force the evaluation order in a complex expression.

2.1.14.1 Remarks

Parentheses are used in ST and IL language for changing the default evaluation order of various operations within a complex expression. For instance, the default evaluation of "2 * 3 + 4" expression in ST language gives a result of 10 as "*" operator has highest priority. Changing the expression as "2 * (3 + 4)" gives a result of 14. Parentheses can be nested in a complex expression.

Below is the default evaluation order for ST language operations (1rst is highest priority):

Unary operators	- NOT
Multiply/Divide	* /
Add/Subtract	+ -
Comparisons	< > <= >= = <>
Boolean And	& AND
Boolean Or	OR
Exclusive OR	XOR

In IL language, the default order is the sequence of instructions. Each new instruction modifies the current result sequentially. In IL language, the opening parenthesis "(" is written between the instruction and its operand. The closing parenthesis ")" must be written alone as an instruction without operand.

2.1.14.2 ST Language

```
Q := (IN1 + (IN2 / IN 3)) * IN4;
```

2.1.14.3 FBD Language

Not available

2.1.14.4 FFLD Language

Not available

2.1.14.5 IL Language

```
Op1: FFLD( IN1
            ADD( IN2
                MUL IN3
            )
            SUB IN4
        )
    ST Q      (* Q is: (IN1 + (IN2 * IN3) - IN4) *)
```

See also

Assignment

2.1.15 REPEAT UNTIL END_REPEAT

Statement - Repeat a list of statements.

2.1.15.1 Syntax

```
REPEAT
    <statements>
UNTIL <BOOL expression> END_REPEAT;
```

2.1.15.2 Remarks

The statements between "REPEAT" and "UNTIL" are executed until the boolean expression is TRUE. The condition is evaluated **after** the statements are executed. Statements are executed at least once.

IMPORTANT Loop instructions can lead to infinite loops that block the target cycle. Never test the state of an input in the condition as the input will not be refreshed before the next cycle.

2.1.15.3 ST Language

```
iPos := 0;
REPEAT
    MyArray[iPos] := 0;
    iNbCleared := iNbCleared + 1;
    iPos := iPos + 1;
UNTIL iPos = iMax END_REPEAT;
```

2.1.15.4 FBD Language

Not available

2.1.15.5 FFLD Language

Not available

2.1.15.6 IL Language

Not available

See also

IF WHILE FOR CASE EXIT

2.1.16 RETURN RET RETC RETNC RETCN

Statement - Jump to the end of the program.

2.1.16.1 Remarks

The "RETURN" statement jumps to the end of the program. In FBD language, the return statement is represented by the "<RETURN>" symbol. The input of the symbol must be connected to a valid boolean signal. The jump is performed only if the input is TRUE. In FFLD language, the "<RETURN>" symbol is used as a coil at the end of a rung. The jump is performed only if the rung state is TRUE. In IL language, RET, RETC, RETCN and RETNC instructions are used.

When used within an action block of an SFC step, the RETURN statement jumps to the end of the action block.


2.1.16.2 ST Language

```
IF NOT bEnable THEN
    RETURN;
END_IF;
(* the rest of the program will not be executed if bEnable is FALSE *)

```

2.1.16.3 FBD Language


(* In this example the DTat block will not be called if blgnore is TRUE *)

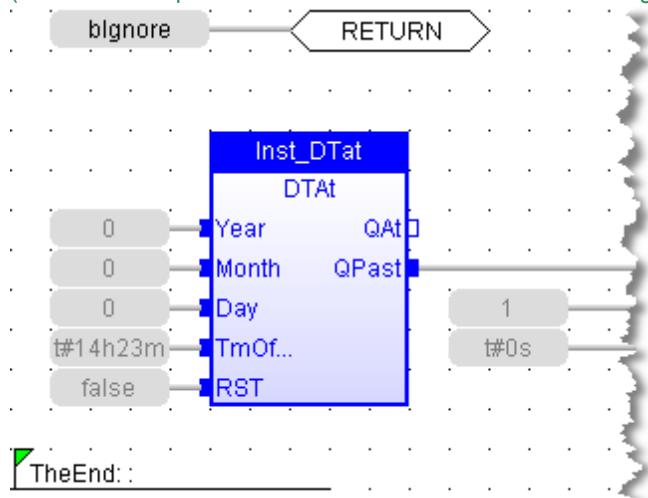

2.1.16.4 FFLD Language


(* In this example all the networks above 5 are skipped if ENABLE is FALSE *)

Network #5

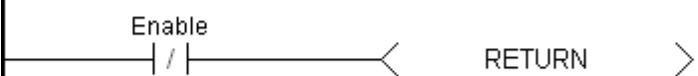

Network #6

Close the servo loop and enable the drive when CloseLoop is high.
Open the servo loop and disable the drive when CloseLoop is low.

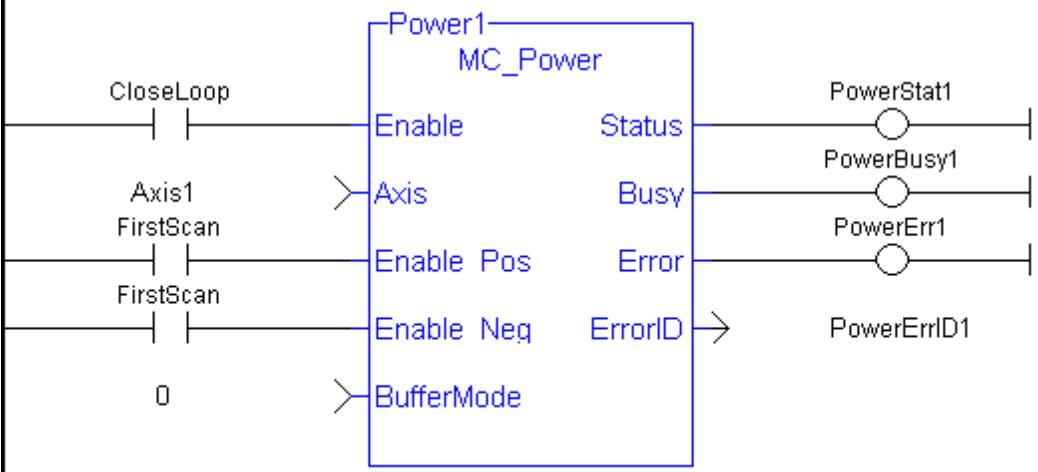

2.1.16.5 IL Language

Below is the meaning of possible instructions:

- RET Jump to the end always
- RETC Jump to the end if the current result is TRUE
- RETNC Jump to the end if the current result is FALSE
- RETNC Same as RETNC

```

Start: FFLD      IN1
       RETC          (* Jump to the end if IN1 is TRUE *)

```

```

FFLD    IN2      (* these instructions are not executed *)
ST      Q2       (* if IN1 is TRUE *)
RET                 (* Jump to the end unconditionally *)

FFLD    IN3      (* these instructions are never executed *)
ST      Q3

```

See also

Labels Jumps

2.1.17 WHILE DO END WHILE*Statement* - Repeat a list of statements.**2.1.17.1 Syntax**

```

WHILE <BOOL expression> DO
  <statements>
END WHILE ;

```

2.1.17.2 Remarks

The statements between "DO" and "END WHILE" are executed while the boolean expression is TRUE. The condition is evaluated **before** the statements are executed. If the condition is FALSE when WHILE is first reached, statements are never executed.

IMPORTANT Loop instructions can lead to infinite loops that block the target cycle. Never test the state of an input in the condition as the input will not be refreshed before the next cycle.

2.1.17.3 ST Language

```

iPos := 0;
WHILE iPos < iMax DO
  MyArray[iPos] := 0;
  iNbCleared := iNbCleared + 1;
END WHILE;

```

2.1.17.4 FBD Language*Not available***2.1.17.5 FFLD Language***Not available***2.1.17.6 IL Language***Not available***See also**

IF REPEAT FOR CASE EXIT

2.2 Boolean operations

Below are the standard operators for managing booleans:

AND	performs a boolean AND
-----	------------------------

OR	performs a boolean OR
XOR	performs an exclusive OR
NOT	performs a boolean negation of its input
QOR	qualified OR
S	force a boolean output to TRUE
R	force a boolean output to FALSE

Below are the available blocks for managing boolean signals:

RS	reset dominant bistable
SR	set dominant bistable
R_TRIG	rising pulse detection
F_TRIG	falling pulse detection
SEMA	semaphore
FLIPFLOP	flipflop^bistable

2.2.1 FLIPFLOP

Function Block - Flipflop bistable.

2.2.1.1 Inputs

IN : BOOL Swap command (on rising edge)
RST : BOOL Reset to FALSE

2.2.1.2 Outputs

Q : BOOL Output

2.2.1.3 Remarks

The output is systematically reset to FALSE if RST is TRUE.
The output changes on each rising edge of the IN input, if RST is FALSE.


2.2.1.4 ST Language

(* MyFlipFlop is declared as an instance of FLIPFLOP function block *)
MyFlipFlop (IN, RST);
Q := MyFlipFlop.Q;

2.2.1.5 FBD Language



2.2.1.6 FFLD Language

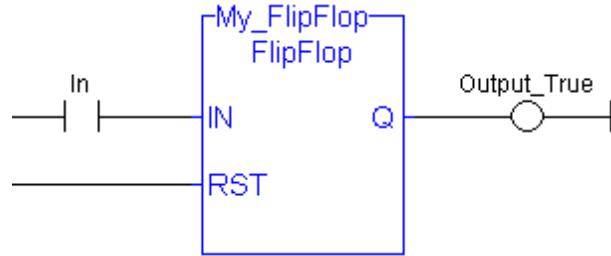

2.2.1.7 IL Language

(* *MyFlipFlop* is declared as an instance of FLIPFLOP function block *)
Op1: CAL MyFlipFlop (IN, RST)
FFLD MyFlipFlop.Q
ST Q1

See also

R S SR

2.2.2 F_TRIG

Function Block - Falling pulse detection

2.2.2.1 Inputs

CLK : BOOL Boolean signal

2.2.2.2 Outputs

Q : BOOL TRUE when the input changes from TRUE to FALSE



2.2.2.3 Truth table

CLK	CLK prev	Q
0	0	0
0	1	1
1	0	0
1	1	0

2.2.2.4 Remarks

Although]P[and]N[contacts can be used in FFLD language, it is recommended to use declared instances of R_TRIG or F_TRIG function blocks in order to avoid contingencies during an Online Change.

2.2.2.5 ST Language


(* *MyTrigger* is declared as an instance of F_TRIG function block *)
MyTrigger (CLK);

```
Q := MyTrigger.Q;
```

2.2.2.6 FBD Language



2.2.2.7 FFID Language

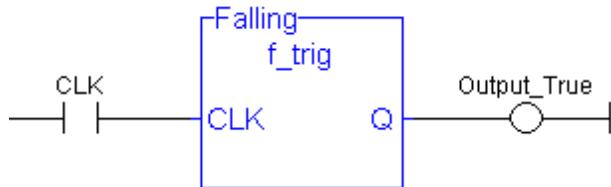

2.2.2.8 IL Language:

```
(* MyTrigger is declared as an instance of F_TRIG function block *)
Op1: CAL MyTrigger (CLK)
FFLD MyTrigger.Q
ST Q
```

See also

R_TRIG

2.2.3 NOT

Operator - Performs a boolean negation of the input.

2.2.3.1 Inputs

IN : BOOL Boolean value

2.2.3.2 Outputs

Q : BOOL Boolean negation of the input

2.2.3.3 Truth table

IN	Q
0	1
1	0

2.2.3.4 Remarks

In FBD language, the block "NOT" can be used. Alternatively, you can use a link terminated by a "o" negation. In FFID language, negated contacts and coils can be used. In IL language, the "N" modifier can be used with instructions FFLD, AND, OR, XOR and ST. It represents a negation of the operand. In ST language, NOT can be followed by a complex boolean expression between parentheses.

2.2.3.5 ST Language

```
Q := NOT IN;
Q := NOT (IN1 OR IN2);
```

2.2.3.6 FBD Language

(* explicit use of the "NOT" block *)




(* use of a negated link: Q is IN1 AND NOT IN2 *)




2.2.3.7 FFLD Language

(* Negated contact: Q is: IN1 AND NOT IN2 *)

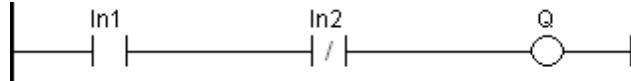

(* Negated coil: Q is NOT (IN1 AND IN2) *)

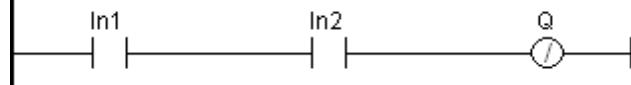

2.2.3.8 IL Language:

Op1: FFLDN IN1

 OR IN2

 ST Q (* Q is equal to: (NOT IN1) OR IN2 *)

Op2: FFLD IN1

 AND IN2

 STN Q (* Q is equal to: NOT (IN1 AND IN2) *)

See also

AND OR XOR

2.2.4 R

Operator - Force a boolean output to FALSE.

2.2.4.1 Inputs

RESET : BOOL Condition

2.2.4.2 Outputs

Q : BOOL Output to be forced

2.2.4.3 Truth table

RESET	Q prev	Q
0	0	0
0	1	1
1	0	0
1	1	0

2.2.4.4 Remarks

S and R operators are available as standard instructions in the IL language. In FFLD languages they are represented by (S) and (R) coils. In FBD language, you can use (S) and (R) coils, but you must prefer RS and SR function blocks. Set and reset operations are not available in ST language.

2.2.4.5 ST Language


Not available.

2.2.4.6 FBD Language

Not available. Use RS or SR function blocks.

2.2.4.7 FFLD Language

(* use of "R" coil *)

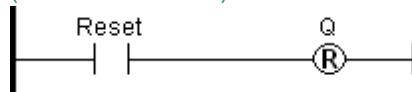

2.2.4.8 IL Language:

Op1: FFLD RESET

R Q (* Q is forced to FALSE if RESET is TRUE *)
(* Q is unchanged if RESET is FALSE *)

See also

S RS SR

2.2.5 RS

Function Block - Reset dominant bistable.

2.2.5.1 Inputs

SET : BOOL Condition for forcing to TRUE
RESET1 : BOOL Condition for forcing to FALSE (highest priority command)

2.2.5.2 Outputs

Q1 : BOOL Output to be forced

2.2.5.3 Truth table

SET	RESET1	Q1 prev	Q1
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	0
1	1	1	0

2.2.5.4 Remarks

The output is unchanged when both inputs are FALSE. When both inputs are TRUE, the output is forced to FALSE (reset dominant).


2.2.5.5 ST Language

```
(* MyRS is declared as an instance of RS function block *)
MyRS (SET, RESET1);
Q1 := MyRS.Q1;
```

2.2.5.6 FBD Language



2.2.5.7 FFLD Language

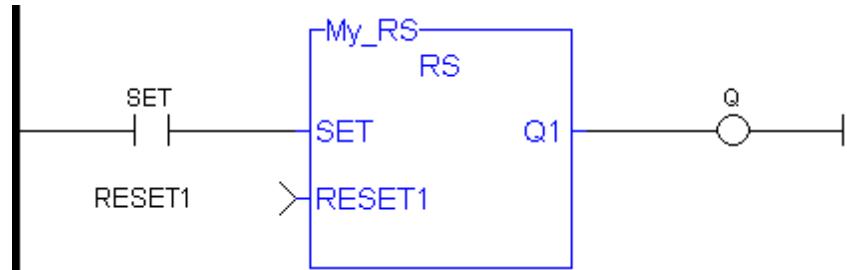

2.2.5.8 IL Language:

```
(* MyRS is declared as an instance of RS function block *)
Op1: CAL MyRS (SET, RESET1)
      FFLD MyRS.Q1
      ST Q1
```

See also

R S SR

2.2.6 R_TRIG

Function Block - Rising pulse detection

2.2.6.1 Inputs

CLK : BOOL Boolean signal

2.2.6.2 Outputs

Q : BOOL TRUE when the input changes from FALSE to TRUE



2.2.6.3 Truth table

CLK	CLK prev	Q
0	0	0
0	1	0
1	0	1
1	1	0

2.2.6.4 Remarks


Although]P[and]N[contacts can be used in FFLD language, it is recommended to use declared instances of R_TRIG or F_TRIG function blocks in order to avoid contingencies during an Online Change.

2.2.6.5 ST Language

(* MyTrigger is declared as an instance of R_TRIG function block *)


```
MyTrigger (CLK);
Q := MyTrigger.Q;
```

2.2.6.6 FBD Language

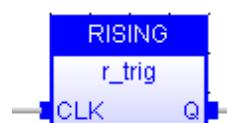

2.2.6.7 FFLD Language

(* the input signal is the rung - the rung is the output *)

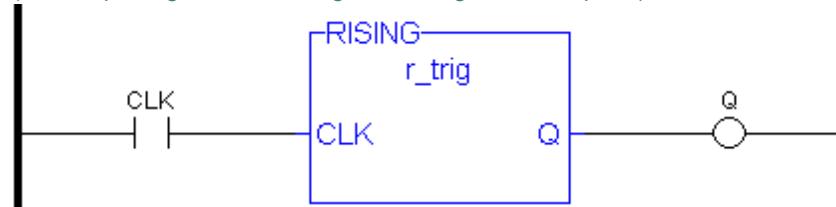

2.2.6.8 IL Language:

(* MyTrigger is declared as an instance of R_TRIG function block *)

```
Op1: CAL MyTrigger (CLK)
FFLD MyTrigger.Q
ST Q
```

See also

F_TRIG

2.2.7 S

Operator - Force a boolean output to TRUE.

2.2.7.1 Inputs

SET : BOOL Condition

2.2.7.2 Outputs

Q : BOOL Output to be forced

2.2.7.3 Truth table

SET	Q prev	Q
0	0	0
0	1	1
1	0	1
1	1	1

2.2.7.4 Remarks

S and R operators are available as standard instructions in the IL language. In FFLD languages they are represented by (S) and (R) coils. In FBD language, you can use (S) and (R) coils, but you must prefer RS and SR function blocks. Set and reset operations are not available in ST language.

2.2.7.5 ST Language

Not available.

2.2.7.6 FBD Language

Not available. Use RS or SR function blocks.

2.2.7.7 FFLD Language

(* use of "S" coil *)



2.2.7.8 IL Language:

Op1: FFLD SET

S Q (* Q is forced to TRUE if SET is TRUE *)
(* Q is unchanged if SET is FALSE *)

See also

R RS SR

2.2.8 SEMA

Function Block - Semaphore.

2.2.8.1 Inputs

CLAIM : BOOL Takes the semaphore
RELEASE : BOOL Releases the semaphore

2.2.8.2 Outputs

BUSY : BOOL True if semaphore is busy

2.2.8.3 Remarks

The function block implements the following algorithm:

```

BUSY := mem;
if CLAIM then
    mem := TRUE;
else if RELEASE then
    BUSY := FALSE;
    mem := FALSE;
end_if;

```

In FFID language, the input rung is the CLAIM command. The output rung is the BUSY output signal.


2.2.8.4 ST Language

```
(* MySema is a declared instance of SEMA function block *)
MySema (CLAIM, RELEASE);
BUSY := MyBlinker.BUSY;
```

2.2.8.5 FBD Language



2.2.8.6 FFID Language

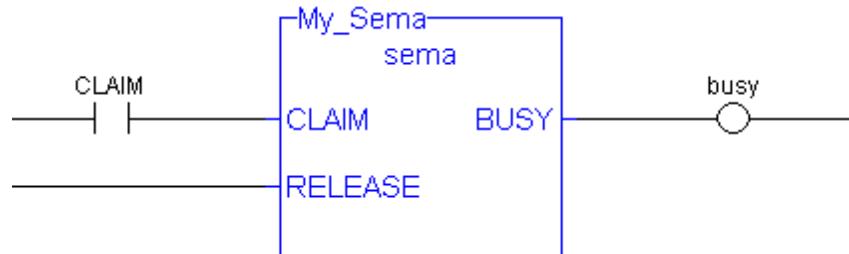

2.2.8.7 IL Language:

```
(* MySema is a declared instance of SEMA function block *)
Op1: CAL MySema (CLAIM, RELEASE)
      FFID MyBlinker.BUSY
      ST BUSY
```

2.2.9 SR

Function Block - Set dominant bistable.

2.2.9.1 Inputs

SET1 : BOOL Condition for forcing to TRUE (highest priority command)
RESET : BOOL Condition for forcing to FALSE

2.2.9.2 Outputs

Q1 : BOOL Output to be forced

2.2.9.3 Truth table

SET1	RESET	Q1 prev	Q1
0	0	0	0
0	0	1	1
0	1	0	0
0	1	1	0
1	0	0	1
1	0	1	1
1	1	0	1
1	1	1	1


2.2.9.4 Remarks

The output is unchanged when both inputs are FALSE. When both inputs are TRUE, the output is forced to TRUE (set dominant).

2.2.9.5 ST Language


(* MySR is declared as an instance of SR function block *)
 MySR (SET1, RESET);
 Q1 := MySR.Q1;

2.2.9.6 FBD Language

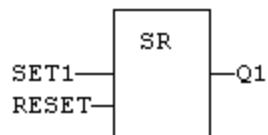

2.2.9.7 FFLD Language

(* the SET1 command is the rung - the rung is the output *)

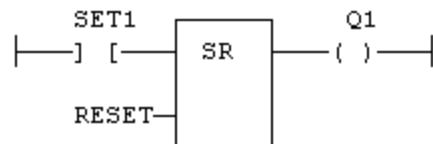

2.2.9.8 IL Language:

(* MySR is declared as an instance of SR function block *)
 Op1: CAL MySR (SET1, RESET)
 FFLD MySR.Q1
 ST Q1

See also

R S RS

2.2.10 XOR XORN

Operator - Performs an exclusive OR of all inputs.

2.2.10.1 Inputs

IN1 : BOOL First boolean input
 IN2 : BOOL Second boolean input

2.2.10.2 Outputs

Q : BOOL Exclusive OR of all inputs

2.2.10.3 Truth table

IN1	IN2	Q
0	0	0
0	1	1
1	0	1
1	1	0


2.2.10.4 Remarks

The block is called "=1" in FBD and FFID languages. In IL language, the XOR instruction performs an exclusive OR between the current result and the operand. The current result must be boolean. The XORN instruction performs an exclusive between the current result and the boolean negation of the operand.

2.2.10.5 ST Language


Q := IN1 XOR IN2;
 Q := IN1 XOR IN2 XOR IN3;

2.2.10.6 FBD Language

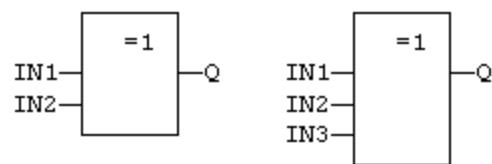

2.2.10.7 FFID Language

(* First input is the rung. The rung is the output *)

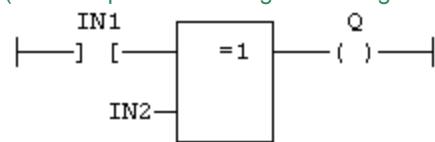

2.2.10.8 IL Language

Op1: FFID IN1
 XOR IN2
 ST Q (* Q is equal to: IN1 XOR IN2 *)
 Op2: FFID IN1
 XORN IN2
 ST Q (* Q is equal to: IN1 XOR (NOT IN2) *)

See also

AND OR NOT

2.3 Arithmetic operations

Below are the standard operators that perform arithmetic operations:

+	addition
-	subtraction
*	multiplication
/	division
- (NEG)	integer negation (unary operator)

Below are the standard functions that perform arithmetic operations:

MIN	get the minimum of two integers or an ANY
MAX	get the maximum of two integers or an ANY
LIMIT	bound an integer to low and high limits or an ANY
MOD	modulo
ODD	test if an integer is odd
SetWithin	Force a value when within an interval

2.3.1 + ADD

Operator - Performs an addition of all inputs.

2.3.1.1 Inputs

IN1 : ANY First input
 IN2 : ANY Second input

2.3.1.2 Outputs

Q : ANY Result: IN1 + IN2

2.3.1.3 Remarks

All inputs and the output must have the same type. In FBD language, the block can have up to 16 inputs. In FFID language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the ADD instruction performs an addition between the current result and the operand. The current result and the operand must have the same type.


The addition can be used with strings. The result is the concatenation of the input strings.

2.3.1.4 ST Language

Q := IN1 + IN2;
 MyString := 'He' + 'l' + 'o'; (* MyString is equal to 'Hello' *)


2.3.1.5 FBD Language

(* the block can have up to 16 inputs *)

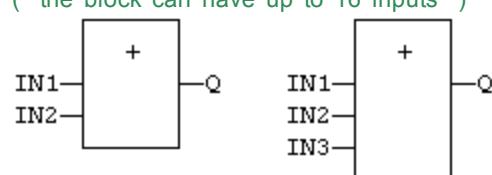

2.3.1.6 FFLD Language

(* The addition is executed only if EN is TRUE *)
(* ENO is equal to EN *)

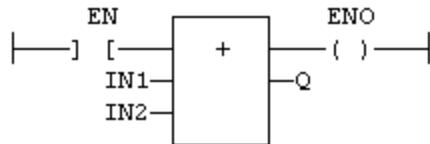

2.3.1.7 IL Language:

Op1: FFLD IN1
 ADD IN2
 ST Q (* Q is equal to: IN1 + IN2 *)
 Op2: FFLD IN1
 ADD IN2
 ADD IN3
 ST Q (* Q is equal to: IN1 + IN2 + IN3 *)

See also

- * /

2.3.2 / DIV

Operator - Performs a division of inputs.

2.3.2.1 Inputs

IN1 : ANY_NUM First input
 IN2 : ANY_NUM Second input

2.3.2.2 Outputs

Q : ANY_NUM Result: IN1 / IN2


2.3.2.3 Remarks

All inputs and the output must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the DIV instruction performs a division between the current result and the operand. The current result and the operand must have the same type.

2.3.2.4 ST Language


Q := IN1 / IN2;

2.3.2.5 FBD Language

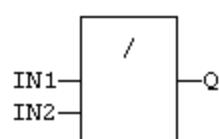

2.3.2.6 FFLD Language

(* The division is executed only if EN is TRUE *)
(* ENO is equal to EN *)

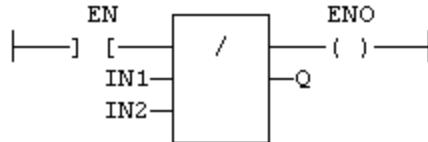

2.3.2.7 IL Language:

Op1: FFLD IN1
 DIV IN2
 ST Q (* Q is equal to: IN1 / IN2 *)
 Op2: FFLD IN1
 DIV IN2
 DIV IN3
 ST Q (* Q is equal to: IN1 / IN2 / IN3 *)

See also

+ - *

2.3.3 NEG -

Operator - Performs an integer negation of the input.

2.3.3.1 Inputs

IN : DINT Integer value

2.3.3.2 Outputs

Q : DINT Integer negation of the input

2.3.3.3 Truth table (examples)

IN	Q
0	0
1	-1
-123	123

2.3.3.4 Remarks

In FBD and FFLD language, the block "NEG" can be used.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

This feature is not available in IL language. In ST language, "-" can be followed by a complex boolean expression between parentheses.

2.3.3.5 ST Language


```
Q := -IN;
Q := - (IN1 + IN2);
```

2.3.3.6 FBD Language



2.3.3.7 FFLD Language

(* The negation is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

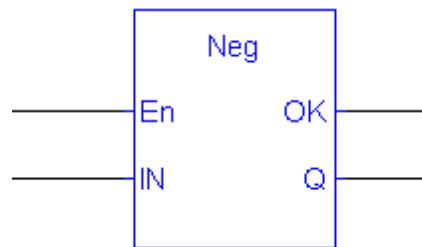

2.3.3.8 IL Language

Not available

2.3.4 LIMIT

Function - Bounds an integer between low and high limits.


2.3.4.1 Inputs

IMIN : DINT Low bound
 IN : DINT Inputvalue
 IMAX : DINT High bound

2.3.4.2 Outputs

Q : DINT IMIN if IN < IMIN; IMAX if IN > IMAX; IN otherwise

2.3.4.3 Function diagram

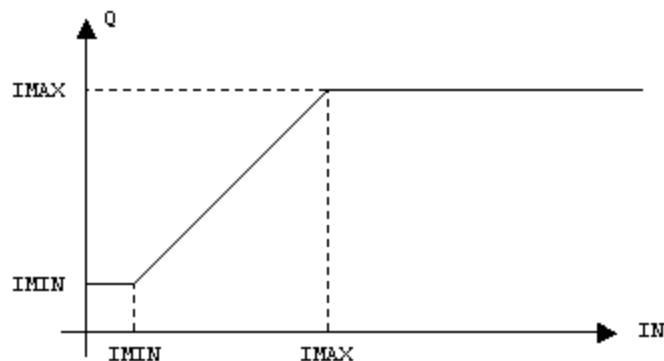


2.3.4.4 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. Other inputs are operands of the function, separated by a coma.

2.3.4.5 ST Language

Q := LIMIT (IMIN, IN, IMAX);


2.3.4.6 FBD Language

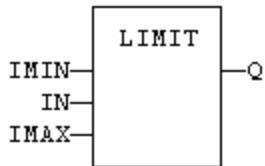

2.3.4.7 FFLD Language

(* The comparison is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

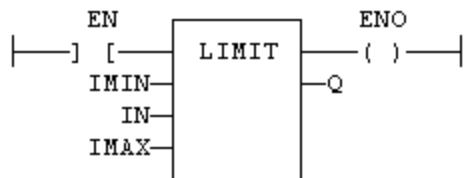

2.3.4.8 IL Language:

Op1: FFLD IMIN
LIMIT IN, IMAX
ST Q

See also

MIN MAX MOD ODD

2.3.5 MAX

Function - Get the maximum of two integers.

2.3.5.1 Inputs

IN1 : DINT First input
IN2 : DINT Second input

2.3.5.2 Outputs

Q : DINT IN1 if IN1 > IN2; IN2 otherwise


2.3.5.3 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.3.5.4 ST Language


Q := MAX (IN1, IN2);

2.3.5.5 FBD Language

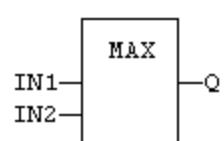

2.3.5.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)
(* ENO has the same value as EN *)

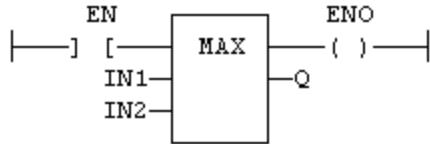

2.3.5.7 IL Language:

Op1: FFLD IN1
MAX IN2
ST Q (* Q is the maximum of IN1 and IN2 *)

See also

MIN LIMIT MOD ODD

2.3.6 MIN

Function - Get the minimum of two integers.

2.3.6.1 Inputs

IN1 : DINT First input
IN2 : DINT Second input

2.3.6.2 Outputs

Q : DINT IN1 if IN1 < IN2; IN2 otherwise


2.3.6.3 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.3.6.4 ST Language


Q := MIN (IN1, IN2);

2.3.6.5 FBD Language

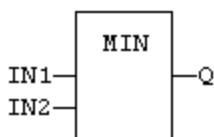

2.3.6.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)
(* ENO has the same value as EN *)

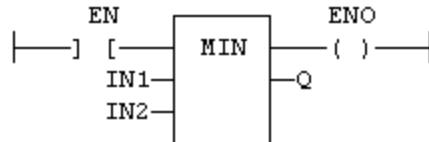

2.3.6.7 IL Language:

Op1: FFLD IN1

MIN IN2

ST Q (* Q is the minimum of IN1 and IN2 *)

See also

MAX LIMIT MOD ODD

2.3.7 MOD / MODR / MODLR

Function - Calculation of modulo.

Inputs	Function			Description
	MOD	MODR	MODLR	
IN	DINT	REAL	LREAL	Input value
BASE	DINT	REAL	LREAL	Base of the modulo

Output	Function			Description
	MOD	MODR	MODLR	
Q	DINT	REAL	LREAL	Modulo: rest of the integer division (IN / BASE)


2.3.7.1 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.3.7.2 ST Language

Q := MOD (IN, BASE);


2.3.7.3 FBD Language

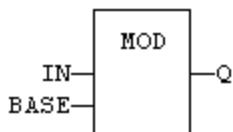

2.3.7.4 FFLD Language

(* The comparison is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

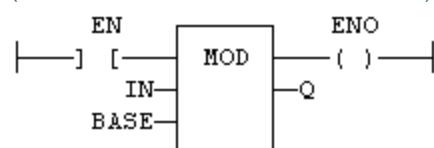

2.3.7.5 IL Language

Op1: FFID IN
MOD BASE
ST Q (* Q is the rest of integer division: IN / BASE *)

See also

MIN MAX LIMIT ODD

2.3.8 * MUL

Operator - Performs a multiplication of all inputs.

2.3.8.1 Inputs

IN1 : ANY_NUM First input
IN2 : ANY_NUM Second input

2.3.8.2 Outputs

Q : ANY_NUM Result: IN1 * IN2

2.3.8.3 Remarks


All inputs and the output must have the same type. In FBD language, the block can have up to 16 inputs. In FFID language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the MUL instruction performs a multiplication between the current result and the operand. The current result and the operand must have the same type.

2.3.8.4 ST Language

Q := IN1 * IN2;

2.3.8.5 FBD Language


(* the block can have up to 16 inputs *)

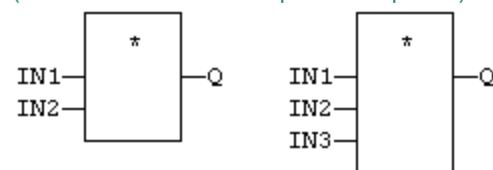

2.3.8.6 FFID Language

(* The multiplication is executed only if EN is TRUE *)

(* ENO is equal to EN *)

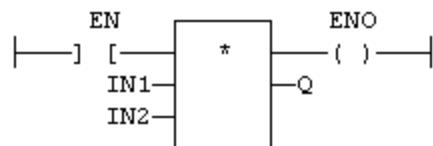

2.3.8.7 IL Language:

```

Op1: FFLD IN1
      MUL IN2
      ST Q (* Q is equal to: IN1 * IN2 *)
Op2: FFLD IN1
      MUL IN2
      MUL IN3
      ST Q (* Q is equal to: IN1 * IN2 * IN3 *)

```

See also

+ - /

2.3.9 ODD

Function - Test if an integer is odd

2.3.9.1 Inputs

IN : DINT Input value

2.3.9.2 Outputs


Q : BOOL TRUE if IN is odd. FALSE if IN is even.

2.3.9.3 Remarks


In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the function. In IL language, the input must be loaded before the function call.

2.3.9.4 ST Language

Q := ODD (IN);

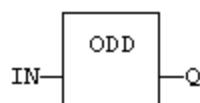2.3.9.5 FBD Language**2.3.9.6 FFLD Language**

(* The function is executed only if EN is TRUE *)

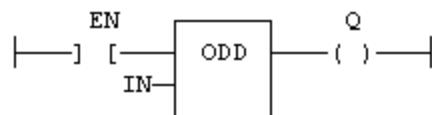**2.3.9.7 IL Language:**

```

Op1: FFLD IN
      ODD
      ST Q (* Q is TRUE if IN is odd *)

```

See also

MIN MAX LIMIT MOD

2.3.10 - SUB

Operator - Performs a subtraction of inputs.

2.3.10.1 Inputs

IN1 : ANY_NUM / TIME First input
 IN2 : ANY_NUM / TIME Second input

2.3.10.2 Outputs

Q : ANY_NUM / TIME Result: IN1 - IN2


2.3.10.3 Remarks

All inputs and the output must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the SUB instruction performs a subtraction between the current result and the operand. The current result and the operand must have the same type.

2.3.10.4 ST Language


Q := IN1 - IN2;

2.3.10.5 FBD Language

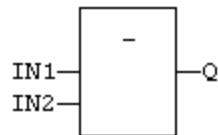

2.3.10.6 FFLD Language

(* The subtraction is executed only if EN is TRUE *)
 (* ENO is equal to EN *)

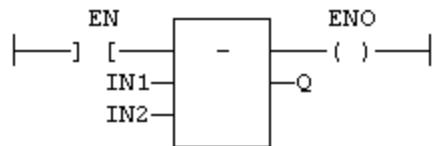

2.3.10.7 IL Language:

Op1: FFLD IN1
 SUB IN2
 ST Q (* Q is equal to: IN1 - IN2 *)
 Op2: FFLD IN1
 SUB IN2
 SUB IN3
 ST Q (* Q is equal to: IN1 - IN2 - IN3 *)

See also

+ * /

2.4 Comparison Operations

2.4.1 CMP

Function Block - Comparison with detailed outputs for integer inputs

2.4.1.1 Inputs

IN1 : DINT First value
IN2 : DINT Second value

2.4.1.2 Outputs

LT : BOOL TRUE if IN1 < IN2
EQ : BOOL TRUE if IN1 = IN2
GT : BOOL TRUE if IN1 > IN2


2.4.1.3 Remarks

In FFLD language, the rung input (EN) validates the operation. The rung output is the result of "LT" (lower than) comparison.

2.4.1.4 ST Language


(* MyCmp is declared as an instance of CMP function block *)
MyCmp (IN1, IN2);
bLT := MyCmp.LT;
bEQ := MyCmp.EQ;
bGT := MyCmp.GT;

2.4.1.5 FBD Language

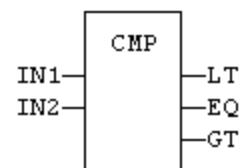

2.4.1.6 FFLD Language

(* the comparison is performed only if EN is TRUE *)

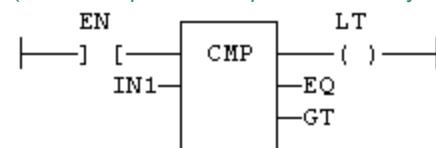

2.4.1.7 IL Language:

(* MyCmp is declared as an instance of CMP function block *)

```
Op1: CAL MyCmp (IN1, IN2)
      FFLD MyCmp.LT
      ST bLT
      FFLD MyCmp.EQ
      ST bEQ
      FFLD MyCmp.GT
      ST bGT
```

See also

> < >= <= = <>

2.4.2 >= GE

Operator - Test if first input is greater than or equal to second input.

2.4.2.1 Inputs

IN1 : ANY First input
IN2 : ANY Second input

2.4.2.2 Outputs

Q : BOOL TRUE if IN1 >= IN2

2.4.2.3 Remarks


Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the GE instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.

Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

2.4.2.4 ST Language


Q := IN1 >= IN2;

2.4.2.5 FBD Language

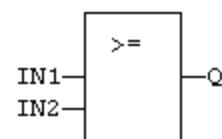

2.4.2.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

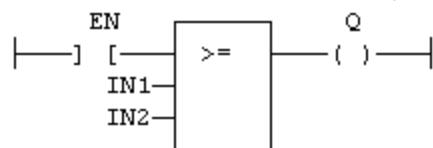

2.4.2.7 IL Language:

Op1: FFLD IN1
GE IN2
ST Q (* Q is true if IN1 >= IN2 *)

See also

> < <= = <> CMP

2.4.3 > GT

Operator - Test if first input is greater than second input.

2.4.3.1 Inputs

IN1 : ANY First input
 IN2 : ANY Second input

2.4.3.2 Outputs

Q : BOOL TRUE if IN1 > IN2

2.4.3.3 Remarks


Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the GT instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.

Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

2.4.3.4 ST Language


Q := IN1 > IN2;

2.4.3.5 FBD Language

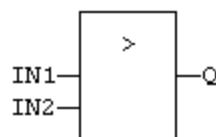

2.4.3.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

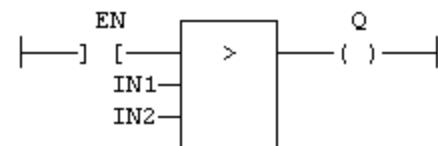

2.4.3.7 IL Language:

Op1: FFLD IN1
 GT IN2
 ST Q (* Q is true if IN1 > IN2 *)

See also

< >= <= = <> CMP

2.4.4 = EQ

Operator - Test if first input is equal to second input.

2.4.4.1 Inputs

IN1 : ANY First input
 IN2 : ANY Second input

2.4.4.2 Outputs

$Q : \text{BOOL} \quad \text{TRUE if } \text{IN1} = \text{IN2}$

2.4.4.3 Remarks

Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the EQ instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.


Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

Equality comparisons cannot be used with TIME variables. The reason is that the timer actually has the resolution of the target cycle and test can be unsafe as some values can never be reached.

2.4.4.4 ST Language


$Q := \text{IN1} = \text{IN2};$

2.4.4.5 FBD Language

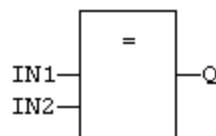

2.4.4.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

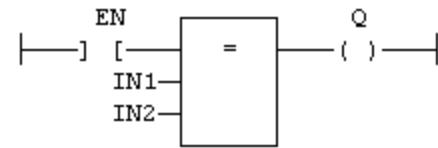

2.4.4.7 IL Language:

Op1: FFLD IN1
EQ IN2
ST Q (* Q is true if IN1 = IN2 *)

See also

> < >= <= <> CMP

2.4.5 <> NE

Operator - Test if first input is not equal to second input.

2.4.5.1 Inputs

IN1 : ANY First input
IN2 : ANY Second input

2.4.5.2 Outputs

$Q : \text{BOOL} \quad \text{TRUE if } \text{IN1} \neq \text{IN2}$

2.4.5.3 Remarks

Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the NE instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.


Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

Equality comparisons cannot be used with TIME variables. The reason is that the timer actually has the resolution of the target cycle and test can be unsafe as some values can never be reached

2.4.5.4 ST Language


`Q := IN1 <> IN2;`

2.4.5.5 FBD Language

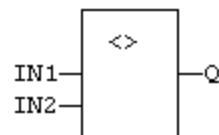

2.4.5.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

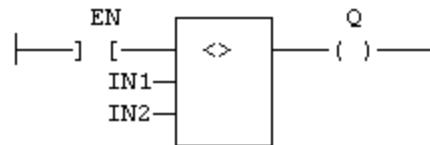

2.4.5.7 IL Language:

Op1: FFLD IN1

 NE IN2

 ST Q (* Q is true if IN1 is not equal to IN2 *)

See also

> < >= <= = CMP

2.4.6 <= LE

Operator - Test if first input is less than or equal to second input.

2.4.6.1 Inputs

IN1 : ANY First input

IN2 : ANY Second input

2.4.6.2 Outputs

Q : BOOL TRUE if IN1 <= IN2

2.4.6.3 Remarks


Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the LE instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.

Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

2.4.6.4 ST Language


`Q := IN1 <= IN2;`

2.4.6.5 FBD Language

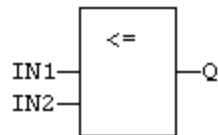

2.4.6.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

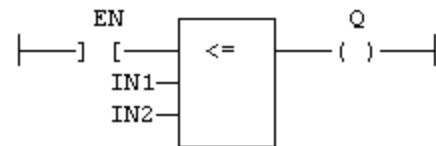

2.4.6.7 IL Language:

Op1: FFLD IN1
LE IN2
ST Q (* Q is true if IN1 <= IN2 *)

See also

> < >= = <> CMP

2.4.7 < LT

Operator - Test if first input is less than second input.

2.4.7.1 Inputs

IN1 : ANY First input
IN2 : ANY Second input

2.4.7.2 Outputs

Q : BOOL TRUE if IN1 < IN2

2.4.7.3 Remarks


Both inputs must have the same type. In FFLD language, the input rung (EN) enables the operation, and the output rung is the result of the comparison. In IL language, the LT instruction performs the comparison between the current result and the operand. The current result and the operand must have the same type.

Comparisons can be used with strings. In that case, the lexical order is used for comparing the input strings. For instance, "ABC" is less than "ZX" ; "ABCD" is greater than "ABC".

2.4.7.4 ST Language


`Q := IN1 < IN2;`

2.4.7.5 FBD Language

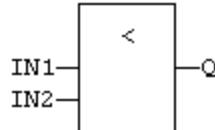

2.4.7.6 FFLD Language

(* The comparison is executed only if EN is TRUE *)

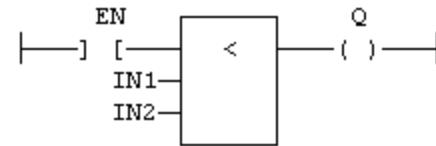

2.4.7.7 IL Language:

Op1: FFLD IN1
LT IN2
ST Q (* Q is true if IN1 < IN2 *)

See also

> >= <= = <> CMP

2.5 Type conversion functions

Below are the standard functions for converting a data into another data type:

ANY_TO_BOOL	converts to boolean
ANY_TO_SINT / ANY_TO_USINT	converts to small (8 bit) integer
ANY_TO_INT / ANY_TO_UINT	converts to 16 bit integer
ANY_TO_DINT / ANY_TO_UDINT	converts to integer (32 bit - default)
ANY_TO_LINT / ANY_TO_ULINT	converts to long (64 bit) integer
ANY_TO_REAL	converts to real
ANY_TO_LREAL	converts to double precision real
ANY_TO_TIME	converts to time
ANY_TO_STRING	converts to character string

Below are the standard functions performing conversions in BCD format (*):

BIN_TO_BCD	converts a binary value to a BCD value
BCD_TO_BIN	converts a BCD value to a binary value

(*) BCD conversion functions may not be supported by all targets.

2.5.1 ANY_TO_BOOL

Operator - Converts the input into boolean value.

2.5.1.1 Inputs

IN : ANY Input value

2.5.1.2 Outputs

Q : BOOL Value converted to boolean


2.5.1.3 Remarks

For DINT, REAL and TIME input data types, the result is FALSE if the input is 0. The result is TRUE in all other cases. For STRING inputs, the output is TRUE if the input string is not empty, and FALSE if the string is empty. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung is the result of the conversion. In IL Language, the ANY_TO_BOOL function converts the current result.

2.5.1.4 ST Language


Q := ANY_TO_BOOL (IN);

2.5.1.5 FBD Language

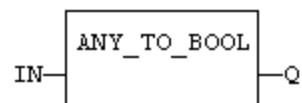

2.5.1.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
 (* The output rung is the result of the conversion *)
 (* The output rung is FALSE if the EN is FALSE *)

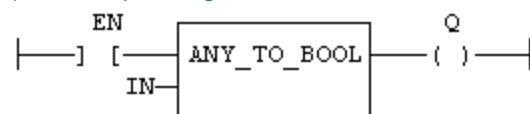

2.5.1.7 IL Language:

```
Op1: FFLD IN
      ANY_TO_BOOL
      ST Q
```

2.5.1.8 See also

ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_LINT ANY_TO_REAL
 ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.2 ANY_TO_DINT / ANY_TO_UDINT

Operator - Converts the input into integer value (can be unsigned with ANY_TO_UDINT).

2.5.2.1 Inputs

IN : ANY Input value

2.5.2.2 Outputs

Q : DINT Value converted to integer


2.5.2.3 Remarks

For BOOL input data types, the output is 0 or 1. For REAL input data type, the output is the integer part of the input real. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_DINT function converts the current result.

2.5.2.4 ST Language

`Q := ANY_TO_DINT (IN);`


2.5.2.5 FBD Language

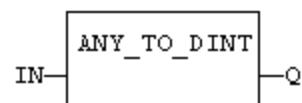

2.5.2.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

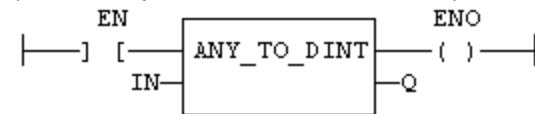

2.5.2.7 IL Language:

```
Op1: FFLD IN
      ANY_TO_DINT
      ST Q
```

2.5.2.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_LINT ANY_TO_REAL
ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.3 ANY_TO_INT / ANY_TO_UINT

Operator - Converts the input into 16 bit integer value (can be unsigned with ANY_TO_UINT).

2.5.3.1 Inputs

IN : ANY Input value

2.5.3.2 Outputs

Q : INT Value converted to 16 bit integer


2.5.3.3 Remarks

For BOOL input data types, the output is 0 or 1. For REAL input data type, the output is the integer part of the input real. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_INT function converts the current result.

2.5.3.4 ST Language


```
Q := ANY_TO_INT (IN);
```

2.5.3.5 FBD Language

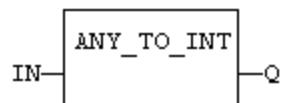

2.5.3.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

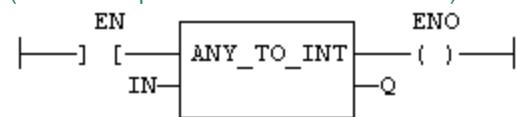

2.5.3.7 IL Language:

```
Op1: FFLD IN
      ANY_TO_INT
      ST Q
```

2.5.3.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_DINT ANY_TO_LINT ANY_TO_REAL
ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.4 ANY_TO_LINT / ANY_TO_ULINT

Operator - Converts the input into long (64 bit) integer value (can be unsigned with ANY_TO_ULINT).

2.5.4.1 Inputs

IN : ANY Input value

2.5.4.2 Outputs

Q : LINT Value converted to long (64 bit) integer

2.5.4.3 Remarks


For BOOL input data types, the output is 0 or 1. For REAL input data type, the output is the integer part of the input real. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO)

keeps the same value as the input rung. In IL Language, the ANY_TO_LINT function converts the current result.

2.5.4.4 ST Language

```
Q := ANY_TO_LINT (IN);
```


2.5.4.5 FBD Language

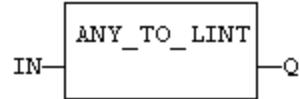

2.5.4.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

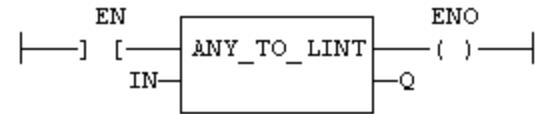

2.5.4.7 IL Language:

```
Op1: FFLD IN
      ANY_TO_LINT
      ST Q
```

2.5.4.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_REAL
ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.5 ANY_TO_LREAL

Operator - Converts the input into double precision real value.

2.5.5.1 Inputs

IN : ANY Input value

2.5.5.2 Outputs

Q : LREAL Value converted to double precision real


2.5.5.3 Remarks

For BOOL input data types, the output is 0.0 or 1.0. For DINT input data type, the output is the same number. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0.0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_LREAL function converts the current result.

2.5.5.4 ST Language


```
Q := ANY_TO_LREAL (IN);
```

2.5.5.5 FBD Language

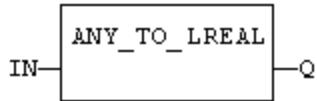

2.5.5.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

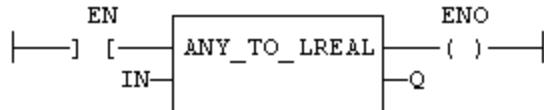

2.5.5.7 IL Language:

```
Op1: FFID IN
      ANY_TO_LREAL
      ST Q
```

2.5.5.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_LINT
 ANY_TO_REAL ANY_TO_TIME ANY_TO_STRING

2.5.6 ANY_TO_REAL

Operator - Converts the input into real value.

2.5.6.1 Inputs

IN : ANY Input value

2.5.6.2 Outputs

Q : REAL Value converted to real


2.5.6.3 Remarks

For BOOL input data types, the output is 0.0 or 1.0. For DINT input data type, the output is the same number. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0.0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_REAL function converts the current result.

2.5.6.4 ST Language


Q := ANY_TO_REAL (IN);

2.5.6.5 FBD Language

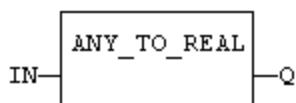

2.5.6.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

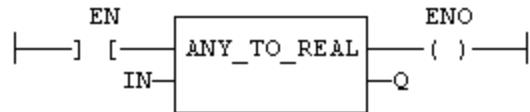

2.5.6.7 IL Language:

Op1: FFLD IN
 ANY_TO_REAL
 ST Q

2.5.6.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_LINT
ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.7 ANY_TO_TIME

Operator - Converts the input into time value.

2.5.7.1 Inputs

IN : ANY Input value

2.5.7.2 Outputs

Q : TIME Value converted to time


2.5.7.3 Remarks

For BOOL input data types, the output is t#0 ms or t#1 ms. For DINT or REAL input data type, the output is the time represented by the input number as a number of milliseconds. For STRING inputs, the output is the time represented by the string, or t#0 ms if the string does not represent a valid time. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_TIME function converts the current result.

2.5.7.4 ST Language


Q := ANY_TO_TIME (IN);

2.5.7.5 FBD Language

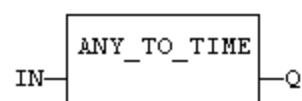

2.5.7.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

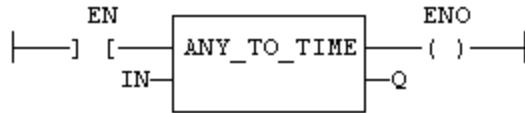

2.5.7.7 IL Language:

```
Op1: FFLD IN
ANY_TO_TIME
ST Q
```

2.5.7.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_LINT
ANY_TO_REAL ANY_TO_LREAL ANY_TO_STRING

2.5.8 ANY_TO_SINT / ANY_TO_USINT

Operator - Converts the input into a small (8 bit) integer value (can be unsigned with ANY_TO_USINT).

2.5.8.1 Inputs

IN : ANY Input value

2.5.8.2 Outputs

Q : SINT Value converted to a small (8 bit) integer


2.5.8.3 Remarks

For BOOL input data types, the output is 0 or 1. For REAL input data type, the output is the integer part of the input real. For TIME input data types, the result is the number of milliseconds. For STRING inputs, the output is the number represented by the string, or 0 if the string does not represent a valid number. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL Language, the ANY_TO_SINT function converts the current result.

2.5.8.4 ST Language


Q := ANY_TO_SINT (IN);

2.5.8.5 FBD Language

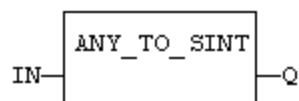

2.5.8.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

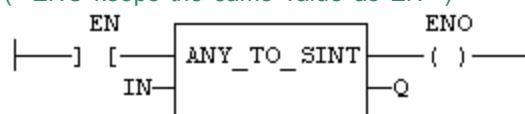

2.5.8.7 IL Language

```
Op1: FFID IN
      ANY_TO_SINT
      ST Q
```

2.5.8.8 See also

ANY_TO_BOOL ANY_TO_INT ANY_TO_DINT ANY_TO_LINT ANY_TO_REAL
 ANY_TO_LREAL ANY_TO_TIME ANY_TO_STRING

2.5.9 ANY_TO_STRING

Operator - Converts the input into string value.

2.5.9.1 Inputs

IN : ANY Input value

2.5.9.2 Outputs

Q : STRING Value converted to string


2.5.9.3 Remarks

For BOOL input data types, the output is '1' or '0' for TRUE and FALSE respectively. For DINT, REAL or TIME input data types, the output is the string representation of the input number. It is a number of milliseconds for TIME inputs. In FFLD language, the conversion is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL language, the ANY_TO_STRING function converts the current result.

2.5.9.4 ST Language


Q := ANY_TO_STRING (IN);

2.5.9.5 FBD Language

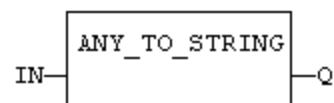

2.5.9.6 FFLD Language

(* The conversion is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

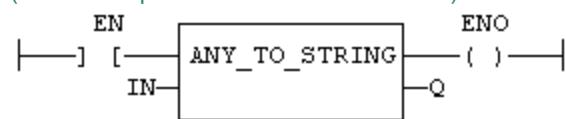

2.5.9.7 IL Language:

```
Op1: FFID IN
      ANY_TO_STRING
      ST Q
```

2.5.9.8 See also

ANY_TO_BOOL ANY_TO_SINT ANY_TO_INT ANY_TO_DINT ANY_TO_LINT
 ANY_TO_REAL ANY_TO_LREAL ANY_TO_TIME

2.5.10 NUM_TO_STRING

Function- Converts a number into string value.

2.5.10.1 Inputs

IN : ANY Input number.
 WIDTH : DINT Wished length for the output string (see remarks)
 DIGITS : DINT Number of digits after decimal point

2.5.10.2 Outputs

Q : STRING Value converted to string.

2.5.10.3 Remarks

This function converts any numerical value to a string. Unlike the ANY_TO_STRING function, it allows you to specify a wished length and a number of digits after the decimal points.

If WIDTH is 0, the string is formatted with the necessary length.

If WIDTH is greater than 0, the string is completed with leading blank characters in order to match the value of WIDTH.

If WIDTH is greater than 0, the string is completed with trailing blank characters in order to match the absolute value of WIDTH.

If DIGITS is 0 then neither decimal part nor point are added.

If DIGITS is greater than 0, the corresponding number of decimal digits are added. '0' digits are added if necessary

If the value is too long for the specified width, then the string is filled with '*' characters.

2.5.10.4 Examples

Q := NUM_TO_STRING (123.4, 8, 2); (* Q is ' 123.40' *)

Q := NUM_TO_STRING (123.4, -8, 2); (* Q is '123.40 ' *)

Q := NUM_TO_STRING (1.333333, 0, 2); (* Q is '1.33' *)

Q := NUM_TO_STRING (1234, 3, 0); (* Q is '***' *)

2.5.11 BCD_TO_BIN

Function - Converts a BCD (Binary Coded Decimal) value to a binary value

2.5.11.1 Inputs

IN : DINT Integer value in BCD

2.5.11.2 Outputs

Q : DINT Value converted to integer
 or 0 if IN is not a valid positive BCD value

2.5.11.3 Truth table (examples)

IN	Q
-2	0 (invalid)
0	0
16 (16#10)	10
15 (16#0F)	0 (invalid)

2.5.11.4 Remarks


The input must be positive and must represent a valid BCD value. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.5.11.5 ST Language


`Q := BCD_TO_BIN (IN);`

2.5.11.6 FBD Language

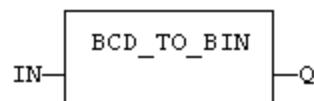

2.5.11.7 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

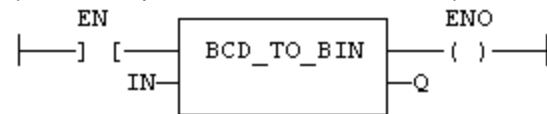

2.5.11.8 IL Language:

Op1: FFLD IN
 BCD_TO_BIN
 ST Q

See also

`BIN_TO_BCD`

2.5.12 BIN_TO_BCD

Function - Converts a binary value to a BCD (Binary Coded Decimal) value

2.5.12.1 Inputs

`IN : DINT Integer value`

2.5.12.2 Outputs

`Q : DINT Value converted to BCD
 or 0 if IN is less than 0`

2.5.12.3 Truth table (examples)

IN	Q
-2	0 (invalid)
0	0
10	16 (16#10)
22	34 (16#22)

2.5.12.4 Remarks


The input must be positive. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.5.12.5 ST Language


`Q := BIN_TO_BCD (IN);`

2.5.12.6 FBD Language

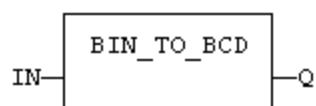

2.5.12.7 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

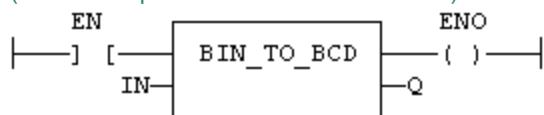

2.5.12.8 IL Language:

Op1: FFLD IN
 BIN_TO_BCD
 ST Q

See also

[BCD_TO_BIN](#)

2.6 Selectors

Below are the standard functions that perform data selection:

SEL	2 integer inputs
MUX4	4 integer inputs
MUX8	8 integer inputs

2.6.1 MUX4

Function - Select one of the inputs - 4 inputs.

2.6.1.1 Inputs

```

SELECT : DINT Selection command
IN1   : ANY First input
IN2   : ANY Second input
...
IN4   : ANY Last input

```

2.6.1.2 Outputs

Q : ANY IN1 or IN2 ... or IN4 depending on SELECT (see truth table)

2.6.1.3 Truth table

SELECT	Q
0	IN1
1	IN2
2	IN3
3	IN4
other	0


2.6.1.4 Remarks

In FFLD language, the input rung (EN) enables the selection. The output rung keeps the same state as the input rung. In IL language, the first parameter (selector) must be loaded in the current result before calling the function. Other inputs are operands of the function, separated by commas.

2.6.1.5 ST Language

$Q := \text{MUX4}(\text{SELECT}, \text{IN1}, \text{IN2}, \text{IN3}, \text{IN4});$


2.6.1.6 FBD Language

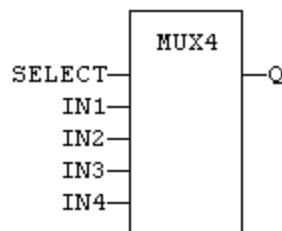

2.6.1.7 FFLD Language

(* the selection is performed only if EN is TRUE *)

(* ENO has the same value as EN *)

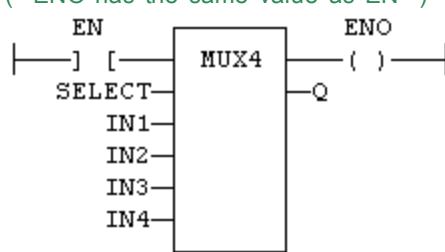

2.6.1.8 IL Language

```
Op1: FFLLD SELECT
      MUX4 IN1, IN2, IN3, IN4
      ST Q
```

See also

SEL MUX8

2.6.2 MUX8

Function - Select one of the inputs - 8 inputs.

2.6.2.1 Inputs

SELECT	:	DINT	Selection command
IN1	:	ANY	First input
IN2	:	ANY	Second input
...	:		
IN8	:	ANY	Last input

2.6.2.2 Outputs

Q : ANY IN1 or IN2 ... or IN8 depending on SELECT (see truth table)

2.6.2.3 Truth table

SELECT	Q
0	IN1
1	IN2
2	IN3
3	IN4
4	IN5
5	IN6
6	IN7
7	IN8
other	0


2.6.2.4 Remarks

In FFLLD language, the input rung (EN) enables the selection. The output rung keeps the same state as the input rung. In IL language, the first parameter (selector) must be loaded in the current result before calling the function. Other inputs are operands of the function, separated by commas.

2.6.2.5 ST Language


Q := MUX8 (SELECT, IN1, IN2, IN3, IN4, IN5, IN6, IN7, IN8);

2.6.2.6 FBD Language

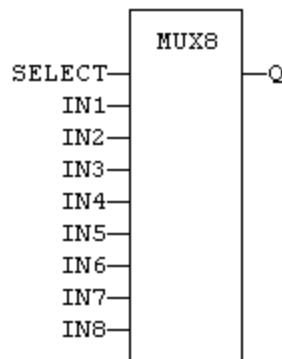

2.6.2.7 FFLD Language

(* the selection is performed only if EN is TRUE *)
 (* ENO has the same value as EN *)

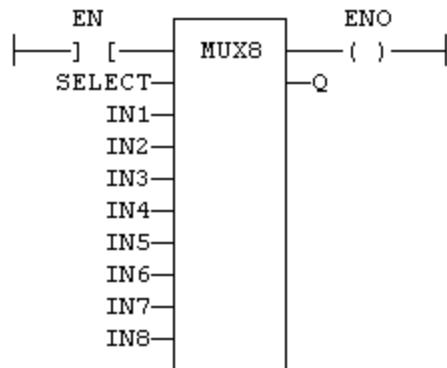

2.6.2.8 IL Language

Not available

```
Op1: FFLD  SELECT
      MUX8 IN1, IN2, IN3, IN4, IN5, IN6, IN7, IN8
      ST  Q
```

See also

SEL MUX4

2.6.3 SEL

Function - Select one of the inputs - 2 inputs.

2.6.3.1 Inputs

SELECT	:	BOOL	Selection command
IN1	:	ANY	First input
IN2	:	ANY	Second input

2.6.3.2 Outputs

Q : ANY IN1 if SELECT is FALSE; IN2 if SELECT is TRUE

2.6.3.3 Truth table

SELECT	Q
0	IN1
1	IN2


2.6.3.4 Remarks

In FFLD language, the selector command is the input rung. The output rung keeps the same state as the input rung. In IL language, the first parameter (selector) must be loaded in the current result before calling the function. Other inputs are operands of the function, separated by commas.

2.6.3.5 ST Language


`Q := SEL (SELECT, IN1, IN2);`

2.6.3.6 FBD Language

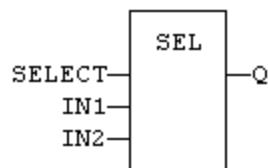

2.6.3.7 FFLD Language

(* the input rung is the selector *)
(* ENO has the same value as SELECT *)

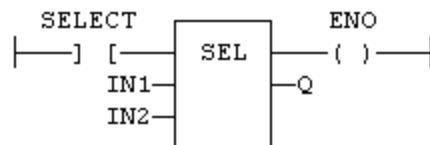

2.6.3.8 IL Language

Op1: FFLD SELECT
SEL IN1, IN2
ST Q

See also

MUX4 MUX8

2.7 Registers

Below are the standard functions for managing 8 bit to 32 bit registers:

SHL	shift left
SHR	shift right
ROL	rotation left
ROR	rotation right

Below are advanced functions for register manipulation:

MBShift	multibyte shift / rotate
---------	--------------------------

The following functions enable bit to bit operations on a 8 bit to 32 bit integers:

AND_MASK	boolean AND
OR_MASK	boolean OR
XOR_MASK	exclusive OR
NOT_MASK	boolean negation

The following functions enable to pack/unpack 8, 16 and 32 bit registers

LOBYTE	Get the lowest byte of a word
HIBYTE	Get the highest byte of a word
LOWORD	Get the lowest word of a double word
HIWORD	Get the highest word of a double word
MAKEWORD	Pack bytes to a word
MAKEDWORD	Pack words to a double word
PACK8	Pack bits in a byte
UNPACK8	Extract bits from a byte

The following functions provide bit access in 8 bit to 32 bit integers:

SETBIT	Set a bit in a register
TESTBIT	Test a bit of a register

The following functions have been deprecated. They are available for backwards compatibility only. The functions listed above should be used for all current and future development.

AND_WORD	AND_BYTE
OR_WORD	OR_BYTE
NOT_WORD	NOT_BYTE
XOR_WORD	XOR_BYTE
ROLW	RORW
ROLB	RORB
SHLW	SHRW
SHLB	SHRB

2.7.1 AND_MASK

Function - Performs a bit to bit AND between two integer values

2.7.1.1 Inputs

IN : ANY First input
 MSK : ANY Second input (AND mask)

2.7.1.2 Outputs

Q : ANY AND mask between IN and MSK inputs

2.7.1.3 Remarks

Arguments can be signed or unsigned integers from 8 to 32 bits.


In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the first parameter (IN) must

be loaded in the current result before calling the function. The other input is the operands of the function.

2.7.1.4 ST Language


```
Q := AND_MASK (IN, MSK);
```

2.7.1.5 FBD Language

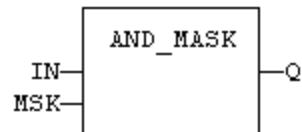

2.7.1.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO is equal to EN *)

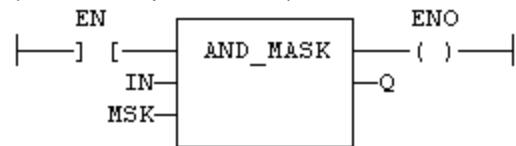

2.7.1.7 IL Language:

```
Op1: FFLD    IN
      AND_MASK MSK
      ST     Q
```

See also

OR_MASK XOR_MASK NOT_MASK

2.7.2 HIBYTE

Function - Get the most significant byte of a word

2.7.2.1 Inputs

IN : UINT 16 bit register

2.7.2.2 Outputs

Q : USINT Most significant byte

2.7.2.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.7.2.4 ST Language


```
Q := HIBYTE (IN);
```

2.7.2.5 FBD Language

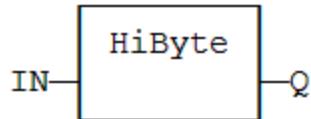

2.7.2.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

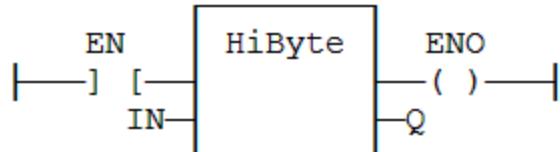

2.7.2.7 IL Language:

```
Op1: FFLD IN
      HIBYTE
      ST Q
```

See also

LOBYTE LOWORD HIWORD MAKEWORD MAKEDWORD

2.7.3 LOBYTE

Function - Get the less significant byte of a word

2.7.3.1 Inputs

IN : UINT 16 bit register

2.7.3.2 Outputs

Q : USINT Lowest significant byte

2.7.3.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.7.3.4 ST Language


Q := LOBYTE (IN);

2.7.3.5 FBD Language

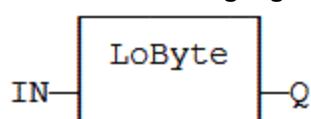

2.7.3.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

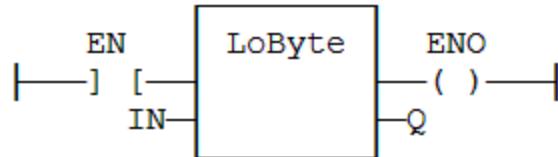

2.7.3.7 IL Language:

```
Op1: FFLD IN
      LOBYTE
      ST Q
```

See also

HIBYTE LOWORD HIWORD MAKEWORD MAKEDWORD

2.7.4 HIWORD

Function - Get the most significant word of a double word

2.7.4.1 Inputs

IN : UDINT 32 bit register

2.7.4.2 Outputs

Q : UINT Most significant word

2.7.4.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.7.4.4 ST Language


Q := HIWORD (IN);

2.7.4.5 FBD Language

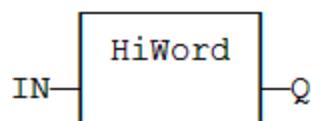

2.7.4.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

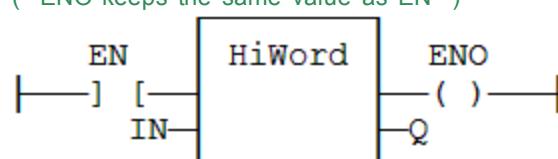

2.7.4.7 IL Language:

Op1: FFLLD IN
HIWORD
ST Q

See also

LOBYTE HIBYTE LOWORD MAKEWORD MAKEDWORD

2.7.5 LOWORD

Function - Get the less significant word of a double word

2.7.5.1 Inputs

IN : UDINT 32 bit register

2.7.5.2 Outputs

Q : UINT Lowest significant word

2.7.5.3 Remarks


In FFLLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.7.5.4 ST Language


Q := LOWORD (IN);

2.7.5.5 FBD Language

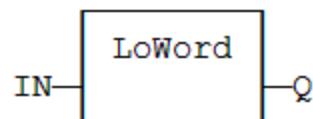

2.7.5.6 FFLLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

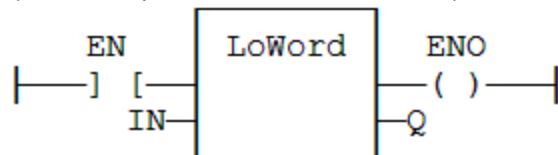

2.7.5.7 IL Language:

Op1: FFLLD IN
LOWORD
ST Q

See also

LOBYTE HIBYTE HIWORD MAKEWORD MAKEDWORD

2.7.6 MAKEDWORD

Function - Builds a double word as the concatenation of two words

2.7.6.1 Inputs

HI : USINT Highest significant word

LO : USINT Lowest significant word

2.7.6.2 Outputs

Q : UINT 32 bit register

2.7.6.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input must be loaded in the current result before calling the function.

2.7.6.4 ST Language

Q := MAKEDWORD (HI, LO);


2.7.6.5 FBD Language

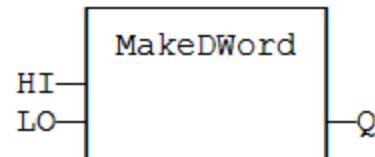

2.7.6.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

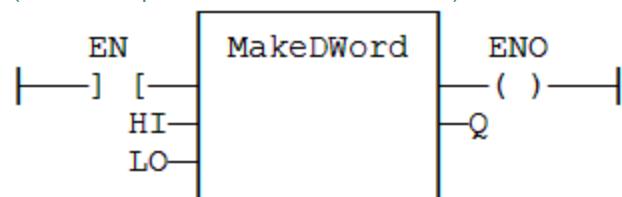

2.7.6.7 IL Language:

Op1: FFLD HI
MAKEDWORD LO
ST Q

See also

LOBYTE HIBYTE LOWORD HIWORD MAKEWORD

2.7.7 MAKEWORD

Function - Builds a word as the concatenation of two bytes

2.7.7.1 Inputs

HI : USINT Highest significant byte
 LO : USINT Lowest significant byte

2.7.7.2 Outputs

Q : UINT 16 bit register

2.7.7.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input must be loaded in the current result before calling the function.

2.7.7.4 ST Language


Q := MAKEWORD (HI, LO);

2.7.7.5 FBD Language

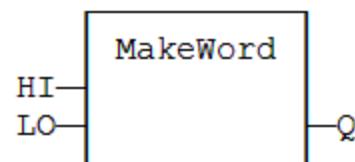

2.7.7.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

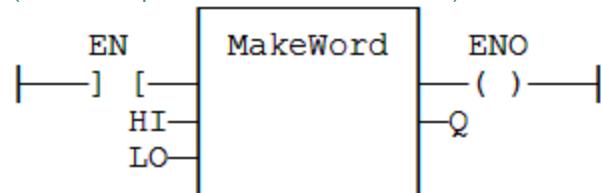

2.7.7.7 IL Language:

Op1: FFLD HI
 MAKEWORD LO
 ST Q

See also

LOBYTE HIBYTE LOWORD HIWORD MAKEDWORD

2.7.8 MBSHIFT

Function - Multibyte shift / rotate

2.7.8.1 Inputs

Buffer : SINT/USINT	Array of bytes
Pos : DINT	Base position in the array
NbByte : DINT	Number of bytes to be shifted/rotated
NbShift : DINT	Number of shifts or rotations
ToRight : BOOL	TRUE for right / FALSE for left
Rotate : BOOL	TRUE for rotate / FALSE for shift
InBit : BOOL	Bit to be introduced in a shift

2.7.8.2 Outputs

Q : BOOL	TRUE if successful
----------	--------------------

2.7.8.3 Remarks


Use the "ToRight" argument to specify a shift to the left (FALSE) or to the right (TRUE). Use the "Rotate" argument to specify either a shift (FALSE) or a rotation (TRUE). In case of a shift, the "InBit" argument specifies the value of the bit that replaces the last shifted bit.

In FFLD language, the rung input (EN) validates the operation. The rung output is the result ("Q").

2.7.8.4 ST Language


```
Q := MBShift (Buffer, Pos, NbByte, NbShift, ToRight, Rotate, InBit);
```

2.7.8.5 FBD Language

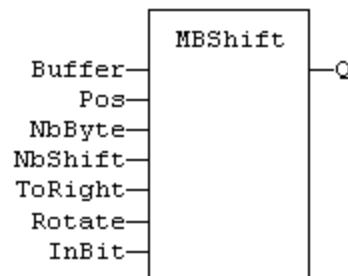

2.7.8.6 FFLD Language

(* the function is called only if EN is TRUE *)

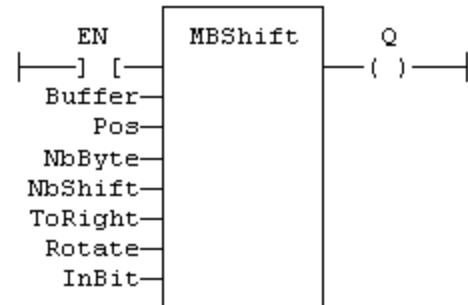

2.7.8.7 IL Language:

Not available

2.7.9 NOT_MASK

Function - Performs a bit to bit negation of an integer value

2.7.9.1 Inputs

IN : ANY Integer input

2.7.9.2 Outputs

Q : ANY Bit to bit negation of the input

2.7.9.3 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the parameter (IN) must be loaded in the current result before calling the function.

2.7.9.4 ST Language


Q := NOT_MASK (IN);

2.7.9.5 FBD Language

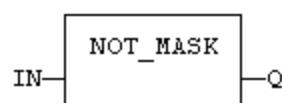

2.7.9.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO is equal to EN *)

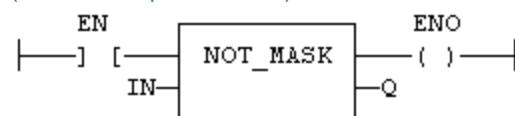

2.7.9.7 IL Language:

Op1: FFLD IN
 NOT_MASK
 ST Q

See also

AND_MASK OR_MASK XOR_MASK

2.7.10 OR_MASK

Function - Performs a bit to bit OR between two integer values

2.7.10.1 Inputs

IN : ANY First input
MSK : ANY Second input (OR mask)

2.7.10.2 Outputs

Q : ANY OR mask between IN and MSK inputs

2.7.10.3 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the first parameter (IN) must be loaded in the current result before calling the function. The other input is the operands of the function.

2.7.10.4 ST Language


`Q := OR_MASK (IN, MSK);`

2.7.10.5 FBD Language

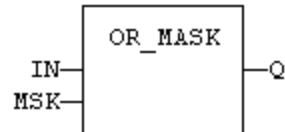

2.7.10.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO is equal to EN *)

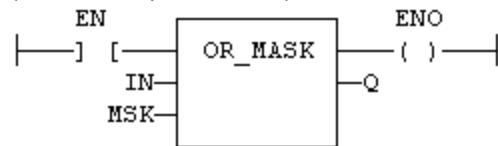

2.7.10.7 IL Language:

Op1: FFLD IN
 OR_MASK MSK
 ST Q

See also

AND_MASK XOR_MASK NOT_MASK

2.7.11 PACK8

Function - Builds a byte with bits

2.7.11.1 Inputs

IN0 : BOOL Less significant bit
...
IN7 : BOOL Most significant bit

2.7.11.2 Outputs

Q : USINT Byte built with input bits

2.7.11.3 Remarks


In FFLD language, the input rung is the IN0 input. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.7.11.4 ST Language


`Q := PACK8 (IN0, IN1, IN2, IN3, IN4, IN5, IN6, IN7);`

2.7.11.5 FBD Language

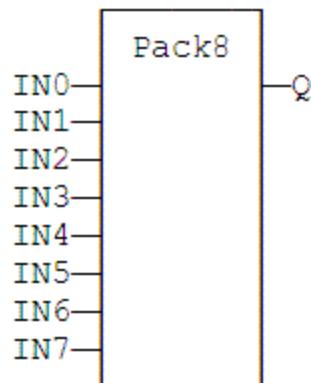

2.7.11.6 FFLD Language

(* ENO keeps the same value as EN *)

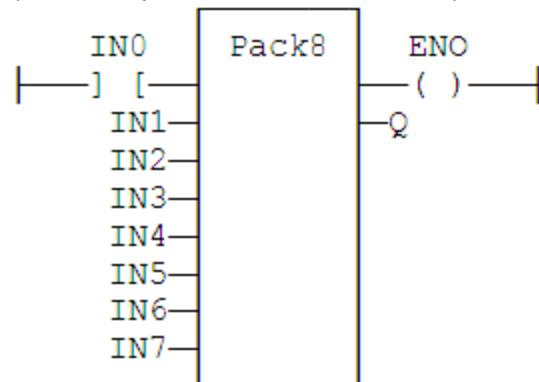

2.7.11.7 IL Language

Op1: FFLD IN0
`PACK8 IN1, IN2, IN3, IN4, IN5, IN6, IN7`
`ST Q`

See also

UNPACK8

2.7.12 ROL

Function - Rotate bits of a register to the left.

2.7.12.1 Inputs

IN : ANY register
NBR : DINT Number of rotations (each rotation is 1 bit)

2.7.12.2 Outputs

Q : ANY Rotated register

2.7.12.3 Diagram



2.7.12.4 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.12.5 ST Language

`Q := ROL (IN, NBR);`


2.7.12.6 FBD Language

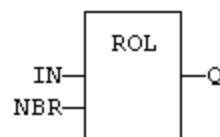

2.7.12.7 FFLD Language

(* The rotation is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

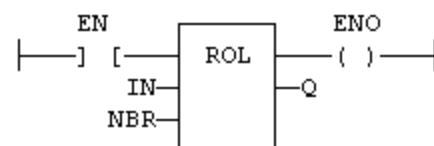

2.7.12.8 IL Language:

Op1: FFLD IN
ROL NBR
ST Q

See also

SHL SHR ROR SHLb SHRb ROLb RORb SHLw SHRw ROLw RORw

2.7.13 ROR

Function - Rotate bits of a register to the right.

2.7.13.1 Inputs

IN : ANY register
NBR : ANY Number of rotations (each rotation is 1 bit)

2.7.13.2 Outputs

Q : ANY Rotated register

2.7.13.3 Diagram



2.7.13.4 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.13.5 ST Language

`Q := ROR (IN, NBR);`


2.7.13.6 FBD Language

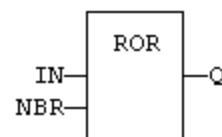

2.7.13.7 FFLD Language

(* The rotation is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

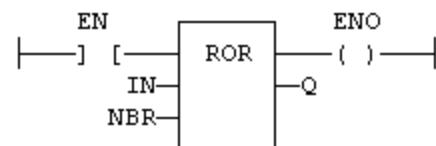

2.7.13.8 IL Language:

Op1: FFLD IN
ROR NBR
ST Q

See also

SHL SHR ROL SHLb SHRb ROLb RORb SHLw SHRw ROLw RORw

2.7.14 RORb / ROR_SINT / ROR_USINT / ROR_BYTE

Function - Rotate bits of a register to the right.


2.7.14.1 Inputs

IN : SINT 8 bit register
NBR : SINT Number of rotations (each rotation is 1 bit)

2.7.14.2 Outputs

Q : SINT Rotated register

2.7.14.3 Diagram

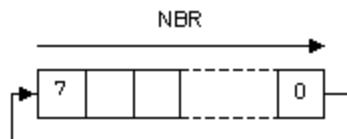


2.7.14.4 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.14.5 ST Language


`Q := RORb (IN, NBR);`

2.7.14.6 FBD Language

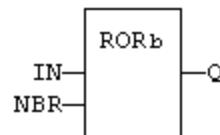

2.7.14.7 FFLD Language

(* The rotation is executed only if EN is TRUE *)
(* ENO has the same value as EN *)

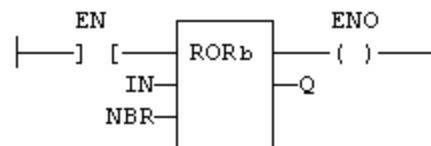

2.7.14.8 IL Language:

Op1: FFLD IN
 RORb NBR
 ST Q

2.7.14.9 See also

SHL SHR ROL ROR SHLb SHRb ROLb SHLw SHRw ROLw RORw

2.7.15 RORw / ROR_INT / ROR_UINT / ROR_WORD

Function - Rotate bits of a register to the right.


2.7.15.1 Inputs

IN : INT 16 bit register
NBR : INT Number of rotations (each rotation is 1 bit)

2.7.15.2 Outputs

Q : INT Rotated register

2.7.15.3 Diagram

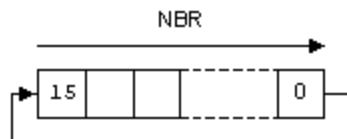


2.7.15.4 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.15.5 ST Language


`Q := RORw (IN, NBR);`

2.7.15.6 FBD Language

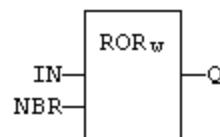

2.7.15.7 FFLD Language

(* The rotation is executed only if EN is TRUE *)
(* ENO has the same value as EN *)

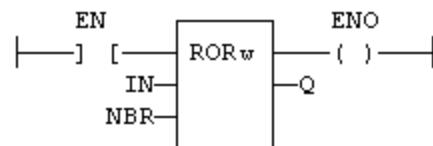

2.7.15.8 IL Language:

Op1: FFLD IN
RORw NBR
ST Q

2.7.15.9 See also

SHL SHR ROL ROR SHLb SHRb ROLb RORb SHLw SHRw ROLw

2.7.16 SETBIT

Function - Set a bit in an integer register.

2.7.16.1 Inputs

IN : ANY 8 to 32 bit integer register
BIT : DINT Bit number (0 = less significant bit)
VAL : BOOL Bit value to apply

2.7.16.2 Outputs

Q : ANY Modified register

2.7.16.3 Remarks


Types LINT, REAL, LREAL, TIME and STRING are not supported for IN and Q. IN and Q must have the same type. In case of invalid arguments (bad bit number or invalid input type) the function returns the value of IN without modification.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

2.7.16.4 ST Language


`Q := SETBIT (IN, BIT, VAL);`

2.7.16.5 FBD Language

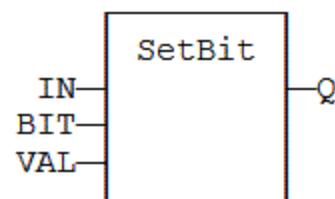

2.7.16.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

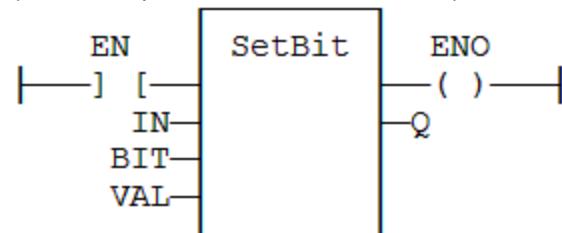

2.7.16.7 IL Language

Not available

See also

TESTBIT

2.7.17 SHL

Function - Shift bits of a register to the left.

2.7.17.1 Inputs


IN : ANY register

NBS : ANY Number of shifts (each shift is 1 bit)

2.7.17.2 Outputs

Q : ANY Shifted register

2.7.17.3 Diagram

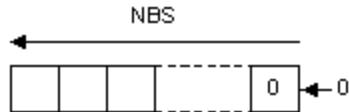

2.7.17.4 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.17.5 ST Language

`Q := SHL (IN, NBS);`


2.7.17.6 FBD Language

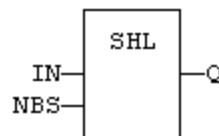

2.7.17.7 FFLD Language

(* The shift is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

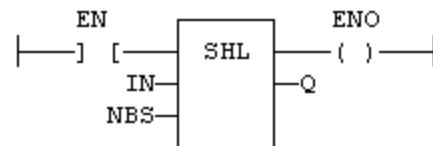

2.7.17.8 IL Language:

```
Op1: FFLD IN
      SHL NBS
      ST Q
```

See also

SHR ROL ROR SHLb SHRb ROLb RORb SHLw SHRw ROLw RORw

2.7.18 SHR

Function - Shift bits of a register to the right.

2.7.18.1 Inputs


IN : ANY register

NBS : ANY Number of shifts (each shift is 1 bit)

2.7.18.2 Outputs

Q : ANY Shifted register

2.7.18.3 Diagram

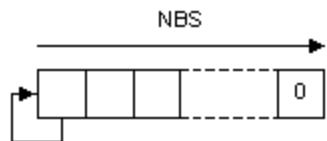

2.7.18.4 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the state of the input rung. In IL language, the first input must be loaded before the function call. The second input is the operand of the function.

2.7.18.5 ST Language

`Q := SHR (IN, NBS);`


2.7.18.6 FBD Language

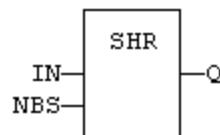

2.7.18.7 FFLD Language

(* The shift is executed only if EN is TRUE *)

(* ENO has the same value as EN *)

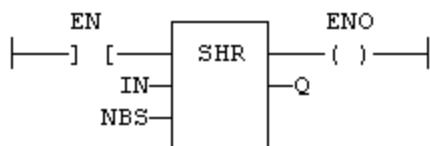

2.7.18.8 IL Language:

```
Op1: FFLD IN
      SHR NBS
      ST Q
```

See also

SHL ROL ROR SHLb SHRb ROLb RORb SHLw SHRw ROLw RORw

2.7.19 TESTBIT

Function - Test a bit of an integer register.

2.7.19.1 Inputs

IN : ANY 8 to 32 bit integer register
BIT : DINT Bit number (0 = less significant bit)

2.7.19.2 Outputs

Q : BOOL Bit value

2.7.19.3 Remarks


Types LINT, REAL, LREAL, TIME and STRING are not supported for IN and Q. IN and Q must have the same type. In case of invalid arguments (bad bit number or invalid input type) the function returns FALSE.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung is the output of the function.

2.7.19.4 ST Language


`Q := TESTBIT (IN, BIT);`

2.7.19.5 FBD Language

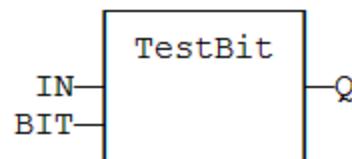

2.7.19.6 FFLD Language

(* The function is executed only if EN is TRUE *)

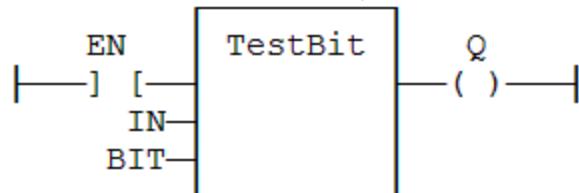

2.7.19.7 IL Language

Not available

See also

SETBIT

2.7.20 UNPACK8

Function block - Extract bits of a byte

2.7.20.1 Inputs

`IN : USINT 8 bit register`

2.7.20.2 Outputs

`Q0 : BOOL Less significant bit`

...

`Q7 : BOOL Most significant bit`


2.7.20.3 Remarks

In FFLD language, the output rung is the Q0 output. The operation is executed only in the input rung (EN) is TRUE.

2.7.20.4 ST Language


(* MyUnpack is a declared instance of the UNPACK8 function block *)
 MyUnpack (IN);
 Q0 := MyUnpack.Q0;
 Q1 := MyUnpack.Q1;
 Q2 := MyUnpack.Q2;
 Q3 := MyUnpack.Q3;
 Q4 := MyUnpack.Q4;
 Q5 := MyUnpack.Q5;
 Q6 := MyUnpack.Q6;
 Q7 := MyUnpack.Q7;

2.7.20.5 FBD Language

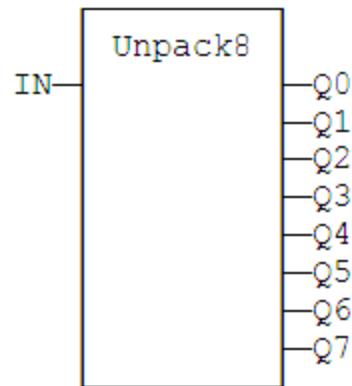

2.7.20.6 FFLD Language

(* The operation is performed if EN = TRUE *)

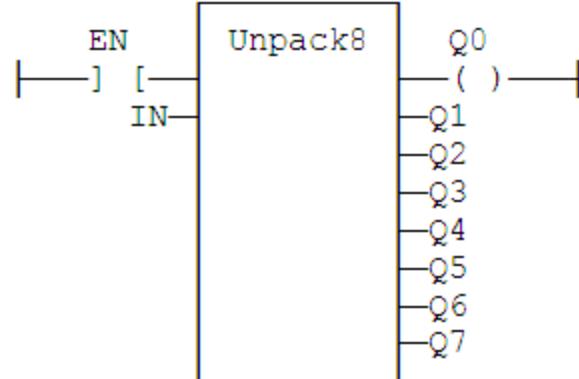

2.7.20.7 IL Language:

(* MyUnpack is a declared instance of the UNPACK8 function block *)
 Op1: CAL MyUnpack (IN)
 FFLD MyUnpack.Q0
 ST Q0
 (* ... *)
 FFLD MyUnpack.Q7
 ST Q7

See also

PACK8

2.7.21 XOR_MASK

Function - Performs a bit to bit exclusive OR between two integer values

2.7.21.1 Inputs

IN : ANY First input
MSK : ANY Second input (XOR mask)

2.7.21.2 Outputs

Q : ANY Exclusive OR mask between IN and MSK inputs

2.7.21.3 Remarks


Arguments can be signed or unsigned integers from 8 to 32 bits.

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the first parameter (IN) must be loaded in the current result before calling the function. The other input is the operands of the function.

2.7.21.4 ST Language

Q := XOR_MASK (IN, MSK);


2.7.21.5 FBD Language

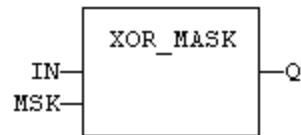

2.7.21.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO is equal to EN *)

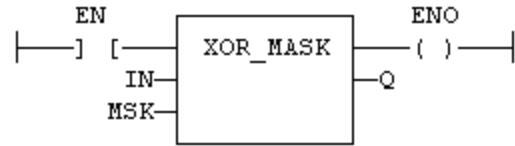

2.7.21.7 IL Language:

```
Op1: FFLD    IN
      XOR_MASK MSK
      ST     Q
```

See also

AND_MASK OR_MASK NOT_MASK

2.8 Counters

Below are the standard blocks for managing counters:

CTU	Up counter
-----	------------

CTD	Down Counter
CTUD	Up / Down Counter

2.8.1 CTD / CTDr

Function Block - Down counter.

2.8.1.1 Inputs

CD : BOOL Enable counting. Counter is decreased on each call when CD is TRUE
 LOAD : BOOL Re-load command. Counter is set to PV when called with LOAD to TRUE
 PV : DINT Programmed maximum value

2.8.1.2 Outputs

Q : BOOL TRUE when counter is empty, i.e. when CV = 0
 CV : DINT Current value of the counter

2.8.1.3 Remarks

The counter is empty (CV = 0) when the application starts. The counter does not include a pulse detection for CD input. Use R_TRIG or F_TRIG function block for counting pulses of CD input signal. In FFLD language, CD is the input rung. The output rung is the Q output.


CTUr, CTDr, CTUDr function blocks operate exactly as other counters, except that all boolean inputs (CU, CD, RESET, LOAD) have an implicit rising edge detection included. Note that these counters can be not supported on some target systems.

2.8.1.4 ST Language


(* MyCounter is a declared instance of CTD function block *)

```
MyCounter (CD, LOAD, PV);
Q := MyCounter.Q;
CV := MyCounter.CV;
```

2.8.1.5 FBD Language

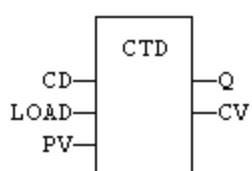

2.8.1.6 FFLD Language

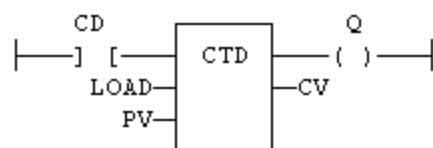

2.8.1.7 IL Language:

```
(* MyCounter is a declared instance of CTD function block *)
Op1: CAL MyCounter (CD, LOAD, PV)
FFLD MyCounter.Q
ST Q
FFLD MyCounter.CV
ST CV
```

See also

CTU CTUD

2.8.2 CTU / CTUr

Function Block - Up counter.

2.8.2.1 Inputs

CU : BOOL	Enable counting. Counter is increased on each call when CU is TRUE
RESET : BOOL	Reset command. Counter is reset to 0 when called with RESET to TRUE
PV : DINT	Programmed maximum value

2.8.2.2 Outputs

Q : BOOL	TRUE when counter is full, i.e. when CV = PV
CV : DINT	Current value of the counter

2.8.2.3 Remarks


The counter is empty (CV = 0) when the application starts. The counter does not include a pulse detection for CU input. Use R_TRIG or F_TRIG function block for counting pulses of CU input signal. In FFLD language, CU is the input rung. The output rung is the Q output.

CTUr, CTDr, CTUDr function blocks operate exactly as other counters, except that all boolean inputs (CU, CD, RESET, LOAD) have an implicit rising edge detection included. Note that these counters can be not supported on some target systems.


2.8.2.4 ST Language

```
(* MyCounter is a declared instance of CTU function block *)
MyCounter (CU, RESET, PV);
Q := MyCounter.Q;
CV := MyCounter.CV;
```

2.8.2.5 FBD Language

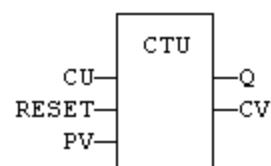

2.8.2.6 FFLD Language

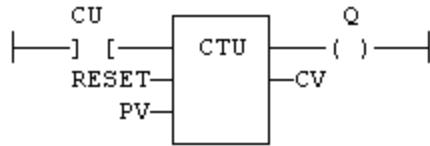

2.8.2.7 IL Language:

(* MyCounter is a declared instance of CTU function block *)

Op1: CAL MyCounter (CU, RESET, PV)

FFLD MyCounter.Q

ST Q

FFLD MyCounter.CV

ST CV

See also

CTD CTUD

2.8.3 CTUD / CTUDr

Function Block - Up/down counter.

2.8.3.1 Inputs

CU : BOOL	Enable counting. Counter is increased on each call when CU is TRUE
CD : BOOL	Enable counting. Counter is decreased on each call when CD is TRUE
RESET : BOOL	Reset command. Counter is reset to 0 called with RESET to TRUE
LOAD : BOOL	Re-load command. Counter is set to PV when called with LOAD to TRUE
PV : DINT	Programmed maximum value

2.8.3.2 Outputs

QU : BOOL TRUE when counter is full, i.e. when CV = PV

QD : BOOL TRUE when counter is empty, i.e. when CV = 0

CV : DINT Current value of the counter

2.8.3.3 Remarks

The counter is empty (CV = 0) when the application starts. The counter does not include a pulse detection for CU and CD inputs. Use R_TRIG or F_TRIG function blocks for counting pulses of CU or CD input signals. In FFLD language, CU is the input rung. The output rung is the QU output.

CTUr, CTDr, CTUDr function blocks operate exactly as other counters, except that all boolean inputs (CU, CD, RESET, LOAD) have an implicit rising edge detection included. Note that these counters can be not supported on some target systems.

2.8.3.4 ST Language

(* MyCounter is a declared instance of CTUD function block *)


MyCounter (CU, CD, RESET, LOAD, PV);

QU := MyCounter.QU;


QD := MyCounter.QD;

CV := MyCounter.CV;

2.8.3.5 FBD Language

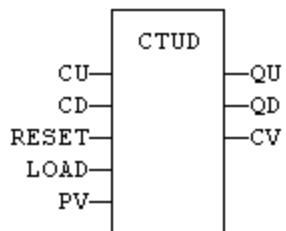

2.8.3.6 FFID Language

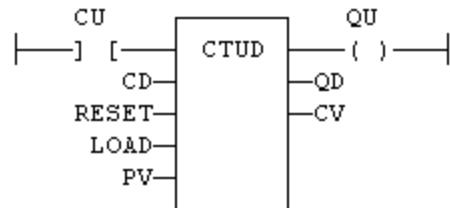

2.8.3.7 IL Language:

(* MyCounter is a declared instance of CTUD function block *)

```

Op1: CAL MyCounter (CU, CD, RESET, LOAD, PV)
FFLD MyCounter.QU
ST QU
FFLD MyCounter.QD
ST QD
FFLD MyCounter.CV
ST CV
  
```

See also

CTU CTD

2.9 Timers

Below are the standard functions for managing timers:

TON	On timer
TOF	Off timer
TP	Pulse timer
BLINK	Blinker
BLINKA	Asymmetric blinker
PLS	Pulse signal generator
TMU	Up-counting stop watch
TMUsec	Up-counting stop watch (seconds)
TMD	Down-counting stop watch

2.9.1 BLINK

Function Block - Blinker.


2.9.1.1 Inputs

RUN : BOOL Enabling command
CYCLE : TIME Blinking period

2.9.1.2 Outputs

Q : BOOL Output blinking signal

2.9.1.3 Time diagram

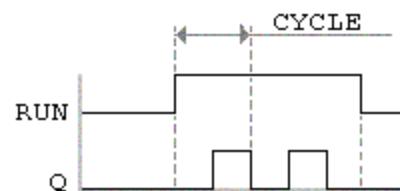


2.9.1.4 Remarks

The output signal is FALSE when the RUN input is FALSE. The CYCLE input is the complete period of the blinking signal. In FFLD language, the input rung is the IN command. The output rung is the Q output signal.


2.9.1.5 ST Language

```
(* MyBlinker is a declared instance of BLINK function block *)
MyBlinker (RUN, CYCLE);
Q := MyBlinker.Q;
```

2.9.1.6 FBD Language

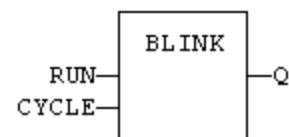

2.9.1.7 FFLD Language

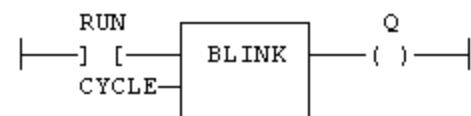

2.9.1.8 IL Language

```
(* MyBlinker is a declared instance of BLINK function block *)
Op1: CAL MyBlinker (RUN, CYCLE)
      FFLD MyBlinker.Q
      ST Q
```

See also

TON TOF TP

2.9.2 BLINKA

Function Block - Asymmetric blinker.


2.9.2.1 Inputs

RUN : BOOL Enabling command
 TM0 : TIME Duration of FALSE state on output
 TM1 : TIME Duration of TRUE state on output

2.9.2.2 Outputs

Q : BOOL Output blinking signal

2.9.2.3 Time diagram

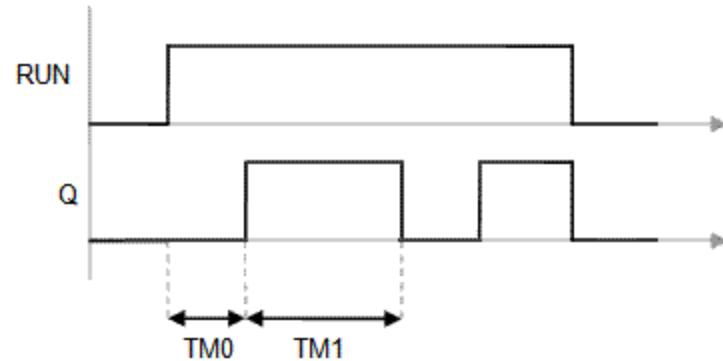

2.9.2.4 Remarks

The output signal is FALSE when the RUN input is FALSE. In FFLD language, the input rung is the IN command. The output rung is the Q output signal.


2.9.2.5 ST Language

(* MyBlinker is a declared instance of BLINKA function block *)
 MyBlinker (RUN, TM0, TM1);
 Q := MyBlinker.Q;

2.9.2.6 FBD Language



2.9.2.7 FFLD Language

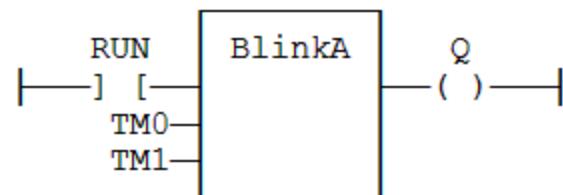

2.9.2.8 IL Language:

(* MyBlinker is a declared instance of BLINKA function block *)

```
Op1: CAL MyBlinker (RUN, TM0, TM1)
      FFID MyBlinker.Q
      ST Q
```

See also

TON TOF TP

2.9.3 PLS

Function Block - Pulse signal generator


2.9.3.1 Inputs

RUN : BOOL	Enabling command
CYCLE : TIME	Signal period

2.9.3.2 Outputs

Q : BOOL Output pulse signal

2.9.3.3 Time diagram

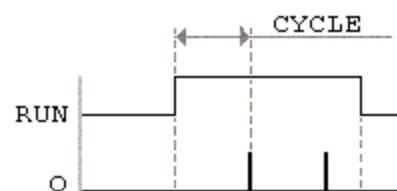


2.9.3.4 Remarks

On every period, the output is set to TRUE during one cycle only. In FFLD language, the input rung is the IN command. The output rung is the Q output signal.


2.9.3.5 ST Language

(* MyPLS is a declared instance of PLS function block *)
MyPLS (RUN, CYCLE);
Q := MyPLS.Q;

2.9.3.6 FBD Language

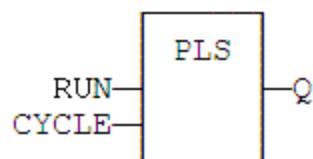

2.9.3.7 FFLD Language

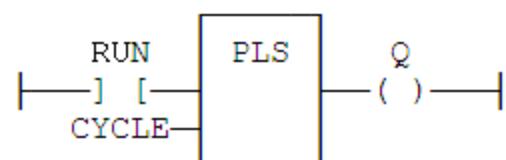

2.9.3.8 IL Language

(* MyPLS is a declared instance of PLS function block *)

Op1: CAL MyPLS (RUN, CYCLE)

FFLD MyPLS.Q

ST Q

See also

TON TOF TP

2.9.4 Sig_Gen

Function Block - Generator of pseudo-analogical Signal

2.9.4.1 Inputs

RUN : BOOL Enabling command


PERIOD : TIME Signal period

MAXIMUM : DINT Maximum growth during the signal period


2.9.4.2 Outputs

This FB generates signals of the four following types:

- PULSE: blinking at each period
- UP : growing according max * period
- END : pulse after max * period
- SINE : sine curve

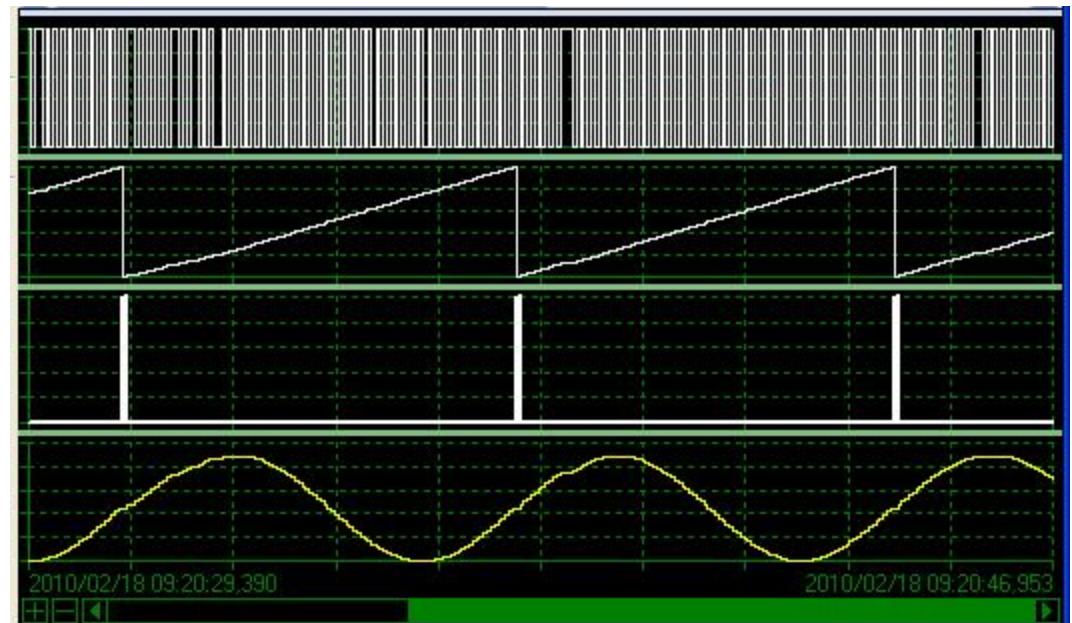

2.9.4.3 FFLD Language

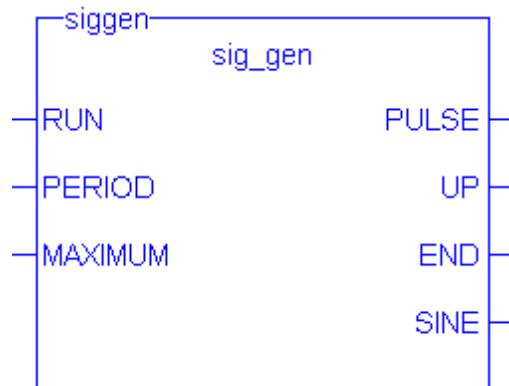

2.9.5 TMD

Function Block - Down-counting stop watch.


2.9.5.1 Inputs

IN : BOOL The time counts when this input is TRUE
 RST : BOOL Timer is reset to PT when this input is TRUE
 PT : TIME Programmed time

2.9.5.2 Outputs

Q : BOOL Timer elapsed output signal
 ET : TIME Elapsed time

2.9.5.3 Time diagram

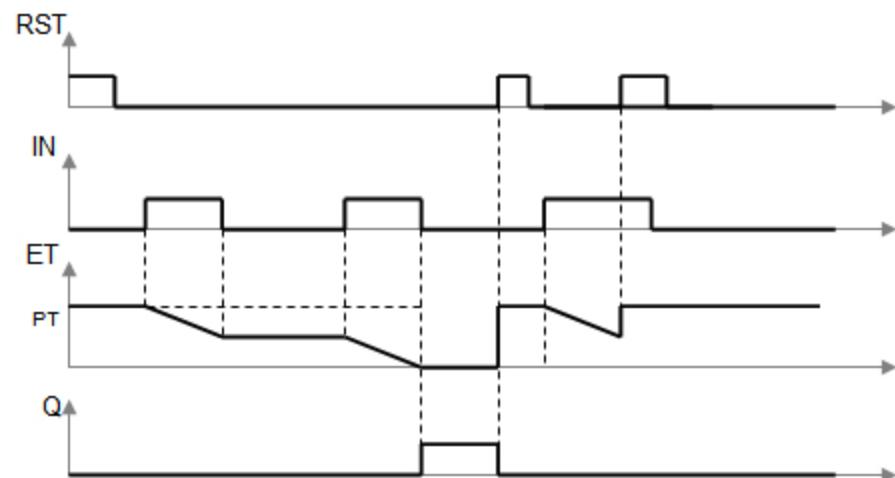


2.9.5.4 Remarks

The timer counts up when the IN input is TRUE. It stops when the programmed time is elapsed. The timer is reset when the RST input is TRUE. It is not reset when IN is false.


2.9.5.5 ST Language

```
(* MyTimer is a declared instance of TMD function block *)
MyTimer (IN, RST, PT);
Q := MyTimer.Q;
ET := MyTimer.ET;
```

2.9.5.6 FBD Language

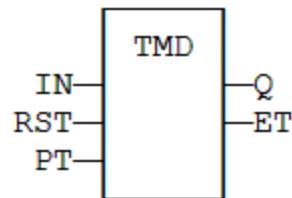

2.9.5.7 FFLD Language

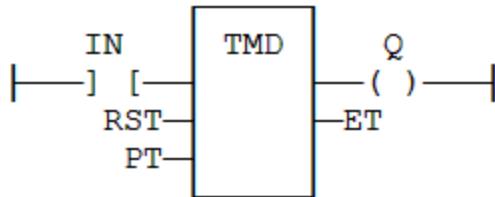

2.9.5.8 IL Language

```
(* MyTimer is a declared instance of TMD function block *)
Op1: CAL MyTimer (IN, RST, PT)
FFLD: MyTimer.Q
ST: Q
FFLD: MyTimer.ET
ST: ET
```

See also

TMU

2.9.6 TMU / TMUsec

Function Block - Up-counting stop watch. TMUsec is identical to TMU except that the parameter is a number of seconds.


2.9.6.1 Inputs

IN : BOOL	The time counts when this input is TRUE
RST : BOOL	Timer is reset to 0 when this input is TRUE
PT : TIME	Programmed time

2.9.6.2 Outputs

Q : BOOL	Timer elapsed output signal
ET : TIME	Elapsed time

2.9.6.3 Time diagram

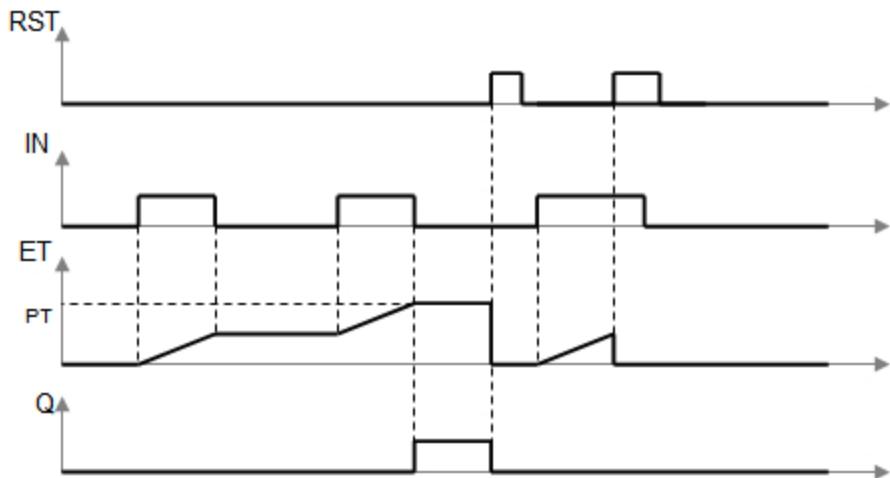

2.9.6.4 Remarks


The timer counts up when the IN input is TRUE. It stops when the programmed time is elapsed. The timer is reset when the RST input is TRUE. It is not reset when IN is false.

2.9.6.5 ST Language


(* MyTimer is a declared instance of TMU function block *)

```
MyTimer (IN, RST, PT);
Q := MyTimer.Q;
ET := MyTimer.ET;
```

2.9.6.6 FBD Language

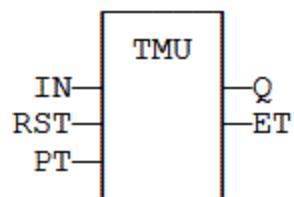

2.9.6.7 FFLD Language

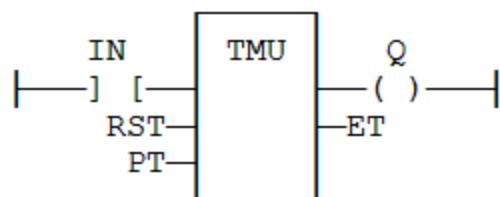

2.9.6.8 IL Language:

(* MyTimer is a declared instance of TMU function block *)

```
Op1: CAL    MyTimer (IN, RST, PT)
      FFLD  MyTimer.Q
      ST     Q
      FFLD  MyTimer.ET
```

ST ET

See also

TMD


2.9.7 TOF / TOFR*Function Block - Off timer.***2.9.7.1 Inputs**

IN : BOOL Timer command
 PT : TIME Programmed time

RST : BOOL Reset (TOFR only)

2.9.7.2 Outputs

Q : BOOL Timer elapsed output signal
 ET : TIME Elapsed time

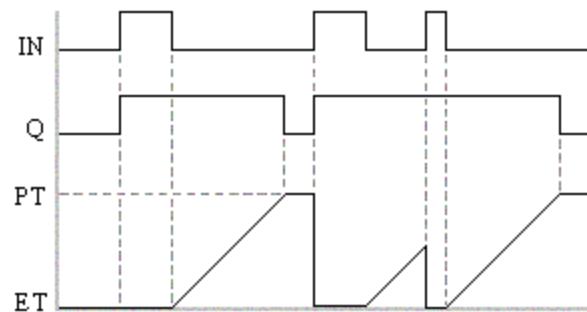2.9.7.3 Time diagram**2.9.7.4 Remarks**

The timer starts on a falling pulse of IN input. It stops when the elapsed time is equal to the programmed time. A rising pulse of IN input resets the timer to 0. The output signal is set to TRUE on when the IN input rises to TRUE, reset to FALSE when programmed time is elapsed..


TOFR is same as TOF but has an extra input for resetting the timer

In FFLD language, the input rung is the IN command. The output rung is Q the output signal.


2.9.7.5 ST Language

(* MyTimer is a declared instance of TOF function block *)

```
MyTimer (IN, PT);
Q := MyTimer.Q;
ET := MyTimer.ET;
```

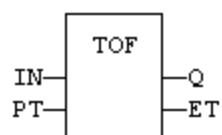2.9.7.6 FBD Language

2.9.7.7 FFLD Language

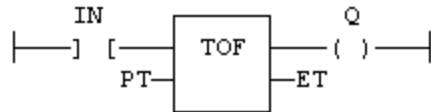

2.9.7.8 IL Language:

(* MyTimer is a declared instance of TOF function block *)

Op1: CAL MyTimer (IN, PT)

FFLD MyTimer.Q

ST Q

FFLD MyTimer.ET

ST ET

See also

TON TP BLINK

2.9.8 TON

Function Block - On timer.

2.9.8.1 Inputs

IN : BOOL Timer command


PT : TIME Programmed time

2.9.8.2 Outputs

Q : BOOL Timer elapsed output signal

ET : TIME Elapsed time

2.9.8.3 Time diagram

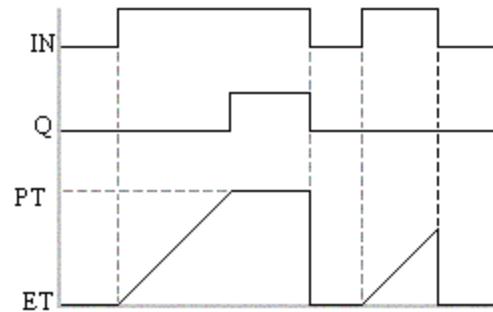

2.9.8.4 Remarks

The timer starts on a rising pulse of IN input. It stops when the elapsed time is equal to the programmed time. A falling pulse of IN input resets the timer to 0. The output signal is set to TRUE when programmed time is elapsed, and reset to FALSE when the input command falls.

In FFLD language, the input rung is the IN command. The output rung is Q the output signal.

2.9.8.5 ST Language

(* Inst_TON is a declared instance of TON function block *)


Inst_TON(FALSE, T#2s);

```


Q := Inst_TON.Q;
ET := Inst_TON.ET;

```

2.9.8.6 FBD Language

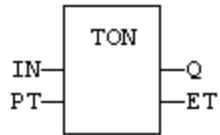

2.9.8.7 FFLD Language

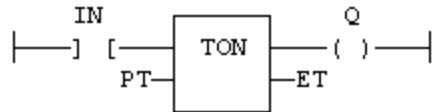

2.9.8.8 IL Language:

(* MyTimer is a declared instance of TON function block *)

Op1: CAL MyTimer (IN, PT)

 FFLD MyTimer.Q

 ST Q

 FFLD MyTimer.ET

 ST ET

See also

TOF TP BLINK

2.9.9 TP / TPR

Function Block - Pulse timer.

2.9.9.1 Inputs

IN : BOOL Timer command

PT : TIME Programmed time


RST : BOOL Reset (TPR only)

2.9.9.2 Outputs

Q : BOOL Timer elapsed output signal

ET : TIME Elapsed time

2.9.9.3 Time diagram

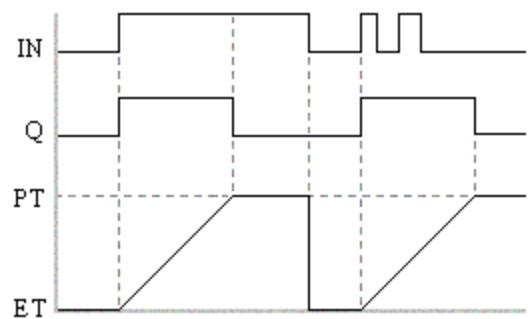

2.9.9.4 Remarks

The timer starts on a rising pulse of IN input. It stops when the elapsed time is equal to the programmed time. A falling pulse of IN input resets the timer to 0, only if the programmed time is elapsed. All pulses of IN while the timer is running are ignored. The output signal is set to TRUE while the timer is running.

TPR is same as TP but has an extra input for resetting the timer


In FFLD language, the input rung is the IN command. The output rung is Q the output signal.

2.9.9.5 ST Language


(* MyTimer is a declared instance of TP function block *)

```
MyTimer (IN, PT);
Q := MyTimer.Q;
ET := MyTimer.ET;
```

2.9.9.6 FBD Language

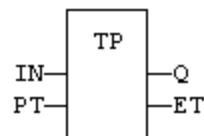

2.9.9.7 FFLD Language

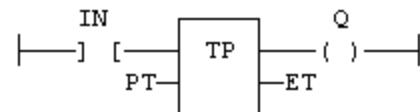

2.9.9.8 IL Language:

(* MyTimer is a declared instance of TP function block *)

```
Op1: CAL MyTimer (IN, PT)
      FFLD MyTimer.Q
      ST Q
      FFLD MyTimer.ET
      ST ET
```

See also

TON TOF BLINK

2.10 Mathematic operations

Below are the standard functions that perform mathematic calculation:

ABS	absolute value
TRUNC	integer part
LOG, LN / LNL	logarithm, natural logarithm
POW,EXPT, EXP / EXPL	power
SQRT, ROOT	square root, root extraction
SCALELIN	scaling - linear conversion

2.10.1 ABS / ABSL

Function - Returns the absolute value of the input.

2.10.1.1 Inputs

IN : REAL/LREAL ANY value

2.10.1.2 Outputs

Q : REAL/LREAL Result: absolute value of IN


2.10.1.3 Remarks

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. In IL, the input must be loaded in the current result before calling the function.

2.10.1.4 ST Language


Q := ABS (IN);

2.10.1.5 FBD Language

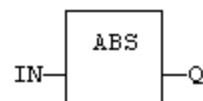

2.10.1.6 FFLD Language

The function is executed only if EN is TRUE.
ENO keeps the same value as EN.

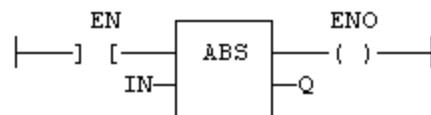

2.10.1.7 IL Language

Op1: FFLD IN
ABS
ST Q (* Q is: ABS (IN) *)

See also

TRUNC LOG POW SQRT

2.10.2 EXPT

Function - Calculates a power.

2.10.2.1 Inputs

IN : REAL Real value
EXP : DINT Exponent

2.10.2.2 Outputs

Q : REAL Result: IN at the 'EXP' power

2.10.2.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function. The exponent (second input of the function) must be the operand of the function.

2.10.2.4 ST Language

`Q := EXPT (IN, EXP);`


2.10.2.5 FBD Language

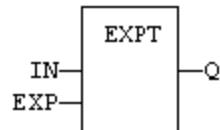

2.10.2.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

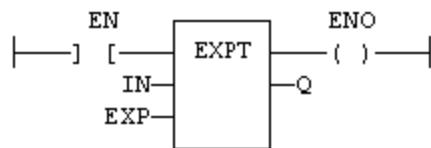

2.10.2.7 IL Language:

Op1: FFLD IN
EXPT EXP
ST Q (* Q is: (IN ** EXP) *)

See also

ABS TRUNC LOG SQRT

2.10.3 LOG

Function - Calculates the logarithm (base 10) of the input.

2.10.3.1 Inputs

IN : REAL Real value

2.10.3.2 Outputs

Q : REAL Result: logarithm (base 10) of IN

2.10.3.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.10.3.4 ST Language


`Q := LOG (IN);`

2.10.3.5 FBD Language

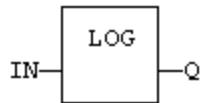

2.10.3.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

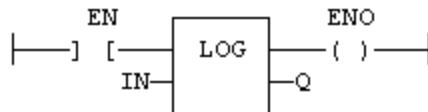

2.10.3.7 IL Language:

Op1: FFLD IN
 LOG
 ST Q (* Q is: LOG (IN) *)

See also

ABS TRUNC POW SQRT

2.10.4 POW ** POWL

Function - Calculates a power.

2.10.4.1 Inputs

IN : REAL/LREAL Real value
 EXP : REAL/LREAL Exponent

2.10.4.2 Outputs

Q : REAL/LREAL Result: IN at the 'EXP' power

2.10.4.3 Remarks


Alternatively, in ST language, the "<<" operator can be used. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function. The exponent (second input of the function) must be the operand of the function.

2.10.4.4 ST Language


Q := POW (IN, EXP);
 Q := IN ** EXP;

2.10.4.5 FBD Language

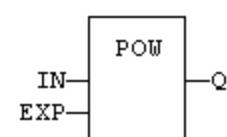

2.10.4.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

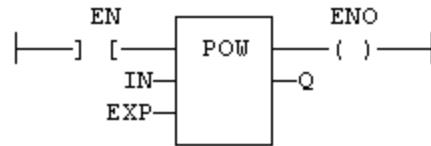

2.10.4.7 IL Language:

Op1: FFLD IN
 POW EXP
 ST Q (* Q is: (IN ** EXP) *)

See also

ABS TRUNC LOG SQRT

2.10.5 ScaleLin

Function - Scaling - linear conversion.

2.10.5.1 Inputs

IN : REAL Real value
 IMIN : REAL Minimum input value
 IMAX : REAL Maximum input value
 OMIN : REAL Minimum output value
 OMAX : REAL Maximum output value

2.10.5.2 Outputs

OUT : REAL Result: $OMIN + IN * (OMAX - OMIN) / (IMAX - IMIN)$

2.10.5.3 Truth table

Inputs	OUT
IMIN >=IMAX	= IN
IN < IMIN	= IMIN
IN >IMAX	= IMAX
other	= $OMIN + IN * (OMAX - OMIN) / (IMAX - IMIN)$

2.10.5.4 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.10.5.5 ST Language


OUT := ScaleLin (IN, IMIN, IMAX, OMIN, OMAX);

2.10.5.6 FBD Language

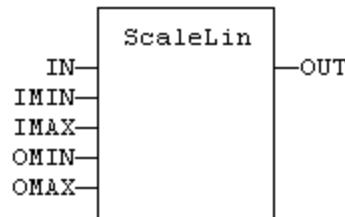

2.10.5.7 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

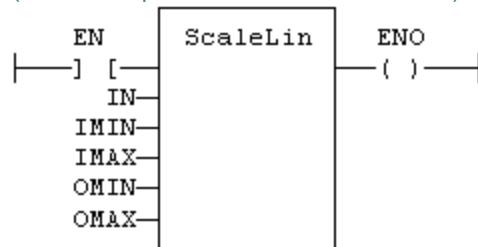

2.10.5.8 IL Language

Op1: FFLD IN
 ScaleLin IMAX, IMIN, OMAX, OMIN
 ST OUT

2.10.6 SQRT / SQRTL

Function - Calculates the square root of the input.

2.10.6.1 Inputs

IN : REAL/LREAL Real value

2.10.6.2 Outputs

Q : REAL/LREAL Result: square root of IN

2.10.6.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.10.6.4 ST Language


Q := SQRT (IN);

2.10.6.5 FBD Language

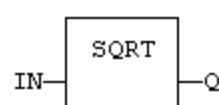

2.10.6.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

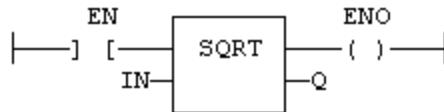

2.10.6.7 IL Language:

Op1: FFLD IN
SQRT
ST Q (* Q is: SQRT (IN) *)

See also

ABS TRUNC LOG POW

2.10.7 TRUNC / TRUNCL

Function - Truncates the decimal part of the input.

2.10.7.1 Inputs

IN : REAL/LREAL Real value

2.10.7.2 Outputs

Q : REAL/LREAL Result: integer part of IN

2.10.7.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.10.7.4 ST Language


Q := TRUNC (IN);

2.10.7.5 FBD Language

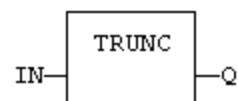

2.10.7.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

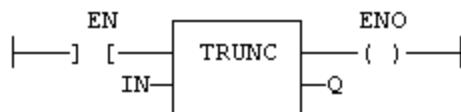

2.10.7.7 IL Language:

Op1: FFLD IN
TRUNC

ST Q (* Q is the integer part of IN *)

See also

ABS LOG POW SQRT

2.11 Trigonometric functions

Below are the standard functions for trigonometric calculation:

SIN	sine
COS	cosine
TAN	tangent
ASIN	arc-sine
ACOS	arc-cosine
ATAN	arc-tangent
ATAN2	arc-tangent of Y / X

See Also:

UseDegrees

2.11.1 ACOS / ACOSL

Function - Calculate an arc-cosine.

2.11.1.1 Inputs

IN : REAL/LREAL Real value

2.11.1.2 Outputs

Q : REAL/LREAL Result: arc-cosine of IN

2.11.1.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.1.4 ST Language

Q := ACOS (IN);


2.11.1.5 FBD Language

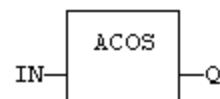

2.11.1.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

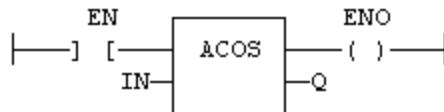

2.11.1.7 IL Language:

Op1: FFLD IN
ACOS
ST Q (* Q is: ACOS (IN) *)

See also

SIN COS TAN ASIN ATAN ATAN2

2.11.2 ASIN / ASINL

Function - Calculate an arc-sine.

2.11.2.1 Inputs

IN : REAL/LREAL Real value

2.11.2.2 Outputs

Q : REAL/LREAL Result: arc-sine of IN

2.11.2.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.2.4 ST Language


Q := ASIN (IN);

2.11.2.5 FBD Language

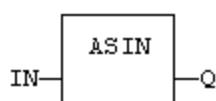

2.11.2.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

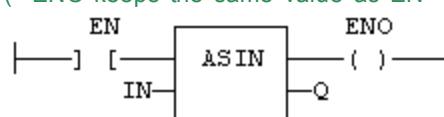

2.11.2.7 IL Language:

Op1: FFLD IN
ASIN
ST Q (* Q is: ASIN (IN) *)

See also

SIN COS TAN ACOS ATAN ATAN2

2.11.3 ATAN / ATANL

Function - Calculate an arc-tangent.

2.11.3.1 Inputs

IN : REAL/LREAL Real value

2.11.3.2 Outputs

Q : REAL/LREAL Result: arc-tangent of IN

2.11.3.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.3.4 ST Language


Q := ATAN (IN);

2.11.3.5 FBD Language

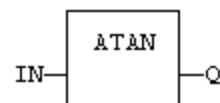

2.11.3.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

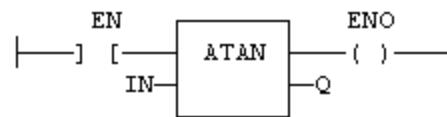

2.11.3.7 IL Language:

Op1: FFLD IN
 ATAN
 ST Q (* Q is: ATAN (IN) *)

See also

SIN COS TAN ASIN ACOS ATAN2

2.11.4 ATAN2 / ATAN2L

Function - Calculate arc-tangent of Y/X

2.11.4.1 Inputs

Y : REAL/LREAL Real value
X : REAL/LREAL Real value

2.11.4.2 Outputs

Q : REAL/LREAL Result: arc-tangent of Y / X

2.11.4.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.4.4 ST Language

`Q := ATAN2 (IN);`


2.11.4.5 FBD Language

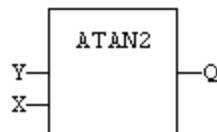

2.11.4.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

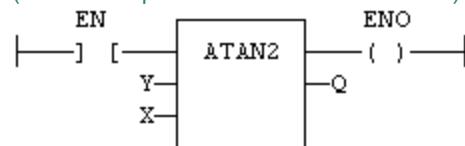

2.11.4.7 IL Language

Op1: FFLD Y
ATAN2 X
ST Q (* Q is: ATAN2 (Y / X) *)

See also

SIN COS TAN ASIN ACOS ATAN

2.11.5 COS / COSL

Function - Calculate a cosine.

2.11.5.1 Inputs

IN : REAL/LREAL Real value

2.11.5.2 Outputs

Q : REAL/LREAL Result: cosine of IN

2.11.5.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.5.4 ST Language

`Q := COS (IN);`


2.11.5.5 FBD Language

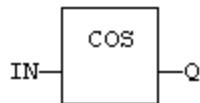

2.11.5.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

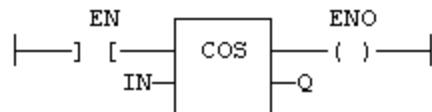

2.11.5.7 IL Language:

Op1: FFLD IN
COS
ST Q (* Q is: COS (IN) *)

See also

SIN TAN ASIN ACOS ATAN ATAN2

2.11.6 SIN / SINL

Function - Calculate a sine.

2.11.6.1 Inputs

IN : REAL/LREAL Real value

2.11.6.2 Outputs

Q : REAL/LREAL Result: sine of IN

2.11.6.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.6.4 ST Language

Q := SIN (IN);


2.11.6.5 FBD Language

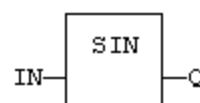

2.11.6.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

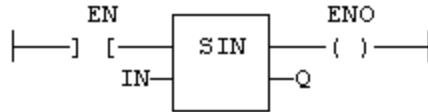

2.11.6.7 IL Language:

Op1: FFLD IN
 SIN
 ST Q (* Q is: SIN (IN) *)

See also

COS TAN ASIN ACOS ATAN ATAN2

2.11.7 TAN / TANL

Function - Calculate a tangent.

2.11.7.1 Inputs

IN : REAL/LREAL Real value

2.11.7.2 Outputs

Q : REAL/LREAL Result: tangent of IN

2.11.7.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.11.7.4 ST Language


Q := TAN (IN);

2.11.7.5 FBD Language

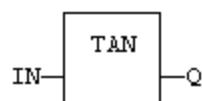

2.11.7.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

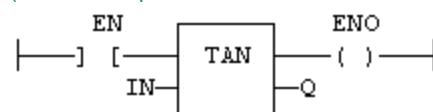

2.11.7.7 IL Language:

Op1: FFLD IN
 TAN
 ST Q (* Q is: TAN (IN) *)

See also

SIN COS ASIN ACOS ATAN ATAN2

2.11.8 UseDegrees

Function - Sets the unit for angles in all trigonometric functions.

2.11.8.1 Inputs

IN : BOOL If TRUE, turn all trigonometric functions to use degrees
 If FALSE, turn all trigonometric functions to use radians (default)

2.11.8.2 Outputs

Q : BOOL TRUE if functions use degrees before the call

2.11.8.3 Remarks


This function sets the working unit for the following functions:

SIN	sine
COS	cosine
TAN	tangent
ASIN	arc-sine
ACOS	arc-cosine
ATAN	arc-tangent
ATAN2	arc-tangent of Y / X

2.11.8.4 ST Language


Q := UseDegrees (IN);

2.11.8.5 FBD Language

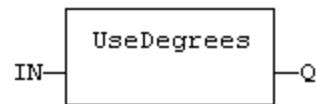

2.11.8.6 FFLD Language

(* Input is the rung. The rung is the output *)

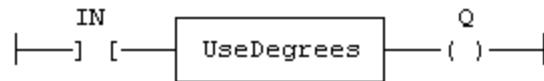

2.11.8.7 IL Language

Op1: FFLD IN
 UseDegrees
 ST Q

2.12 String operations

Below are the standard operators and functions that manage character strings:

+	concatenation of strings
CONCAT	concatenation of strings
MLEN	get string length
DELETE	delete characters in a string
INSERT	insert characters in a string
FIND	find characters in a string
REPLACE	replace characters in a string
LEFT	extract a part of a string on the left
RIGHT	extract a part of a string on the right
MID	extract a part of a string
CHAR	build a single character string
ASCII	get the ASCII code of a character within a string
ATOH	converts string to integer using hexadecimal basis
HTOA	converts integer to string using hexadecimal basis
CRC16	CRC16 calculation
ArrayToString	copies elements of an SINT array to a STRING
StringToArray	copies characters of a STRING to an SINT array

Other functions are available for managing string tables as resources:

StringTable	Select the active string table resource
LoadString	Load a string from the active string table

2.12.1 ArrayToString / ArrayToStringU

Function - Copy an array of SINT to a STRING.

2.12.1.1 Inputs

SRC : SINT Source array of SINT small integers (USINT for ArrayToStringU)
 DST : STRING Destination STRING
 COUNT : DINT Numbers of characters to be copied

2.12.1.2 Outputs

Q : DINT Number of characters copied

2.12.1.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

This function copies the COUNT first elements of the SRC array to the characters of the DST string. The function checks the maximum size of the destination string and adjust the COUNT number if necessary.

2.12.1.4 ST Language


Q := ArrayToString (SRC, DST, COUNT);

2.12.1.5 FBD Language

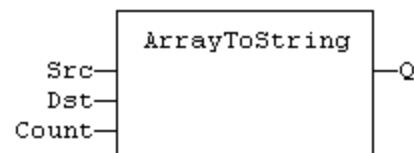

2.12.1.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

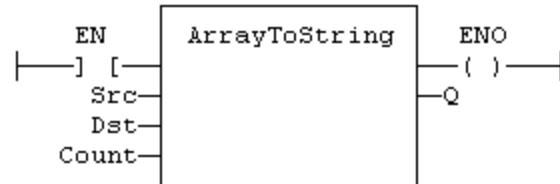

2.12.1.7 IL Language

Not available

See also

StringToArray

2.12.2 ASCII

Function - Get the ASCII code of a character within a string

2.12.2.1 Inputs

IN : STRING Input string
 POS : DINT Position of the character within the string
 (The first valid position is 1)

2.12.2.2 Outputs

CODE : DINT ASCII code of the selected character
 or 0 if position is invalid


2.12.2.3 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the first parameter (IN) must be loaded in the current result before calling the function. The other input is the operand of the function.

2.12.2.4 ST Language


CODE := ASCII (IN, POS);

2.12.2.5 FBD Language

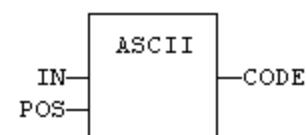

2.12.2.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO is equal to EN *)

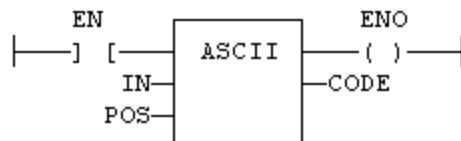

2.12.2.7 IL Language:

Op1: FFLD IN
 AND_MASK MSK
 ST CODE

See also

CHAR

2.12.3 ATOH

Function - Converts string to integer using hexadecimal basis

2.12.3.1 Inputs

IN : STRING String representing an integer in hexadecimal format

2.12.3.2 Outputs

Q : DINT Integer represented by the string

2.12.3.3 Truth table (examples)

IN	Q
''	0
'12'	18
'a0'	160
'A0zzz'	160

2.12.3.4 Remarks


The function is case insensitive. The result is 0 for an empty string. The conversion stops before the first invalid character. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.12.3.5 ST Language


Q := ATOH (IN);

2.12.3.6 FBD Language

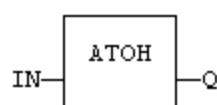

2.12.3.7 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

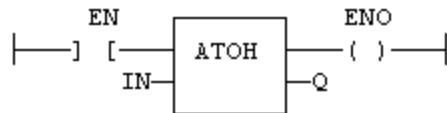

2.12.3.8 IL Language:

```
Op1: FFLD  IN
      ATOH
      ST  Q
```

See also

HTOA

2.12.4 CHAR

Function - Builds a single character string

2.12.4.1 Inputs

CODE : DINT ASCII code of the wished character

2.12.4.2 Outputs

Q : STRING STRING containing only the specified character


2.12.4.3 Remarks

In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the input parameter (CODE) must be loaded in the current result before calling the function.

2.12.4.4 ST Language

Q := CHAR (CODE);


2.12.4.5 FBD Language

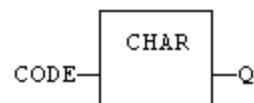

2.12.4.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO is equal to EN *)

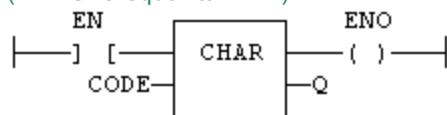

2.12.4.7 IL Language:

```
Op1: FFLD  CODE
      CHAR
      ST  Q
```

See also

ASCII

2.12.5 CONCAT

2.12.6 CRC16

Function - calculates a CRC16 on the characters of a string

2.12.6.1 Inputs

IN : STRING character string

2.12.6.2 Outputs

Q : INT CRC16 calculated on all the characters of the string.

2.12.6.3 Remarks


In FFLD language, the input rung (EN) enables the operation, and the output rung keeps the same value as the input rung. In IL language, the input parameter (IN) must be loaded in the current result before calling the function.

The function calculates a Modbus CRC16, initialized at 16#FFFF value.

2.12.6.4 ST Language


Q := CRC16 (IN);

2.12.6.5 FBD Language

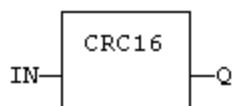

2.12.6.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO is equal to EN *)

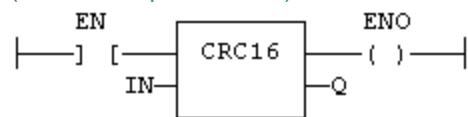

2.12.6.7 IL Language:

Op1: FFLD IN
CRC16
ST Q

2.12.7 DELETE

Function - Delete characters in a string.

2.12.7.1 Inputs

IN : STRING Character string
NBC : DINT Number of characters to be deleted
POS : DINT Position of the first deleted character (first character position is 1)

2.12.7.2 Outputs

`Q` : STRING Modified string.

2.12.7.3 Remarks


The first valid character position is 1. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. Other arguments are operands of the function, separated by commas.

2.12.7.4 ST Language

`Q := DELETE (IN, NBC, POS);`


2.12.7.5 FBD Language

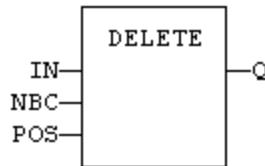

2.12.7.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

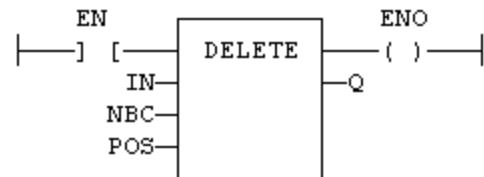

2.12.7.7 IL Language:

Op1: FFLD IN
DELETE NBC, POS
ST Q

See also

+ MLEN INSERT FIND REPLACE LEFT RIGHT MID

2.12.8 FIND

Function - Find position of characters in a string.

2.12.8.1 Inputs

`IN` : STRING Character string
`STR` : STRING String containing searched characters

2.12.8.2 Outputs

`POS` : DINT Position of the first character of STR in IN, or 0 if not found

2.12.8.3 Remarks


The first valid character position is 1. A return value of 0 means that the STR string has not been found. Search is case sensitive. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. The second argument is the operand of the function.

2.12.8.4 ST Language

`POS := FIND (IN, STR);`


2.12.8.5 FBD Language

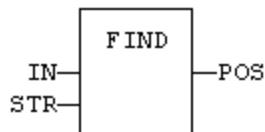

2.12.8.6 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

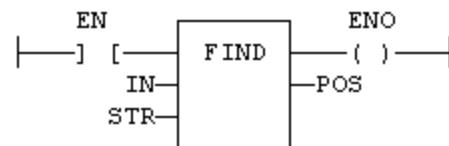

2.12.8.7 IL Language:

Op1: FFLD IN
 FIND STR
 ST POS

See also

+ MLEN DELETE INSERT REPLACE LEFT RIGHT MID

2.12.9 HTOA

Function - Converts integer to string using hexadecimal basis

2.12.9.1 Inputs

`IN : DINT Integer value`

2.12.9.2 Outputs

`Q : STRING String representing the integer in hexadecimal format`

2.12.9.3 Truth table (examples)

IN	Q
0	'0'
18	'12'
160	'A0'

2.12.9.4 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.12.9.5 ST Language

`Q := HTOA (IN);`


2.12.9.6 FBD Language

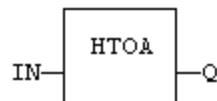

2.12.9.7 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

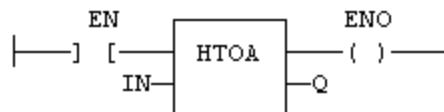

2.12.9.8 IL Language:

Op1: FFLD IN
HTOA
ST Q

See also

ATOH

2.12.10 INSERT

Function - Insert characters in a string.

2.12.10.1 Inputs

IN : STRING Character string
STR : STRING String containing characters to be inserted
POS : DINT Position of the first inserted character (first character position is 1)

2.12.10.2 Outputs

Q : STRING Modified string.

2.12.10.3 Remarks


The first valid character position is 1. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. Other arguments are operands of the function, separated by commas.

2.12.10.4 ST Language


`Q := INSERT (IN, STR, POS);`

2.12.10.5 FBD Language

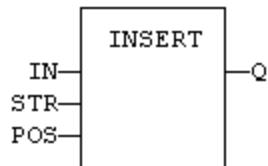

2.12.10.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

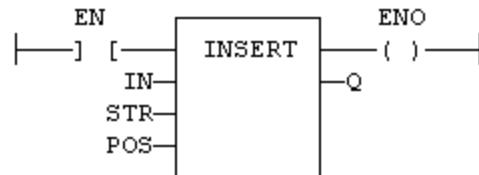

2.12.10.7 IL Language:

Op1: FFLD IN
 INSERT STR, POS
 ST Q

See also

+ MLEN DELETE FIND REPLACE LEFT RIGHT MID

2.12.11 LEFT

Function - Extract characters of a string on the left.

2.12.11.1 Inputs

IN : STRING Character string
 NBC : DINT Number of characters to extract

2.12.11.2 Outputs

Q : STRING String containing the first NBC characters of IN.

2.12.11.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. The second argument is the operand of the function.

2.12.11.4 ST Language


Q := LEFT (IN, NBC);

2.12.11.5 FBD Language

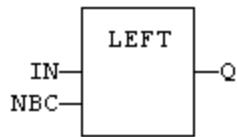

2.12.11.6 FFLD Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

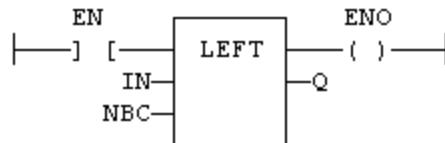

2.12.11.7 IL Language:

Op1: FFLD IN
 LEFT NBC
 ST Q

See also

+ MLEN DELETE INSERT FIND REPLACE RIGHT MID

2.12.12 LoadString

Function - Load a string from the active string table.

2.12.12.1 Inputs

ID: DINT ID of the string as declared in the string table

2.12.12.2 Outputs

Q : STRING Loaded string or empty string in case of error

2.12.12.3 Remarks


This function loads a string from the active string table and stores it into a STRING variable. The StringTable() function is used for selecting the active string table.

The "ID" input (the string item identifier) is an identifier such as declared within the string table resource. You don't need to "define" again this identifier. The system does it for you.


2.12.12.4 ST Language

Q := LoadString (ID);

2.12.12.5 FBD Language

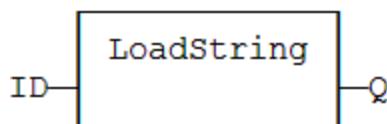

2.12.12.6 FFLD Language

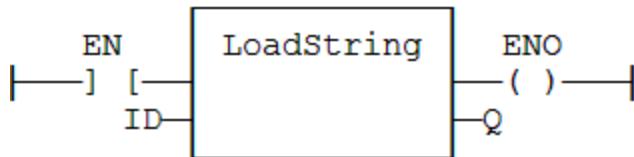

2.12.12.7 IL Language:

```

Op1: FFLD      ID
        LoadString
        ST      Q
  
```

See also

StringTable String tables

2.12.13 MID

Function - Extract characters of a string at any position.

2.12.13.1 Inputs

IN : STRING	Character string
NBC : DINT	Number of characters to extract
POS : DINT	Position of the first character to extract (first character of IN is at position 1)

2.12.13.2 Outputs

Q : STRING String containing the first NBC characters of IN.

2.12.13.3 Remarks


The first valid position is 1. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. Other arguments are operands of the function, separated by commas.

2.12.13.4 ST Language


Q := MID (IN, NBC, POS);

2.12.13.5 FBD Language

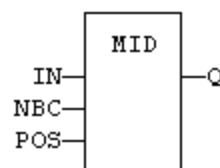

2.12.13.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

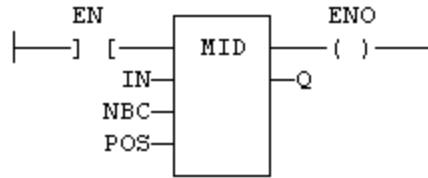

2.12.13.7 IL Language:

Op1: FFLD IN
MID NBC, POS
ST Q

See also

+ MLEN DELETE INSERT FIND REPLACE LEFT RIGHT

2.12.14 MLEN

Function - Get the number of characters in a string.

2.12.14.1 Inputs

IN : STRING Character string

2.12.14.2 Outputs

NBC : DINT Number of characters currently in the string. 0 if string is empty.

2.12.14.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

2.12.14.4 ST Language


NBC := MLEN (IN);

2.12.14.5 FBD Language

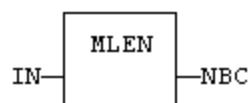

2.12.14.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

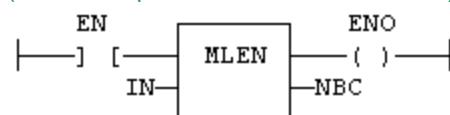

2.12.14.7 IL Language:

Op1: FFLD IN
MLEN
ST NBC

See also

- + DELETE INSERT FIND REPLACE LEFT RIGHT MID

2.12.15 REPLACE

Function - Replace characters in a string.

2.12.15.1 Inputs

IN : STRING Character string
 STR : STRING String containing the characters to be inserted
 in place of NDEL removed characters
 NDEL : DINT Number of characters to be deleted before insertion of STR
 POS : DINT Position where characters are replaced (first character position is 1)

2.12.15.2 Outputs

Q : STRING Modified string.


2.12.15.3 Remarks

The first valid character position is 1. In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. Other arguments are operands of the function, separated by commas.


2.12.15.4 ST Language

Q := REPLACE (IN, STR, NDEL, POS);

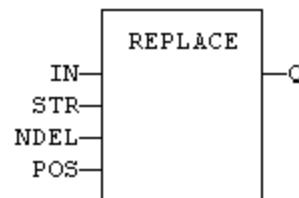2.12.15.5 FBD Language**2.12.15.6 FFLD Language**

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

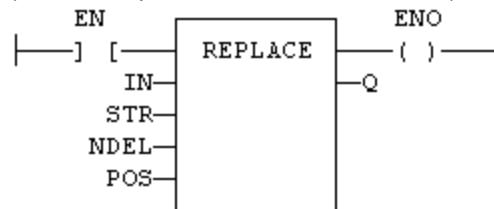**2.12.15.7 IL Language:**

Op1: FFLD IN
 REPLACE STR, NDEL, POS
 ST Q

See also

+ MLEN DELETE INSERT FIND LEFT RIGHT MID

2.12.16 RIGHT

Function - Extract characters of a string on the right.

2.12.16.1 Inputs

IN : STRING Character string
NBC : DINT Number of characters to extract

2.12.16.2 Outputs

Q : STRING String containing the last NBC characters of IN.

2.12.16.3 Remarks


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the first input (the string) must be loaded in the current result before calling the function. The second argument is the operand of the function.

2.12.16.4 ST Language


Q := RIGHT (IN, NBC);

2.12.16.5 FBD Language

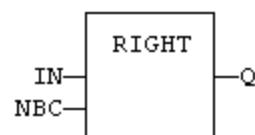

2.12.16.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

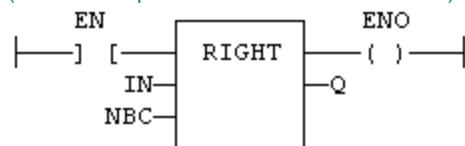

2.12.16.7 IL Language:

Op1: FFLD IN
RIGHT NBC
ST Q

See also

+ MLEN DELETE INSERT FIND REPLACE LEFT MID

2.12.17 StringTable

Function - Selects the active string table.

2.12.17.1 Inputs

TABLE : STRING Name of the String Table resource - *must be a constant*
COL : STRING Name of the column in the table - *must be a constant*

2.12.17.2 Outputs

OK : BOOL TRUE if OK

2.12.17.3 Remarks

This function selects a column of a valid String Table resource to become the active string table. The LoadString() function always refers to the active string table.


Arguments must be constant string expressions and must fit to a declared string table and a valid column name within this table.

If you have only one string table with only one column defined in your project, you do not need to call this function as it will be the default string table anyway.


2.12.17.4 ST Language

OK := StringTable ('MyTable', 'FirstColumn');

2.12.17.5 FBD Language

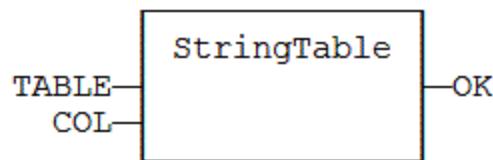

2.12.17.6 FFLD Language

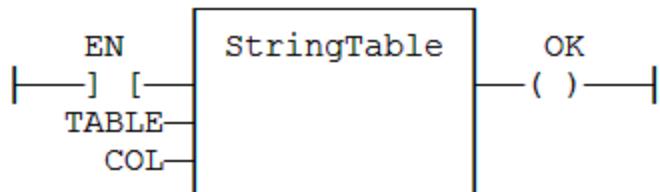

2.12.17.7 IL Language:

```
Op1: FFLD      'MyTable'
StringTable 'First Column'
ST      OK
```

See also

LoadString String tables

2.12.18 StringToArray / StringToArrayU

Function - Copies the characters of a STRING to an array of SINT.

2.12.18.1 Inputs

SRC : STRING Source STRING
DST : SINT Destination array of SINT small integers (USINT for StringToArrayU)

2.12.18.2 Outputs

`Q : DINT` Number of characters copied

2.12.18.3 Remarks

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.


In IL, the input must be loaded in the current result before calling the function.

This function copies the characters of the SRC string to the first characters of the DST array. The function checks the maximum size destination arrays and reduces the number of copied characters if necessary.

2.12.18.4 ST Language


`Q := StringToArray (SRC, DST);`

2.12.18.5 FBD Language

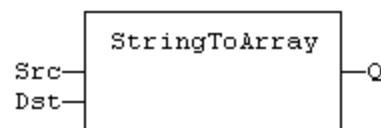

2.12.18.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

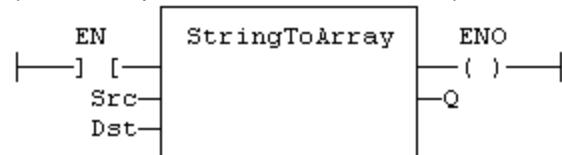

2.12.18.7 IL Language:

Op1: FFLD SRC
StringToArray DST
ST Q

See also

[ArrayToString](#)

This page intentionally left blank.

3 Advanced operations

Below are the standard blocks that perform advanced operations.

Analog signal processing:

Average / Aver-	Calculate the average of signal samples
ageL	
Integral	Calculate the integral of a signal
Derivate	Derivate a signal
PID	PID loop
Ramp	Ramp signal
Rand	Give a Random value modulo the input value
Lim_Alrm	Low / High level detection
Hyster	Hysteresis calculation
SigPlay	Play an analog signal from a resource
SigScale	Get a point from a signal resource
CurveLin	Linear interpolation on a curve
SurfLin	Linear interpolation on a surface

Alarm management:

Lim_Alrm	Low / High level detection
Alarm_M	Alarm with manual reset
Alarm_A	Alarm with automatic reset

Data collections and serialization:

StackInt	Stack of integers
FIFO	"First in / first out" list
LIFO	"Last in / first out" stack
SerializeIn	Extract data from a binary frame
SerializeOut	Write data to a binary frame
SerGetString	Extract a string from a binary frame
SerPutString	Copies a string to a binary frame

Data Logging:

LogFileCSV	Log values of variables to a CSV file
------------	---------------------------------------

Special operations:

GetSysInfo	Get system information
Printf	Trace messages
CycleStop	Sets the application in cycle stepping mode
FatalStop	Breaks the cycle and stop with fatal error
EnableEvents	Enable / disable produced events for binding
ApplyRecipeColumn	Apply the values of a column from a recipe file
VLID	Get the ID of an embedded list of variables
SigID	Get the ID of a signal resource

Communication:

SERIO: serial communication	
AS-interface	
TCP-IP management functions	
UDP management functions	
MQTT protocol handling	
MBSlaveRTU	MBSlaveUDP

Others:

Dynamic memory allocation functions
 Real Time Clock
 Variable size text buffers manipulation
 XML writing and parsing

3.1 ALARM_A

Function Block - Alarm with automatic reset


3.1.1 Inputs

IN : BOOL Process signal
 ACK : BOOL Acknowledge command

3.1.2 Outputs

Q : BOOL TRUE if alarm is active
 QACK : BOOL TRUE if alarm is acknowledged

3.1.3 Sequence

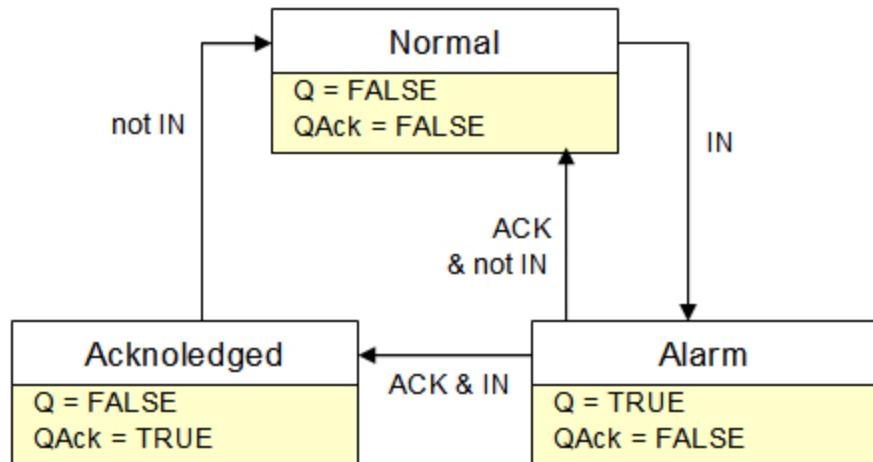


3.1.4 Remarks

Combine this block with the LIM_ALRM block for managing analog alarms.


3.1.5 ST Language

(* MyALARM is declared as an instance of ALARM_A function block *)
 MyALARM (IN, ACK);
 Q := MyALARM.Q;
 QACK := MyALARM.QACK;

3.1.6 FBD Language

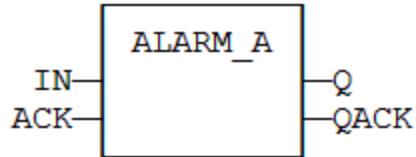

3.1.7 FFLD Language

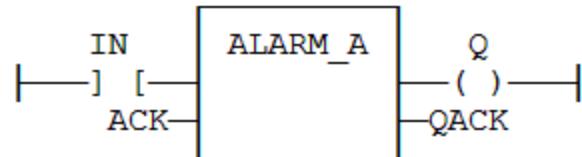

3.1.8 IL Language

(* MyALARM is declared as an instance of ALARM_A function block *)

Op1: CAL MyALARM (IN, ACK)

FFLD MyALARM.Q

ST Q

FFLD MyALARM.QACK

ST QACK

See also

ALARM_M LIM_ALRM

3.2 ALARM_M

Function Block - Alarm with manual reset

3.2.1 Inputs

IN : BOOL Process signal

ACK : BOOL Acknowledge command


RST : BOOL Reset command

3.2.2 Outputs

Q : BOOL TRUE if alarm is active

QACK : BOOL TRUE if alarm is acknowledged

3.2.3 Sequence

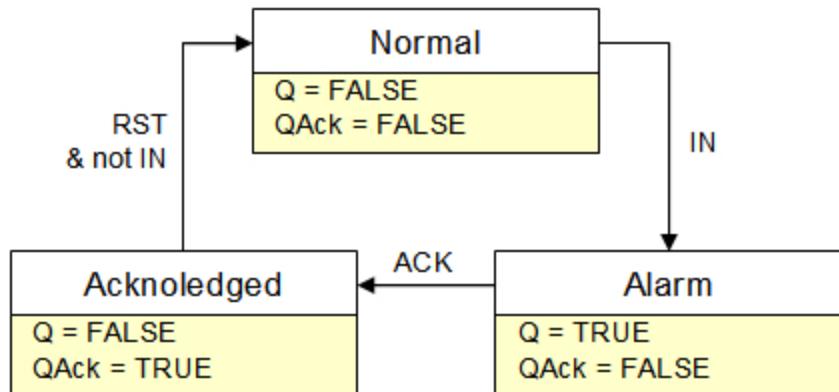


3.2.4 Remarks

Combine this block with the LIM_ALRM block for managing analog alarms.


3.2.5 ST Language

(* MyALARM is declared as an instance of ALARM_M function block *)
 MyALARM (IN, ACK, RST);
 Q := MyALARM.Q;
 QACK := MyALARM.QACK;

3.2.6 FBD Language

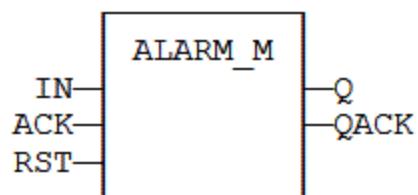

3.2.7 FFLD Language

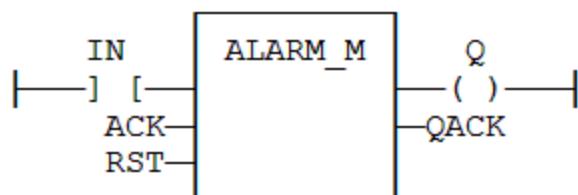

3.2.8 IL Language

(* MyALARM is declared as an instance of ALARM_M function block *)
 Op1: CAL MyALARM (IN, ACK, RST)
 FFLD MyALARM.Q
 ST Q
 FFLD MyALARM.QACK
 ST QACK

See also

ALARM_A LIM_ALRM

3.3 ApplyRecipeColumn

Function - Apply the values of a column from a recipe file

3.3.1 Inputs

FILE : STRING	Path name of the recipe file (.RCP or .CSV) - <i>must be a constant value!</i>
COL : DINT	Index of the column in the recipe (0 based)

See an example of RCP file

```
@COLNAME=Col3 Col4
@SIZECOL1=100
@SIZECOL2=100
@SIZECOL3=100
@SIZECOL4=100
bCommand
tPerio
bFast
Blink1
test_var
bOut
@EXPANDED=Blink1
```

See an example of CSV file


Example of CSV file with five variables and five set of values
comment lines here

```
TravelSpeed;100;200;300;400;500
MasterAbsPos;0;45;90;135;180
MasterDeltaPos;0;90;180;270;360
MachineSpeed;50;100;150;200;250
MachineState;0;0;1;1;2
```



For your CSV file to be valid, ensure the data are separated with **semicolons** (and not commas).

Usage in a FFID program where column 3 is selected

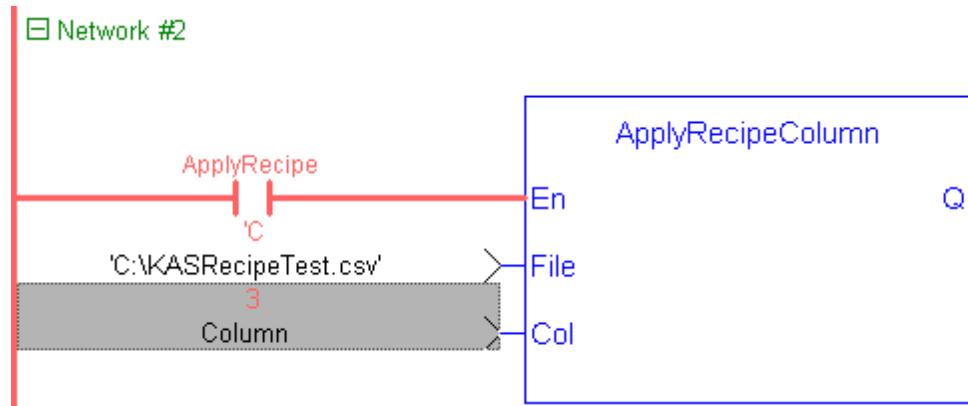

Column 3 corresponds to column E in the Excel sheet because this parameter is 0 based

	A	B	C	D	E	F
1	comment lines here					
2	TravelSpeed	100	200	300	400	500
3	MasterAbsPos	0	45	90	135	180
4	MasterDeltaPos	0	90	180	270	360
5	MachineSpeed	50	100	150	200	250
6	MachineState	0	0	1	1	2

Result displayed in the Dictionary when the application is running

Dictionary		
Controller:PLC		
	Name	Type
Global variables		
TravelSpeed	400.0000...	LREAL
MasterAbsPos	135.0000...	LREAL
MasterDeltaPos	270.0000...	LREAL
MachineSpeed	200.0000...	LREAL
Axis1Status	447	DINT
Axis2Status	447	DINT
MachineState	1	DINT

3.3.2 Outputs

OK : BOOL TRUE if OK - FALSE if parameters are invalid

3.3.3 Remarks

The 'FILE' input is a constant string expression specifying the path name of a valid .RCP or .CSV file. If no path is specified, the file is assumed to be located in the project folder. RCP files are created using an external recipe editor. CSV files can be created using EXCEL or NOTEPAD.

In CSV files, the first line must contain column headers, and is ignored during compiling. There is one variable per line. The first column contains the symbol of the variable. Other columns are values.

If a cell is empty, it is assumed to be the same value as the previous (left side) cell.
If it is the first cell of a row, it is assumed to be null (0 or FALSE or empty string).


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung is the result of the function.

IMPORTANT Recipe files are read at compiling time and are embedded into the downloaded application code. This implies that a modification performed in the recipe file after downloading is not taken into account by the application.

3.3.4 ST Language


```
OK := ApplyRecipeColumn ('MyFile.rcp', COL);
```

3.3.5 FBD Language

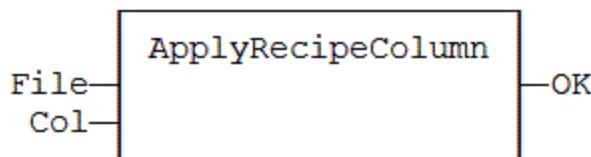

3.3.6 FFLD Language

(* The function is executed only if ApplyRecipe is TRUE *)

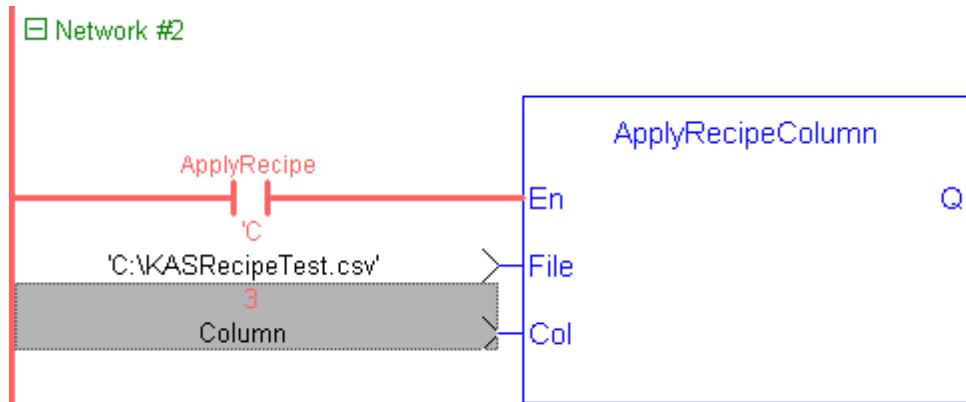

3.3.7 IL Language

```
Op1: FFLD      'MyFile.rcp'
      ApplyRecipeColumn COL
      ST          OK
```

3.4 AS-interface functions

The following functions enable special operation on AS-i networks:

ASIReadPP	read permanent parameters of an AS-i slave
ASIWritePP	write permanent parameters of an AS-i slave
ASISendParam	send parameters to an AS-i slave
ASIReadPI	read actual parameters of an AS-i slave
ASISotrePI	store actual parameters as permanent parameters

IMPORTANT AS-i networking may be not available on some targets. Please refer to OEM instructions for further details about available features.

Interface

```
Params := ASiReadPP (Master, Slave);
bOK := ASiWritePP (Master, Slave, Params);
bOK := ASiSendParam (Master, Slave, Params);
Params := ASiReadPI (Master, Slave);
bOK := ASiStorePI (Master);
```

Arguments

Master : DINT Index of the AS-i master (1..N) such as shown in configuration
 Slave : DINT Address of the AS-i slave (1..32 / 33..63)
 Params : DINT Value of AS-i parameters
 bOK : BOOL TRUE if successful

3.5 AVERAGE / AVERAGEL

Function Block - Calculates the average of signal samples.

3.5.1 Inputs

RUN : BOOL Enabling command
 XIN : REAL Input signal
 N : DINT Number of samples stored for average calculation - Cannot exceed 128

3.5.2 Outputs

XOUT : REAL Average of the stored samples (*)

(*) AVERAGEL has LREAL arguments.

3.5.3 Remarks

The average is calculated according to the number of stored samples, which can be less than N when the block is enabled. By default the number of samples is 128.

The "N" input (or the number of samples) is taken into account *only* when the RUN input is FALSE.

① TIP

The "RUN" needs to be reset after a change in the number of samples. You should cycle the RUN input when you first call this function, this will clear the default.

NOTE


In FF/LD language, the input rung is the RUN command. The output rung keeps the state of the input rung.

3.5.4 ST Language

(* MyAve is a declared instance of AVERAGE function block *)


```
MyAve (RUN, XIN, N);
XOUT := MyAve.XOUT;
```

3.5.5 FBD Language

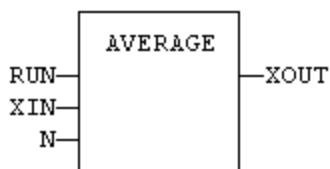

3.5.6 FFLD Language

(* ENO has the same state as RUN *)

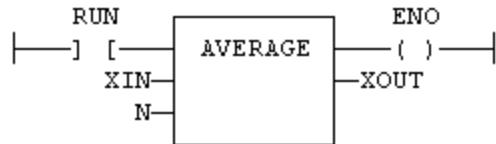

3.5.7 IL Language:

(* MyAve is a declared instance of AVERAGE function block *)

Op1: CAL MyAve (RUN, XIN, N)

 FFLD MyAve.XOUT

 ST XOUT

See also

INTEGRAL DERIVATE LIM_ALRM HYSTER STACKINT

3.6 CurveLin

Function block- Linear interpolation on a curve.

3.6.1 Inputs

X : REAL X coordinate of the point to be interpolated.

XAxis : REAL[] X coordinates of the known points of the X axis.

YVal : REAL[] Y coordinate of the points defined on the X axis.

3.6.2 Outputs

Y : REAL Interpolated Y value corresponding to the X input

OK : BOOL TRUE if successful.

ERR : DINT Error code if failed - 0 if OK.

3.6.3 Remarks

This function performs linear interpolation in between a list of points defined in the XAxis single dimension array. The output Y value is an interpolation of the Y values of the two rounding points defined in the X axis. Y values of defined points are passed in the YVal single dimension array.

Values in XAxis must be sorted from the smallest to the biggest. There must be at least two points defined in the X axis. YVal and XAxis input arrays must have the same dimension.

In case the X input is less than the smallest defined X point, the Y output takes the first value defined in YVal and an error is reported. In case the X input is greater than the biggest defined X point, the Y output takes the last value defined in YVal and an error is reported.

The ERR output gives the cause of the error if the function fails:

Error Code	Meaning
0	OK
1	Invalid dimension of input arrays
2	Invalid points for the X axis
4	X is out of the defined X axis

3.7 DERIVATE

Function Block - Derivates a signal.

3.7.1 Inputs

RUN : BOOL Run command: TRUE=derivate / FALSE=hold
 XIN : REAL Input signal
 CYCLE : TIME Sampling period (must not be less than the target cycle timing)

3.7.2 Outputs

XOUT : REAL Output signal


3.7.3 Remarks

In FFLD language, the input rung is the RUN command. The output rung keeps the state of the input rung.

3.7.4 ST Language


(* MyDerv is a declared instance of DERIVATE function block *)
 MyDerv (RUN, XIN, CYCLE);
 XOUT := MyDerv.XOUT;

3.7.5 FBD Language

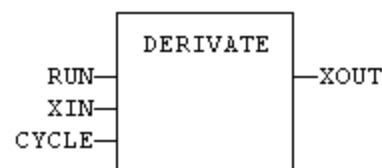

3.7.6 FFLD Language

(* ENO has the same state as RUN *)

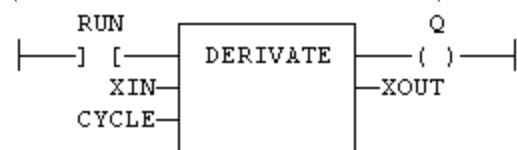

3.7.7 IL Language:

(* MyDerv is a declared instance of DERIVATE function block *)
 Op1: CAL MyDerv (RUN, XIN, CYCLE)
 FFLD MyDerv.XOUT
 ST XOUT

See also

AVERAGE INTEGRAL LIM_ALRM HYSTERSTACKINT

3.8 Dynamic memory allocation functions

The following functions enable the dynamic allocation of arrays for storing DINT integer values:

ARCREATE allocates an array of DINT integers
 ARREAD read a DINT integer in an array allocated by ARCREATE
 ARWRITE write a DINT integer in an array allocated by ARCREATE

IMPORTANT

- The memory used for those arrays is allocated directly by the Operating System of the target. There is no insurance that the required memory space will be available.
- Allocating large arrays may cause the Operating System to be instable or slow down the performances of the target system.
- Dynamic memory allocation may be unsuccessful (not enough memory available on the target). Your application should process such error cases in a safe way.
- Dynamic memory allocation may be not available on some targets. Please refer to OEM instructions for further details about available features.

ARCREATE: array allocation

```
OK := ARCREATE (ID, SIZE);

ID : DINT    integer ID to be assigned to the array (first possible ID is 0)
SIZE : DINT   wished number of DINT values to be stored in the array
OK : DINT    return check
```

Return values

- 1 OK - array is allocated and ready for read / write operations
- 2 the specified ID is invalid or already used for another array
- 3 the specified size is invalid
- 4 not enough memory (action denied by the Operating System)

The memory allocated by ARCREATE will be released when the application stops.

ARREAD: read array element

```
VAL := ARREAD (ID, POS);

ID : DINT    integer ID of the array
POS : DINT   index of the element in the array (first valid index is 0)
VAL : DINT   value of the specified item or 0 if arguments are invalid
```

ARWRITE: write array element

```
OK := ARWRITE (ID, POS, VAL);

ID : DINT    integer ID of the array
POS : DINT   index of the element in the array (first valid index is 0)
VAL : DINT   value to be assigned to the element
OK : DINT    return check
```

Return values

- 1 OK - element was forced successfully
- 2 the specified ID is invalid (not an allocated array)
- 3 the specified index is invalid (out of array bounds)

3.9 EnableEvents

Function - Enable or disable the production of events for binding(runtime to runtime variable exchange)

3.9.1 Inputs

EN : BOOL TRUE to enable events / FALSE to disable events

3.9.2 Outputs

ENO : BOOL Echo of EN input

3.9.3 Remarks


Production is enabled when the application starts. The first production will be operated after the first cycle. So to disable events since the beginning, you must call EnableEvents (FALSE) in the very first cycle.

In FFLD language, the input rung (EN) enables the event production, and the output rung keeps the state of the input rung. In IL language, the input must be loaded before the function call.

3.9.4 ST Language


ENO := EnableEvents (EN);

3.9.5 FBD Language

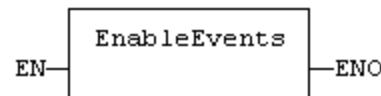

3.9.6 FFLD Language

(* Events are enables if EN is TRUE *)
(* ENO has the same value as EN *)

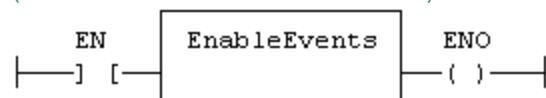

3.9.7 IL Language:

Op1: FFLD EN
EnableEvents
ST ENO

3.10 FIFO

Function block - Manages a "first in / first out" list

3.10.1 Inputs

PUSH : BOOL	Push a new value (on rising edge)
POP : BOOL	Pop a new value (on rising edge)
RST : BOOL	Reset the list
NEXTIN : ANY	Value to be pushed

NEXTOUT : ANY Value of the oldest pushed value - *updated after call!*
 BUFFER : ANY Array for storing values

3.10.2 Outputs

EMPTY : BOOL	TRUE if the list is empty
OFLO : BOOL	TRUE if overflow on a PUSH command
COUNT : DINT	Number of values in the list
PREAD : DINT	Index in the buffer of the oldest pushed value
PWRITE : DINT	Index in the buffer of the next push position

3.10.3 Remarks

NEXTIN, NEXTOUT and BUFFER must have the same data type *and cannot be STRING*.

The NEXTOUT argument specifies a variable which is filled with the oldest push value after the block is called.

Values are stored in the "BUFFER" array. Data is arranged as a roll over buffer and is never shifted or reset. Only read and write pointers and pushed values are updated. The maximum size of the list is the dimension of the array.


The first time the block is called, it remembers on which array it should work. If you call later the same instance with another BUFFER input, the call is considered as invalid and makes nothing. Outputs reports an empty list in this case.

In FFLD language, input rung is the PUSH input. The output rung is the EMPTY output.


3.10.4 ST Language

(* MyFIFO is a declared instance of FIFO function block *)
 MyFIFO (PUSH, POP, RST, NEXTIN, NEXTOUT, BUFFER);
 EMPTY := MyFIFO.EMPTY;
 OFLO := MyFIFO.OFLO;
 COUNT := MyFIFO.COUNT;
 PREAD := MyFIFO.PREAD;
 PWRITE := MyFIFO.PWRITE;

3.10.5 FBD Language

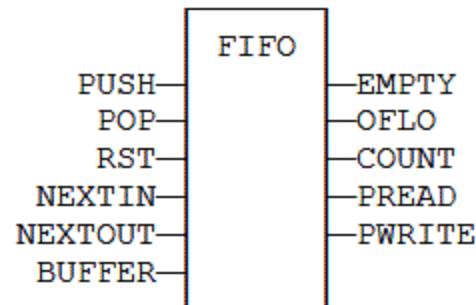

3.10.6 FFLD Language

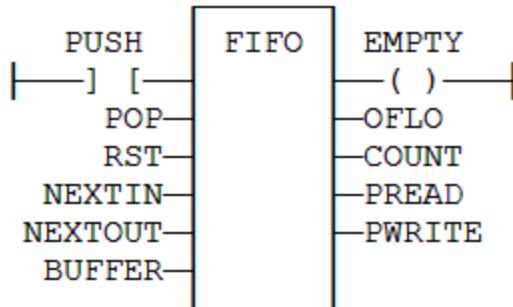

3.10.7 IL Language

(* MyFIFO is a declared instance of FIFO function block *)

```

Op1: CAL MyFIFO (PUSH, POP, RST, NEXTIN, NEXTOUT, BUFFER)
FFLD MyFIFO.EMPTY
ST EMPTY
FFLD MyFIFO.OFLO
ST OFLO
FFLD MyFIFO.COUNT
ST COUNT
FFLD MyFIFO.PREAD
ST PREAD
FFLD MyFIFO.PWRITE
ST PWRITE

```

See also

LIFO

3.11 About the File Management Functions

The following functions enable sequential read / write operations in disk files:

Name	Use
F_AOPEN	Create or open a file in append mode
F_CLOSE	Close an open file
F_COPY	Copy a file
F_DELETE	Remove a file
F_EOF	Test if the end of the file is reached in a file that is open for reading
F_EXIST	Test if a file exists
F_GETSIZE	Get the size of a file
F_RENAME	Rename a file
F_ROPEN	Open a file for reading
F_WOPEN	Create or reset a file and open it for writing
FA_READ	Read a DINT integer from a binary file
FA_WRITE	Write a DINT integer to a binary file
FB_READ	Read binary data from a file
FB_WRITE	Write binary data to a file

Name	Use
FM_READ	Read a string value from a text file
FM_WRITE	Write a string value to a text file
SD_MOUNT	Mount an SD card
SD_UNMOUNT	Unmount an SD card
SD_ISREADY	Check that the SD card is ready for read/write

Related function blocks:

LogFileCSV log values of variables to a CSV file

Each file is identified in the application by a unique handle manipulated as a DINT value. The file handles are allocated by the target system. Handles are returned by the Open functions and used in all other calls for identifying the file.

① IMPORTANT

- These functions can have a serious impact on CPU load and the life expectancy of a flash drive. **It is highly recommended that these be used on an event basis, and not at every PLC cycle.**
- Files are opened and closed directly by the Operating System of the target. Opening some files can be dangerous for system safety and integrity. **The number of open files may be limited to only ONE file by the target system.**

NOTE

- Opening a file can be unsuccessful (invalid path or file name, too many open files...) Your application must process such error cases in a safe way.
- File management may be unavailable on some targets.
- Memory on the SD card is available in addition to the existing flash memory.
- Valid paths for storing files depend on the target implementation.
- Error messages are logged in the Controller log section of KAS Runtime where there is a failure in any related function block.
- Using the KAS Simulator, all pathnames are ignored, and files are stored in a reserved directory. Only the file name passed to the Open functions is taken into account.
- PAC and AKD PDMM binary files are not identical. AKD PDMM files are big endian, meaning the data structures between the files are different.

3.11.1 SD Card Access

Files may be written to and read from an SD card. This is typically used for storing a firmware image for Recovery Mode.

To use an SD card on the PDMM:

1. Ensure that the SD card is inserted
2. Mount the card using "About the File Management Functions" (see page 192)
3. Ensure the card is accessible using "About the File Management Functions" (see page 192) before performing a read or write action
4. Unmount the card, if desired, using "About the File Management Functions" (see page 192) after performing read/write actions

3.11.2 System Conventions

Depending upon the system used, paths to file locations may be defined as either absolute (C://dir1/file1) or relative paths (/dir1/file1). Not all systems handle all options, and the paths will vary depending upon the system.

System	Absolute Paths	Relative Paths
PAC	X	X
Simulator	X	X
AKD PDMM		X

3.11.2.1 PAC Path Conventions

When a relative path is provided to the function blocks, the path is appended with the default userdata folder, which is:

```
<User Directory>/Kollmorgen/Kollmorgen Automation Suite/Sinope
Runtime/Application/userdata
```

3.11.2.2 Simulator Path Conventions

When a relative path is provided to the function blocks, the path is appended with the default userdata folder, which is:

```
<User Directory>/Kollmorgen/Kollmorgen Automation Suite/Sinope
Simulator/Application/userdata
```

3.11.2.3 AKD PDMM Path Conventions

AKD PDMM only allows for relative paths and there is no support for creating directories on the AKD PDMM. Any path provided to these function blocks, file1 for example, will be appended with the default userdata folder which is:
/mount/flash/userdata

3.11.2.4 SD Card Path Conventions

To access the SD card memory a valid SD card label must be used at the beginning of the path, followed by the relative path to the SD card. (*Valid SD Card Label*)/(*Relative Path*)

A valid SD card relative path starts with //, /, \\, or \. This is immediately followed by SDCard which is followed by \ or /. Please note that this path label is case insensitive.

Valid Paths	Notes
//SDCard/file1	
\Sdcard\dir1\file1	dir1 must have been already created
/sdcard/dir1/file1	dir1 must have been already created
//sdCard\file1	

Invalid Paths	Reason for being invalid
//SDCard/file1	Started with more than two forward or backward slashes
\Sdcard\dir1\file1	Started with one forward and one backward slash
/sdcarddir1\file1	No forward or backward slash
/sdcard1\dir1\file1	Invalid label

In order to maintain compatibility with a PAC or Simulator, the SDCard folder is created inside the userdata folder . File access points to userdata/SDCard when a PDMM SDCard path is used on a PAC or Simulator.

3.11.2.5 File Name Warning - Limitations

File names in the PAC flash storage are case-insensitive. File names in the PDMM flash storage are case-sensitive and the SD card (FAT16 or FAT32) are not case-sensitive.

Storage	File System	Case-Sensitive
PAC compact flash	NTFS	No
PDMM embedded flash	FFS3 (POSIX-like)	Yes
PDMM SD card	FAT16 or FAT32	No

For example, two files (`MyFile.txt` and `myfile.txt`) can exist in the same directory of the PDMM flash, but cannot exist in the same directory on a PAC or the PDMM's SD card. If you copy two files (via backup operation or function) with the same name, but different upper/lower case letters, from the PDMM flash to the SD card, one of the files will be lost. **To prevent conflicts and to keep your application compatible across all platforms, use unique filenames and do not rely on case-sensitive filenames.**

3.12 GETSYSINFO

Function - Returns system information.

3.12.1 Inputs

`INFO : DINT` Identifier of the requested information

3.12.2 Outputs

`Q : DINT` Value of the requested information or 0 if error

3.12.3 Remarks

The `INFO` parameter can be one of the following predefined values:

Value	Definition
<code>_SYSINFO_TRIGGER_MICROS</code>	programmed cycle time in micro-seconds
<code>_SYSINFO_TRIGGER_MS</code>	programmed cycle time in milliseconds
<code>_SYSINFO_CYCLETIME_MICROS</code>	duration of the previous cycle in micro-seconds
<code>_SYSINFO_CYCLETIME_MS</code>	duration of the previous cycle in milliseconds
<code>_SYSINFO_CYCLEMAX_MICROS</code>	maximum detected cycle time in micro-seconds
<code>_SYSINFO_CYCLEMAX_MS</code>	maximum detected cycle time in milliseconds
<code>_SYSINFO_CYCLESTAMP_MS</code>	time stamp of the current cycle in milliseconds (OEM dependent)
<code>_SYSINFO_CYCLEOVERFLOWS</code>	number of detected cycle time overflows
<code>_SYSINFO_CYCLECOUNT</code>	counter of cycles
<code>_SYSINFO_APPSTAMP</code>	compiling date stamp of the application


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

In IL, the input must be loaded in the current result before calling the function.

3.12.4 ST Language


`Q := GETSYSINFO (INFO);`

3.12.5 FBD Language

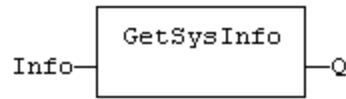

3.12.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

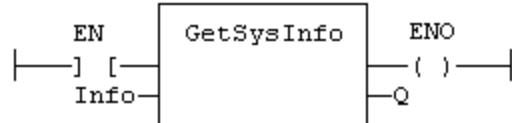

3.12.7 IL Language:

```
Op1: FFLLD INFO
      GETSYSINFO
      ST Q
```

3.13 HYSTER

Function Block - Hysteresis detection.

3.13.1 Inputs

XIN1 : REAL First input signal
XIN2 : REAL Second input signal
EPS : REAL Hysteresis

3.13.2 Outputs

Q : BOOL Detected hysteresis: TRUE if XIN1 becomes greater than XIN2+EPS and is not yet below XIN2-EPS


3.13.3 Remarks

The hysteresis is detected on the difference of XIN1 and XIN2 signals. In FFLD language, the input rung (EN) is used for enabling the block. The output rung is the Q output.

3.13.4 ST Language


(* MyHyst is a declared instance of HYSTER function block *)
MyHyst (XIN1, XIN2, EPS);
Q := MyHyst.Q;

3.13.5 FBD Language

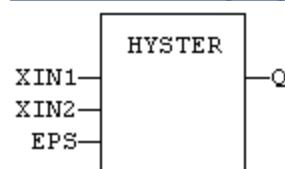

3.13.6 FFLD Language

(* The block is not called if EN is FALSE *)

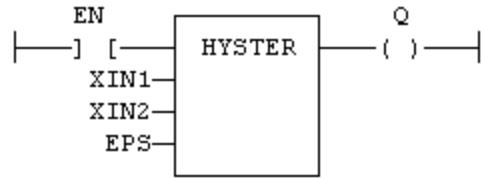

3.13.7 IL Language:

(* MyHyst is a declared instance of HYSTER function block *)

Op1: CAL MyHyst (XIN1, XIN2, EPS)

FFLD MyHyst.Q

ST Q

See also

AVERAGE INTEGRAL DERIVATE LIM_ALRM STACKINT

3.14 INTEGRAL

Function Block - Calculates the integral of a signal.

3.14.1 Inputs

RUN : BOOL	Run command: TRUE=integrate / FALSE=hold
R1 : BOOL	Overriding reset
XIN : REAL	Input signal
X0 : REAL	Initial value
CYCLE : TIME	Sampling period (must not be less than the target cycle timing)

3.14.2 Outputs

Q : DINT	Running mode report: NOT (R1)
XOUT : REAL	Output signal

3.14.3 Remarks

In FFLD language, the input rung is the RUN command. The output rung is the Q report status.

3.14.4 ST Language


(* MyIntg is a declared instance of INTEGRAL function block *)

MyIntg (RUN, R1, XIN, X0, CYCLE);


Q := MyIntg.Q;

XOUT := MyIntg.XOUT;

3.14.5 FBD Language

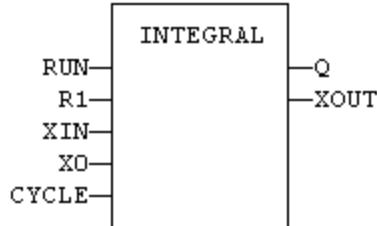

3.14.6 FFLD Language

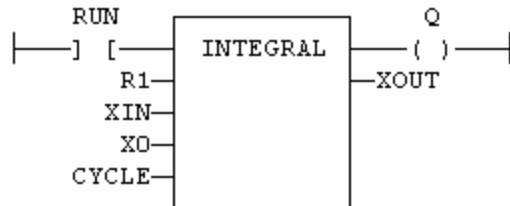

3.14.7 IL Language:

(* MyIntg is a declared instance of INTEGRAL function block *)

Op1: CAL MyIntg (RUN, R1, XIN, X0, CYCLE)

```

FFLD MyIntg.Q
ST Q
FFLD MyIntg.XOUT
ST XOUT
  
```

See also

AVERAGE DERIVATE LIM_ALRM HYSTER STACKINT

3.15 LIFO

Function block - Manages a "last in / first out" stack

3.15.1 Inputs

PUSH : BOOL	Push a new value (on rising edge)
POP : BOOL	Pop a new value (on rising edge)
RST : BOOL	Reset the list
NEXTIN : ANY	Value to be pushed
NEXTOUT : ANY	Value at the top of the stack - <i>updated after call!</i>
BUFFER : ANY	Array for storing values

3.15.2 Outputs

EMPTY : BOOL	TRUE if the stack is empty
OFLO : BOOL	TRUE if overflow on a PUSH command
COUNT : DINT	Number of values in the stack
PREAD : DINT	Index in the buffer of the top of the stack
PWRITE : DINT	Index in the buffer of the next push position

3.15.3 Remarks

NEXTIN, NEXTOUT and BUFFER must have the same data type *and cannot be STRING*.

The NEXTOUT argument specifies a variable which is filled with the value at the top of the stack after the block is called.

Values are stored in the "BUFFER" array. Data is never shifted or reset. Only read and write pointers and pushed values are updated. The maximum size of the stack is the dimension of the array.


The first time the block is called, it remembers on which array it should work. If you call later the same instance with another BUFFER input, the call is considered as invalid and makes nothing. Outputs reports an empty stack in this case.

In FFLD language, input rung is the PUSH input. The output rung is the EMPTY output.


3.15.4 ST Language

```
(* MyLIFO is a declared instance of LIFO function block *)
MyLIFO (PUSH, POP, RST, NEXTIN, NEXTOUT, BUFFER);
EMPTY := MyLIFO.EMPTY;
OFLO := MyLIFO.OFLO;
COUNT := MyLIFO.COUNT;
PREAD := MyLIFO.PREAD;
PWRITE := MyLIFO.PWRITE;
```

3.15.5 FBD Language

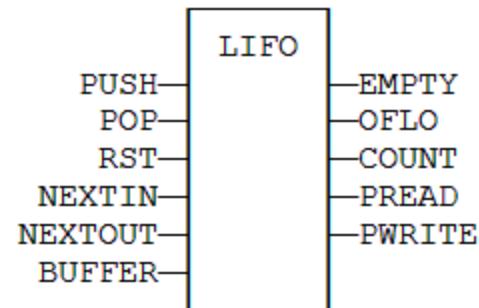

3.15.6 FFLD Language

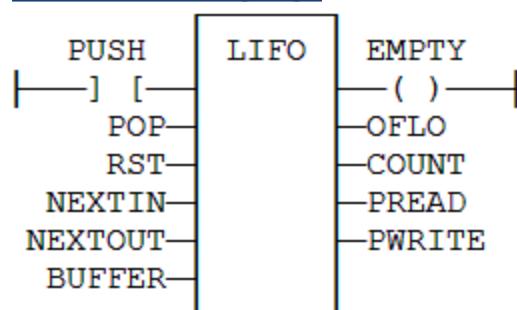

3.15.7 IL Language

(* MyLIFO is a declared instance of LIFO function block *)

Op1: CAL MyLIFO (PUSH, POP, RST, NEXTIN, NEXTOUT, BUFFER)

```

FFLD MyLIFO.EMPTY
ST EMPTY
FFLD MyLIFO.OFLO
ST OFLO
FFLD MyLIFO.COUNT
ST COUNT
FFLD MyLIFO.PREAD
ST PREAD
FFLD MyLIFO.PWRITE
ST PWRITE

```

See also

FIFO

3.16 LIM_ALRM

Function Block - Detects High and Low limits of a signal with hysteresis.

3.16.1 Inputs

H : REAL	Value of the High limit
X : REAL	Input signal
L : REAL	Value of the Low limit
EPS : REAL	Value of the hysteresis

3.16.2 Outputs

QH : BOOL	TRUE if the signal exceeds the High limit
Q : BOOL	TRUE if the signal exceeds one of the limits (equals to QH OR QL)
QL : BOOL	TRUE if the signal exceeds the Low limit

3.16.3 Remarks

In FFLD language, the input rung (EN) is used for enabling the block. The output rung is the QH output.

3.16.4 ST Language


(* MyAlarm is a declared instance of LIM_ALRM function block *)

```

MyAlarm (H, X, L, EPS);
QH := MyAlarm.QH;
Q := MyAlarm.Q;
QL := MyAlarm.QL;


```

3.16.5 FBD Language

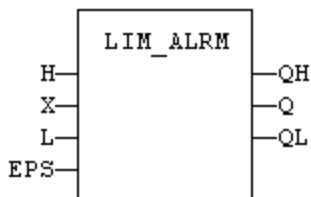

3.16.6 FFLD Language

(* The block is not called if EN is FALSE *)

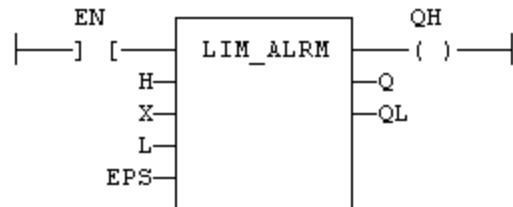

3.16.7 IL Language:

(* MyAlarm is a declared instance of LIM_ALRM function block *)

Op1: CAL MyAlarm (H, X, L, EPS)

```

FFLD MyAlarm.QH
ST QH
FFLD MyAlarm.Q
ST Q
FFLD MyAlarm.QL
ST QL
  
```

See also

ALARM_A ALARM_M

3.17 LogFileCSV

Function block - Generate a log file in CSV format for a list of variables

3.17.1 Inputs

LOG : BOOL	Variables are saved on any rising edge of this input
RST : BOOL	Reset the contents of the CSV file
LIST : DINT	ID of the list of variables to log (use VLID function)
PATH : STRING	Path name of the CSV file

3.17.2 Outputs

Q : BOOL	TRUE if the requested operation has been performed without error
ERR : DINT	Error report for the last requested operation (0 is OK)

IMPORTANT Calling this function can lead to missing several PLC cycles. Files are opened and closed directly by the target's Operating System. Opening some files may be dangerous for system safety and integrity. The number of open files may be limited by the target system.

NOTE

- Opening a file may be unsuccessful (invalid path or file name, too many open files...) Your application has to process such error cases in a safe way.
- File management may be not available on some targets. Please refer to OEM instructions for further details about available features.
- Valid paths for storing files depend on the target implementation. Please refer to OEM instructions for further details about available paths.

3.17.3 Remarks

This function enables to log values of a list of variables in a CSV file. On each rising edge of the LOG input, one more line of values is added to the file. There is one column for each variable, as they are defined in the list.

The list of variables is prepared using the KAS IDE or a text editor. Use the VLID function to get the identifier of the list.


On a rising edge of the RST command, the file is emptied.

When a LOG or RST command is requested, the Q output is set to TRUE if successful.

In case of error, a report is given in the ERR output. Possible error values are:

- 1 = Cannot reset file on a RST command
- 2 = Cannot open file for data storing on a LOG command
- 3 = Embedded lists are not supported by the runtime
- 4 = Invalid list ID
- 5 = Error while writing to file

Combined with real time clock management functions, this block provides a very easy way to generate a periodical log file. The following example shows a list and a program that log values everyday at 14h23m (2:23 pm) (see call out ①)

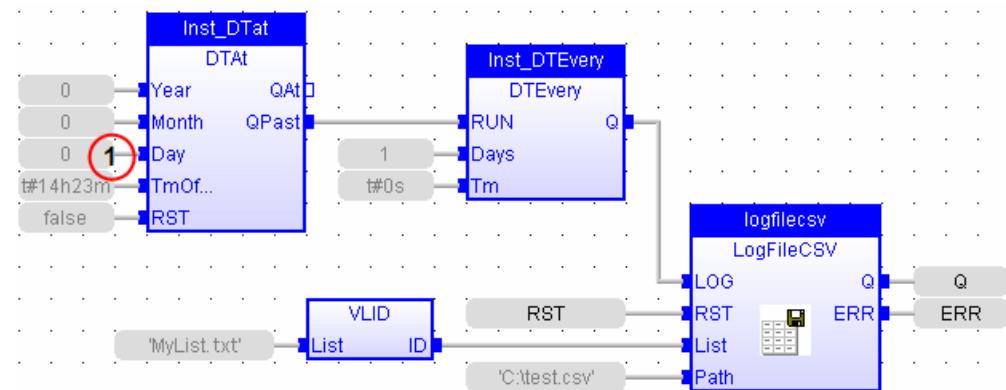

3.17.4 ST Language


(* MyLOG is a declared instance of LogFileCSV function block *)

MyLOG (b_LOG, RST, LIST, PATH);


Q := MyLOG.Q;

ERR := MyLOG.ERR;

3.17.5 FBD Language

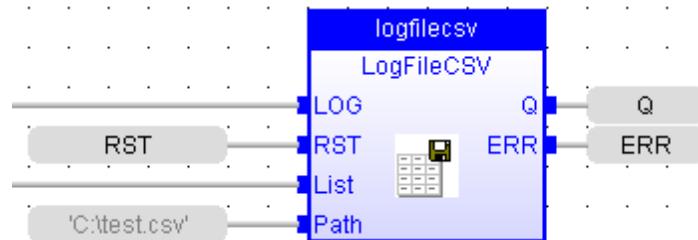

3.17.6 FFLD Language

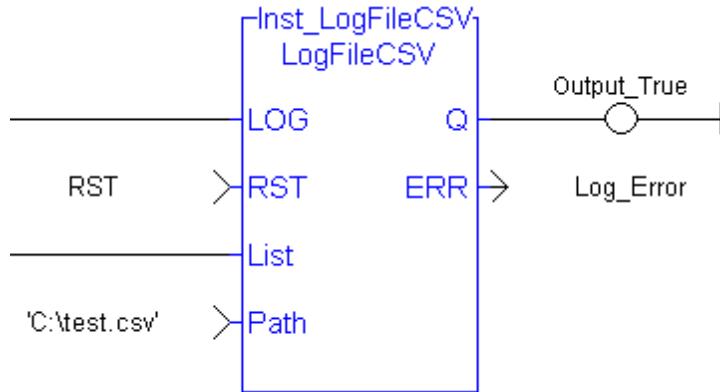

3.17.7 IL Language

```
(* MyLOG is a declared instance of LogFileCSV function block *)
Op1: CAL MyLOG (b_LOG, RST, LIST, PATH);
FFLD MyLOG.Q
ST Q
FFLD MyLog.ERR
ST ERR
```

See also

VLID

3.18 MBSlaveRTU

Function Block - Modbus RTU Slave protocol on serial port.

3.18.1 Inputs

IN : BOOL	Enabling command: the port is open when this input is TRUE
PORT : STRING	Settings string for the serial port (e.g. 'COM1:9600,N,8,1')
SLV : DINT	Modbus slave number

3.18.2 Outputs

Q : BOOL TRUE if the port is successfully open

3.18.3 Remarks

When active, this function block manages the Modbus RTU Slave protocol on the specified serial communication port. The configuration of the Modbus Slave map (designing Modbus addresses) is done using the Modbus configuration tool, from the Fieldbus Configurator.


There can be several instances of the MBSlaveRTU working simultaneously on different serial ports. Other Modbus Slave connections (TCP server, UDP) can also be active at the same time.

The slave number entered in the Modbus Slave configuration tool is ignored when Modbus Slave protocol is handled by this function block. Instead, the SLV input specifies the Modbus slave number.


3.18.4 ST Language

(* MySlave is a declared instance of MBSlaveRTU function block *)
 MySlave (IN, PORT, SLV);
 Q := MySlave.Q;

3.18.5 FBD Language

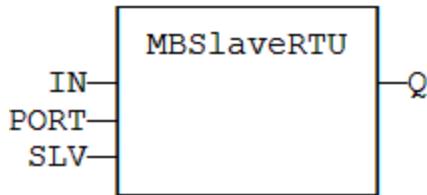

3.18.6 FFLD Language

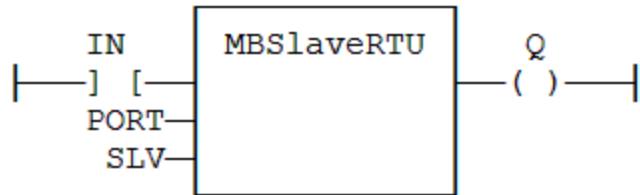

3.18.7 IL Language:

(* MySlave is a declared instance of MBSlaveRTU function block *)
 Op1: CAL MySlave (IN, PORT, SLV)
 FFLD MySlave.Q
 ST Q
 FFLD MyCounter.CV
 ST CV

See also

MBSlaveUDP

3.19 MBSlaveUDP

Function Block - Modbus UDP Slave protocol on ETHERNET.

3.19.1 Inputs

IN : BOOL	Enabling command: the port is open when this input is TRUE
PORT : DINT	ETHERNET port number
SLV : DINT	MODBUS slave number
RTU : BOOL	Protocol: TRUE = MODBUS RTU / FALSE = Open MODBUS

3.19.2 Outputs

Q : BOOL TRUE if the port is successfully open

3.19.3 Remarks

When active, this function block manages the Modbus UDP Slave protocol on the specified ETHERNETport. The configuration of the Modbus Slave map (designing

Modbus addresses) is done using the Modbus configuration tool, from the Fieldbus Configurator.

There can be several instances of the MBSlaveUDP working simultaneously on different serial ports. Other Modbus Slave connections (TCP server, serial) can also be active at the same time.


The slave number entered in the Modbus Slave configuration tool is ignored when Modbus Slave protocol is handled by this function block. Instead, the SLV input specifies the Modbus slave number. If SLV is 0 then the default port number from the Modbus configuration is used.

3.19.4 ST Language


(* MySlave is a declared instance of MBSlaveUDP function block *)

```
MySlave (IN, PORT, SLV, RTU);
Q := MySlave.Q;
```

3.19.5 FBD Language

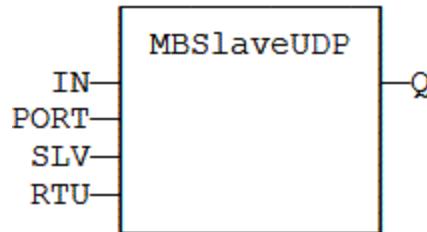

3.19.6 FFLD Language

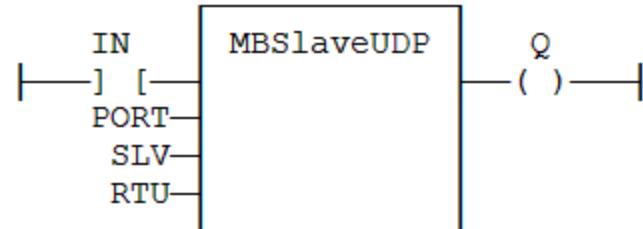

3.19.7 IL Language:

(* MySlave is a declared instance of MBSlaveUDP function block *)

```
Op1: CAL MySlave (IN, PORT, SLV, RTU)
      FFLD MySlave.Q
      ST Q
      FFLD MyCounter.CV
      ST CV
```

See also

MBSlaveRTU

3.20 PID

Function Block - PID loop


3.20.1 Inputs

Input	Type	Description
AUTO	BOOL	TRUE = normal mode - FALSE = manual mode.
PV	REAL	Process value.
SP	REAL	Set point.
Xout_Manu	REAL	Output value in manual mode.
KP	REAL	Gain.
TI	REAL	Integration time.
TD	REAL	Derivation time.
TS	TIME	Sampling period.
XMIN	REAL	Minimum allowed output value.
XMAX	REAL	Maximum output value.
I_SEL	BOOL	If FALSE, the integrated value is ignored.
INT_HOLD	BOOL	If TRUE, the integrated value is frozen.
I_ITL_ON	BOOL	If TRUE, the integrated value is reset to I_ITLVAL.
I_ITLVAL	REAL	Reset value for integration when I_ITL_ON is TRUE.
DEADB_ERR	REAL	Hysteresis on PV. PV will be considered as unchanged if greater than (PVprev - DEADBAND_W) and less than (PRprev + DEADBAND_W).
FFD	REAL	Disturbance value on output.

3.20.2 Outputs

Output	Type	Description
Xout	REAL	Output command value.
ER	REAL	Last calculated error.
Xout_P	REAL	Last calculated proportional value.
Xout_I	REAL	Last calculated integrated value.
Xout_D	REAL	Last calculated derivated value.
Xout_HLM	BOOL	TRUE if the output value is saturated to XMIN.
Xout_LLM	BOOL	TRUE if the output value is saturated to XMAX.

3.20.3 Diagram

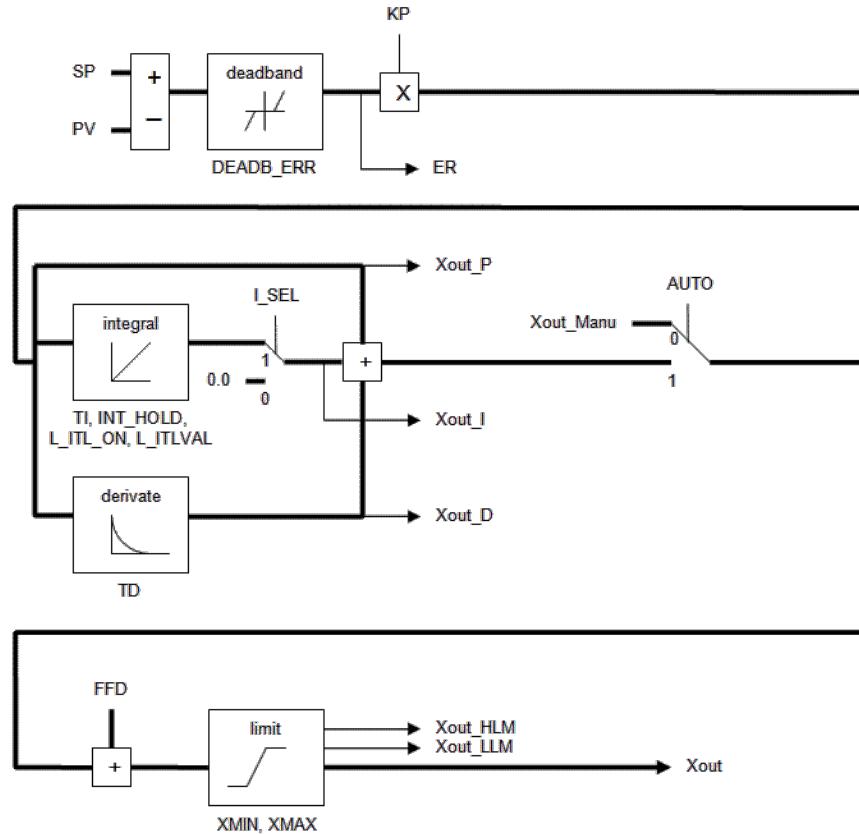


3.20.4 Remarks

- It is important for the stability of the control that the TS sampling period is much bigger than the cycle time.
- Output of the PID block always starts with zero. The value will vary per the inputs provided upon further cycle executions.
- The output rung has the same value as the **AUTO** input, corresponding to the input rung, in the FFLD language.

3.20.5 ST Language


```
(* MyPID is a declared instance of PID function block *)
MyPID (AUTO, PV, SP, XOUT_MANU, KP, TI, TD, TS, XMIN, XMAX,
I_SEL, I_ITL_ON, I_ITLVAL, DEADB_ERR, FFD);
XOUT := MyPID.XOUT;
ER := MyPID.ER;
XOUT_P := MyPID.XOUT_P;
XOUT_I := MyPID.XOUT_I;
XOUT_D := MyPID.XOUT_D;
XOUT_HLM := MyPID.XOUT_HLM;
XOUT_LLM := MyPID.XOUT_LLM;
```

3.20.6 FBD Language

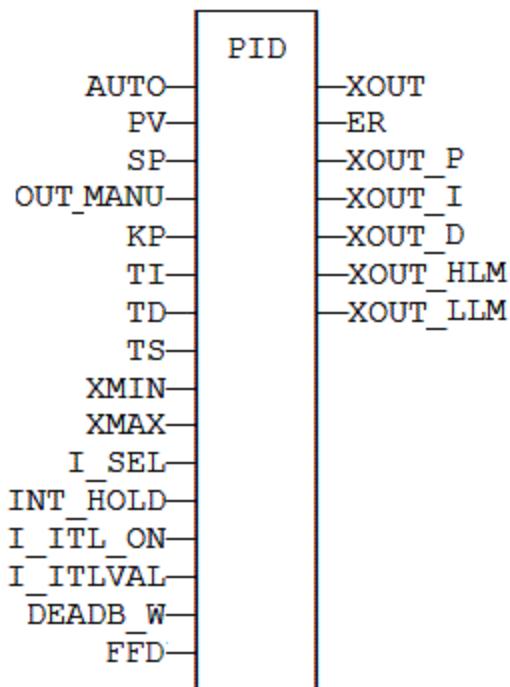

3.20.7 FFID Language

(* ENO has the same state as the input rung *)

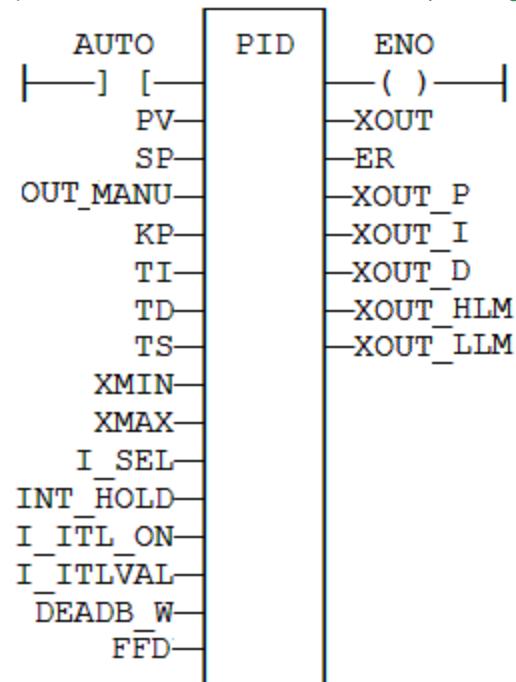

3.20.8 IL Language

(* MyPID is a declared instance of PID function block *)
Op1: CAL MyPID (AUTO, PV, SP, XOUT_MANU, KP, TI, TD, TS,
XMIN, XMAX, I_SEL, I_ITL_ON, I_ITLVAL,
DEADB_ERR, FFD)
FFLD MyPID.XOUT
ST XOUT
FFLD MyPID.ER
ST ER
FFLD MyPID.XOUT_P
ST XOUT_P
FFLD MyPID.XOUT_I
ST XOUT_I
FFLD MyPID.XOUT_D
ST XOUT_D
FFLD MyPID.XOUT_HLM
ST XOUT_HLM
FFLD MyPID.XOUT_LLM
ST XOUT_LLM

3.21 PID Functions

3.22 RAMP

Function block - Limit the ascendance or descendence of a signal


3.22.1 Inputs

IN : REAL	Input signal
ASC : REAL	Maximum ascendance during time base
DSC : REAL	Maximum descendence during time base
TM : TIME	Time base
RST : BOOL	Reset

3.22.2 Outputs

OUT : REAL	Ramp signal
------------	-------------

3.22.3 Time diagram

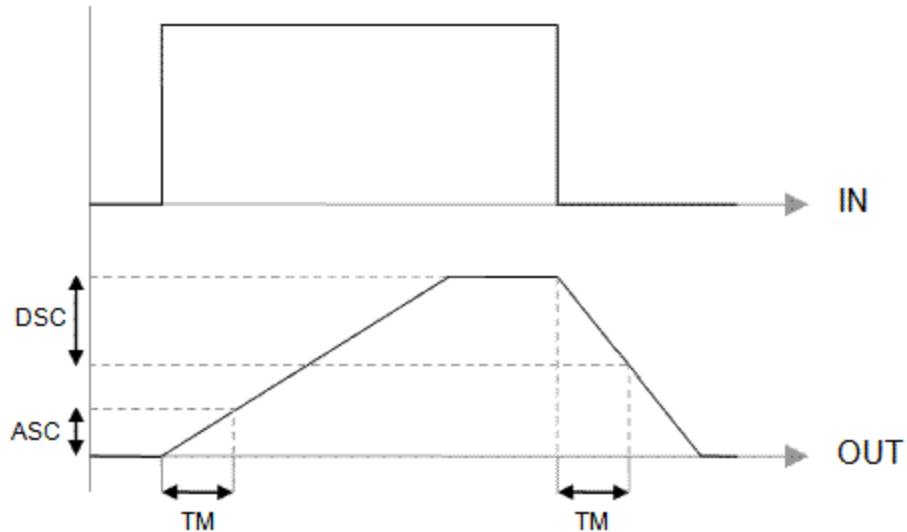

3.22.4 Remarks

Parameters are not updated constantly. They are taken into account when only:

- the first time the block is called
 - when the reset input (RST) is TRUE
- In these two situations, the output is set to the value of IN input.

ASC and DSC give the maximum ascendant and descendant growth during the TB time base.

Both must be expressed as positive numbers.


In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

3.22.5 ST Language

(* MyRamp is a declared instance of RAMP function block *)

```
MyRamp (IN, ASC, DSC, TM, RST);
OUT := MyBlinker.OUT;
```


3.22.6 FBD Language

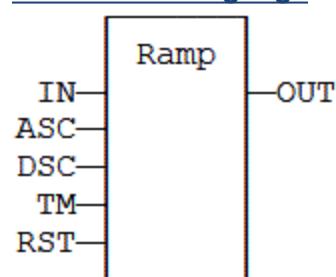

3.22.7 FFLD Language

(* The function is executed only if EN is TRUE *)

(* ENO keeps the same value as EN *)

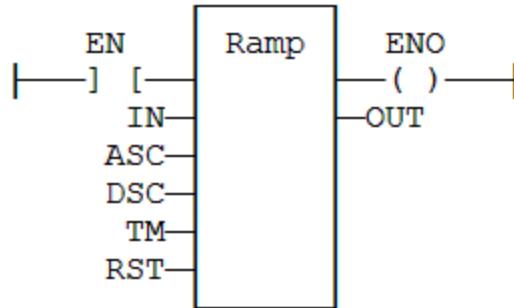

3.22.8 IL Language

(* MyRamp is a declared instance of RAMP function block *)

Op1: CAL MyRamp (IN, ASC, DSC, TM, RST)

FFLD MyBlinker.OUT

ST OUT

3.23 Real Time clock management functions

The following functions read the real time clock of the target system:

DTCurDate	Get current date stamp
DTCurTime	Get current time stamp
DTDay	Get day from date stamp
DTMonth	Get month from date stamp
DTYear	Get year from date stamp
DTSec	Get seconds from time stamp
DTMin	Get minutes from time stamp
DTHour	Get hours from time stamp
DTMs	Get milliseconds from time stamp

The following functions format the current date/time to a string:

DAY_TIME	With predefined format
DTFORMAT	With custom format

The following functions are used for triggering operations:

DTAT	Pulse signal at the given date/time
DTEvery	Pulse signal with long period



The real-time clock may not be available on all controller hardware models. Please consult the controller hardware specifications for real-time clock availability.

DAY_TIME: get current date or time

`Q := DAY_TIME (SEL);`

`SEL : DINT` specifies the wished information (see below)
`Q : STRING` wished information formatted on a string

Possible values of SEL input

- 1 current time - format: 'HH:MM:SS'
- 2 day of the week
- 0 (default) current date - format: 'YYYY/MM/DD'

DTCURDATE: get current date stamp

`Q := DTCurDate ();`

`Q : DINT` numerical stamp representing the current date

DTCURTIME: get current time stamp

```
Q := DTCurTime();
```

`Q : DINT` numerical stamp representing the current time of the day

DTYEAR: extract the year from a date stamp

```
Q := DTYear (iDate);
```

`IDATE : DINT` numerical stamp representing a date. This is output of DTCURDATE.
`Q : DINT` year of the date (ex: 2004)

DTMONTH: extract the month from a date stamp

```
Q := DTMonth (iDate);
```

`IDATE : DINT` numerical stamp representing a date. This is output of DTCURDATE.
`Q : DINT` month of the date (1..12)

DTDAY: extract the day of the month from a date stamp

```
Q := DTDay (iDate);
```

`IDATE : DINT` numerical stamp representing a date. This is output of DTCURDATE.
`Q : DINT` day of the month of the date (1..31)

DTHOUR: extract the hours from a time stamp

```
Q := DTHour (iTime);
```

`ITIME : DINT` numerical stamp representing a time. This is output of DTCURDATE.
`Q : DINT` Hours of the time (0..23)

DTMIN: extract the minutes from a time stamp

```
Q := DTMin (iTime);
```

`ITIME : DINT` numerical stamp representing a time. This is output of DTCURDATE.
`Q : DINT` Minutes of the time (0..59)

DTSEC: extract the seconds from a time stamp

```
Q := DTSec (iTime);
```

`ITIME : DINT` numerical stamp representing a time. This is output of DTCURDATE.
`Q : DINT` Seconds of the time (0..59)

DTMS: extract the milliseconds from a time stamp

```
Q := DTMs (iTime);
```

`ITIME : DINT` numerical stamp representing a time. This is output of DTCURDATE.
`Q : DINT` Milliseconds of the time (0..999)

3.23.1 DAY_TIME

Function - Format the current date/time to a string.

3.23.1.1 Inputs

`SEL : DINT` Format selector

3.23.1.2 Outputs

`Q : STRING` String containing formatted date or time

IMPORTANT The real-time clock may not be available on all controller hardware models. Please consult the controller hardware specifications for real-time clock availability.

3.23.1.3 Remarks

Possible values of the SEL input are:


- 1 current time - format: 'HH:MM:SS'
- 2 day of the week
- 0 (default) current date - format: 'YYYY/MM/DD'

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung.

3.23.1.4 ST Language


`Q := DAY_TIME (SEL);`

3.23.1.5 FBD Language

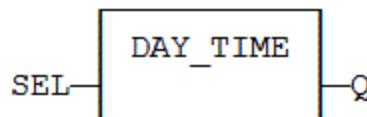

3.23.1.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

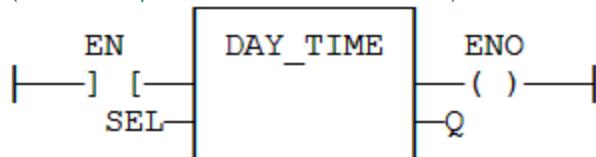

3.23.1.7 IL Language

Op1: FFLD SEL
DAY_TIME
ST Q

See also

DTFORMAT

3.23.2 DTFORMAT

Function - Format the current date/time to a string with a custom format.

3.23.2.1 Inputs

FMT: STRING Format string

3.23.2.2 Outputs

Q : STRING String containing formatted date or time

IMPORTANT The real-time clock may not be available on all controller hardware models. Please consult the controller hardware specifications for real-time clock availability.

3.23.2.3 Remarks

The format string may contain any character. Some special markers beginning with the '%' character indicates a date/time information:

- %Y Year including century (e.g. 2006)
- %y Year without century (e.g. 06)
- %m Month (1..12)
- %d Day of the month (1..31)
- %H Hours (0..23)
- %M Minutes (0..59)
- %S Seconds (0..59)


Example

```
(* let's say we are at July 04th 2006, 18:45:20 *)
Q := DTFORMAT ('Today is %Y/%m/%d - %H:%M:%S');
(* Q is 'Today is 2006/07/04 - 18:45:20 *)
```

3.23.2.4 ST Language


Q := DTFORMAT (FMT);

3.23.2.5 FBD Language

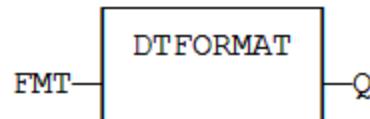

3.23.2.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

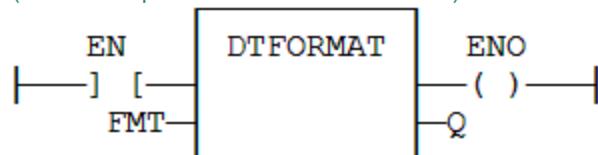

3.23.2.7 IL Language

Op1: FFLD FMT
DTFORMAT
ST Q

See also

DAY_TIME

3.23.3 DTAT

Function Block - Generate a pulse at given date and time

3.23.3.1 Inputs

YEAR : DINT	Wished year (e.g. 2006)
MONTH : DINT	Wished month (1 = January)
DAY : DINT	Wished day (1 to 31)
TMOFDAY : TIME	Wished time
RST : BOOL	Reset command

3.23.3.2 Outputs

QAT : BOOL	Pulse signal
QPAST : BOOL	True if elapsed

① IMPORTANT The real-time clock may not be available on all controller hardware models.
Please consult the controller hardware specifications for real-time clock availability.

3.23.3.3 Remarks

Parameters are not updated constantly. They are taken into account when only:

- the first time the block is called
- when the reset input (RST) is TRUE

In these two situations, the outputs are reset to FALSE.

The first time the block is called with RST=FALSE and the specified date/stamp is passed, the output QPAST is set to TRUE, and the output QAT is set to TRUE for one cycle only (pulse signal).

Highest units are ignored if set to 0. For instance, if arguments are "year=0, month=0, day = 3, tmofday=t#10h" then the block will trigger on the next 3rd day of the month at 10h.

In FFLD language, the block is activated only if the input rung is TRUE..

3.23.3.4 ST Language


(* MyDTAT is a declared instance of DTAT function block *)

MyDTAT (YEAR, MONTH, DAY, TMOFDAY, RST);

QAT := MyDTAT.QAT;


QPAST := MyDTATA.QPAST;

3.23.3.5 FBD Language

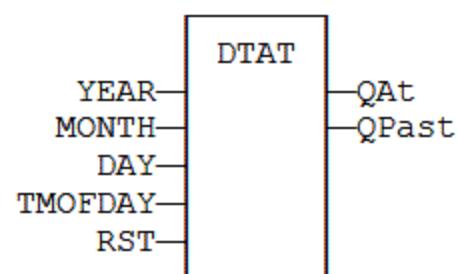

3.23.3.6 FFLD Language

(* Called only if EN is TRUE *)

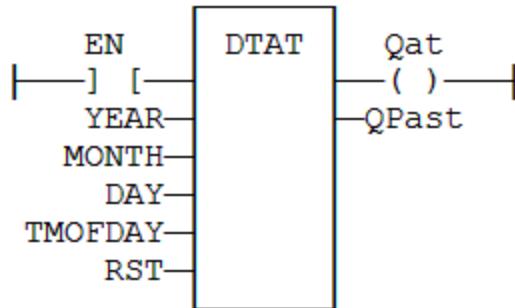

3.23.3.7 IL Language:

(* MyDTAT is a declared instance of DTAT function block *)

Op1: CAL MyDTAT (YEAR, MONTH, DAY, TMOFDAY, RST)

FFLD MyDTAT.QAT

ST QAT

FFLD MyDTATA.QPAST

ST QPAST

See also

DTEVERY Real time clock functions

3.23.4 DTEVERY

Function Block - Generate a pulse signal with long period

3.23.4.1 Inputs

RUN : DINT Enabling command

DAYS : DINT Period : number of days

TM : TIME Rest of the period (if not a multiple of 24h)

3.23.4.2 Outputs

Q : BOOL Pulse signal

3.23.4.3 Remarks

This block provides a pulse signal with a period of more than 24h. The period is expressed as:

$$\text{DAYS} * 24\text{h} + \text{TM}$$

For instance, specifying DAYS=1 and TM=6h means a period of 30 hours.


3.23.4.4 ST Language

(* MyDTEVERY is a declared instance of DTEVERY function block *)


MyDTEVERY (RUN DAYS, TM);

Q := MyDTEVERY.Q;

3.23.4.5 FBD Language

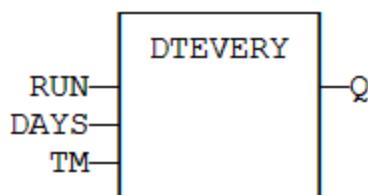

3.23.4.6 FFLD Language

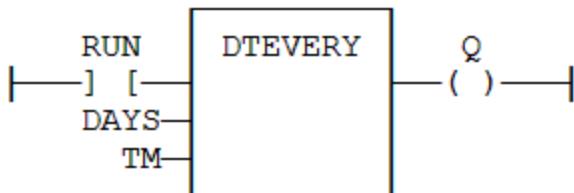

3.23.4.7 IL Language:

(* MyDTEVERY is a declared instance of DTEVERY function block *)

```

Op1: CAL MyDTEVERY (RUN DAYS, TM)
      FFLD MyDTEVERY.Q
      ST Q
  
```

See also

DTAT Real time clock functions

3.24 SERIALIZEIN

Function - Extract the value of a variable from a binary frame

3.24.1 Inputs

FRAME : USINT	Source buffer - must be an array
DATA : ANY(*)	Destination variable to be copied
POS : DINT	Position in the source buffer
BIGENDIAN : BOOL	TRUE if the frame is encoded with Big Endian format

(*) DATA cannot be a STRING

3.24.2 Outputs

NEXTPOS : DINT	Position in the source buffer after the extracted data 0 in case of error (invalid position / buffer size)
----------------	---

3.24.3 Remarks

This function is commonly used for extracting data from a communication frame in binary format.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. This function is not available in IL language

The FRAME input must fit the input position and data size. If the value cannot be safely extracted, the function returns 0.

The `DATA` input must be directly connected to a variable, and cannot be a constant or complex expression. This variable will be forced with the extracted value.

The function extracts the following number of bytes from the source frame:

- 1 byte for `BOOL`, `SINT`, `USINT` and `BYTE` variables
- 2 bytes for `INT`, `UINT` and `WORD` variables
- 4 bytes for `DINT`, `UDINT`, `DWORD` and `REAL` variables
- 8 bytes for `LINT` and `LREAL` variables


The function cannot be used to serialize `STRING` variables.

The function returns the position in the source frame, after the extracted data. Thus the return value can be used as a position for the next serialization.

3.24.4 ST Language


`Q := SERIALIZEIN (FRAME, DATA, POS, BIGENDIAN);`

3.24.5 FBD Language

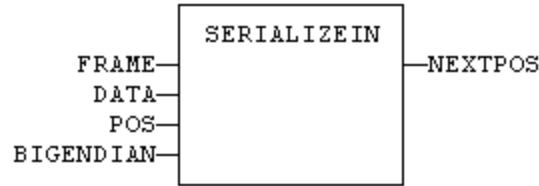

3.24.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

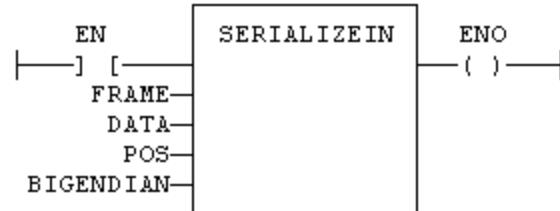

3.24.7 IL Language:

Not available

See also

`SERIALIZEOUT`

3.25 SERIALIZEOUT

Function - Copy the value of a variable to a binary frame

3.25.1 Inputs

<code>FRAME</code> : <code>USINT</code>	Destination buffer - must be an array
<code>DATA</code> : <code>ANY(*)</code>	Source variable to be copied
<code>POS</code> : <code>DINT</code>	Position in the destination buffer
<code>BIGENDIAN</code> : <code>BOOL</code>	TRUE if the frame is encoded with Big Endian format

(*) `DATA` cannot be a `STRING`

3.25.2 Outputs

NEXTPOS : DINT Position in the destination buffer after the copied data
0 in case of error (invalid position / buffer size)

3.25.3 Remarks

This function is commonly used for building a communication frame in binary format.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. This function is not available in IL language.

The FRAME input must be an array large enough to receive the data. If the data cannot be safely copied to the destination buffer, the function returns 0.

The function copies the following number of bytes to the destination frame:

- 1 byte for BOOL, SINT, USINT and BYTE variables
- 2 bytes for INT, UINT and WORD variables
- 4 bytes for DINT, UDINT, DWORD and REAL variables
- 8 bytes for LINT and LREAL variables


The function cannot be used to serialize STRING variables.

The function returns the position in the destination frame, after the copied data. Thus the return value can be used as a position for the next serialization.

3.25.4 ST Language


Q := SERIALIZEOUT (FRAME, DATA, POS, BIGENDIAN);

3.25.5 FBD Language

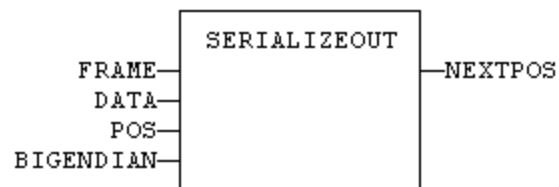

3.25.6 FFLD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

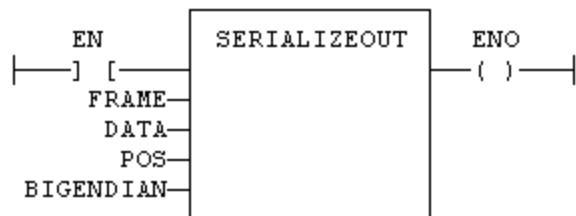

3.25.7 IL Language:

Not available

See also

SERIALIZEIN

3.26 SerGetString

Function - Extract a string from a binary frame

3.26.1 Inputs

FRAME : USINT	Source buffer - must be an array
DST : STRING	Destination variable to be copied
POS : DINT	Position in the source buffer
MAXLEN : DINT	Specifies a fixed length string
EOS : BOOL	Specifies a null terminated string
HEAD : BOOL	Specifies a string headed with its length

3.26.2 Outputs

NEXTPOS : DINT	Position in the source buffer after the extracted data 0 in case of error (invalid position / buffer size)
----------------	---

3.26.3 Remarks

This function is commonly used for extracting data from a communication frame in binary format.

In FFLD language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. This function is not available in IL language

The FRAME input must fit the input position and data size. If the value cannot be safely extracted, the function returns 0.

The DST input must be directly connected to a variable, and cannot be a constant or complex expression. This variable will be forced with the extracted value.

The function extracts the following bytes from the source frame:


MAXLEN	EOS	HEAD	description
<> 0	any	any	The string is stored on a fixed length specified by MAXLEN. If the string is actually smaller, the space is completed with null bytes.
= 0	TRUE	any	The string is stored with its actual length and terminated by a null byte.
= 0	FALSE	TRUE	The string is stored with its actual length and preceded by its length stored on one byte
=0	FALSE	FALSE	Invalid call

The function returns the position in the source frame, after the extracted data. Thus the return value can be used as a position for the next serialization.

3.26.4 ST Language


Q := SerGetString (FRAME, DST, POS, MAXLEN, EOS, HEAD);

3.26.5 FBD Language

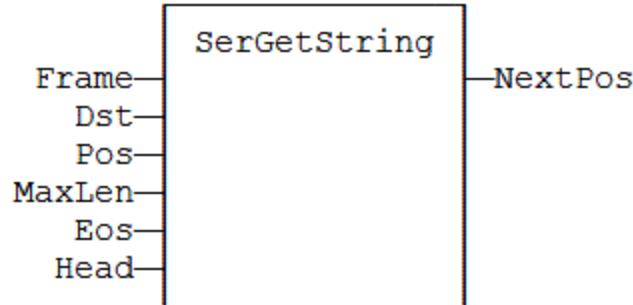

3.26.6 FFID Language

(* The function is executed only if EN is TRUE *)
 (* ENO keeps the same value as EN *)

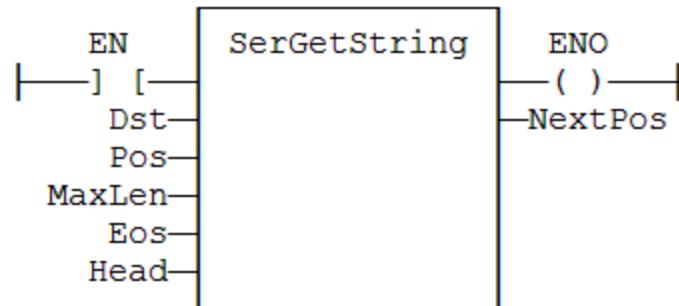

3.26.7 IL Language

Not available

3.27 SerPutString

Function - Copies a string to a binary frame

3.27.1 Inputs

FRAME : USINT	Destination buffer - must be an array
DST : STRING	Source variable to be copied
POS : DINT	Position in the source buffer
MAXLEN : DINT	Specifies a fixed length string
EOS : BOOL	Specifies a null terminated string
HEAD : BOOL	Specifies a string headed with its length

3.27.2 Outputs

NEXTPOS : DINT	Position in the destination buffer after the copied data 0 in case of error (invalid position / buffer size)
----------------	---

3.27.3 Remarks

This function is commonly used for storing data to a communication frame.

In FFID language, the operation is executed only if the input rung (EN) is TRUE. The output rung (ENO) keeps the same value as the input rung. This function is not available in IL language

The `FRAME` input must fit the input position and data size. If the value cannot be safely copied, the function returns 0.

The function copies the following bytes to the frame:


MAXLEN	EOS	HEAD	description
<> 0	any	any	The string is stored on a fixed length specified by MAXLEN. If the string is actually smaller, the space is completed with null bytes. If the string is longer, it is truncated.
= 0	TRUE	any	The string is stored with its actual length and terminated by a null byte.
= 0	FALSE	TRUE	The string is stored with its actual length and preceded by its length stored on one byte
=0	FALSE	FALSE	Invalid call

The function returns the position in the source frame, after the stored data. Thus the return value can be used as a position for the next serialization.

3.27.4 ST Language


`Q := SerPutString (FRAME, DSR, POS, MAXLEN, EOS, HEAD);`

3.27.5 FBD Language

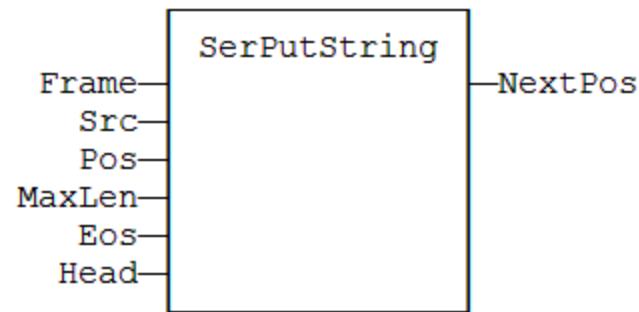

3.27.6 FFBD Language

(* The function is executed only if EN is TRUE *)
(* ENO keeps the same value as EN *)

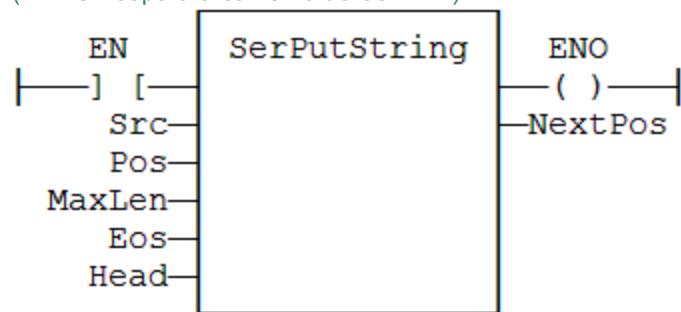

3.27.7 IL Language:

Not available

3.28 SERIO

Function Block - Serial communication.

3.28.1 Inputs

RUN : BOOL	Enable communication (opens the comm port)
SND : BOOL	TRUE if data has to be sent
CONF : STRING	Configuration of the communication port
DATASND : STRING	Data to send

3.28.2 Outputs

OPEN : BOOL	TRUE if the communication port is open
RCV : BOOL	TRUE if data has been received
ERR : BOOL	TRUE if error detected during sending data
DATARCV : STRING	Received data

3.28.3 Remarks

The RUN input does not include an edge detection. The block tries to open the port on each call if RUN is TRUE and if the port is still not successfully open. The CONF input is used for settings when opening the port. Please refer to your OEM instructions for further details about possible parameters.

The SND input does not include an edge detection. Characters are sent on each call if SND is TRUE and DATASND is not empty.

The DATARCV string is erased on each cycle with received data (if any). Your application is responsible for analyzing or storing received character immediately after the call to SERIO block.

SERIO is available during simulation. In that case, the CONF input defines the communication port according to the syntax of the "MODE" command. For example:


```
'COM1:9600,N,8,1'
```

The SERIO block may not be supported on some targets. Refer to your OEM instructions for further details.


3.28.4 ST Language

```
(* MySer is a declared instance of SERIO function block *)
MySer (RUN, SND, CONF, DATASND);
OPEN := MySer.OPEN;
RCV := MySer.RCV;
ERR := MySer.ERR;
DATARCV := MySer.DATARCV;
```

3.28.5 FBD Language

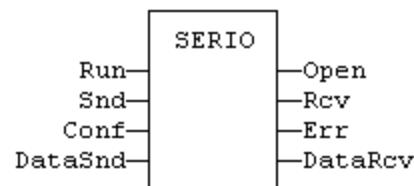

3.28.6 FFLD Language

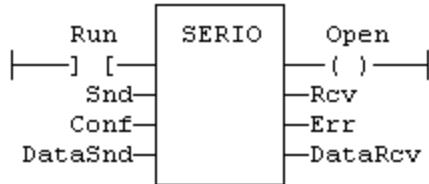

3.28.7 IL Language:

(* MySer is a declared instance of SERIO function block *)

Op1: CAL MySer (RUN, SND, CONF, DATASND)

FFLD MySer.OPEN

ST OPEN

FFLD MySer.RCV

ST RCV

FFLD MySer.ERR

ST ERR

FFLD MySer.DATARCV

ST DATARCV

3.29 SigID

Function - Get the identifier of a "Signal" resource

3.29.1 Inputs

SIGNAL : STRING	Name of the signal resource - <i>must be a constant value!</i>
COL : STRING	Name of the column within the signal resource - <i>must be a constant value!</i>

3.29.2 Outputs

ID : DINT	ID of the signal - to be passed to other blocks
-----------	---


3.29.3 Remarks

Some blocks have arguments that refer to a "signal" resource. For all these blocks, the signal argument is materialized by a numerical identifier. This function enables you to get the identifier of a signal defined as a resource.


3.29.4 ST Language

ID := SigID ('MySignal', 'FirstColumn');

3.29.5 FBD Language

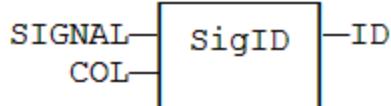

3.29.6 FFLD Language

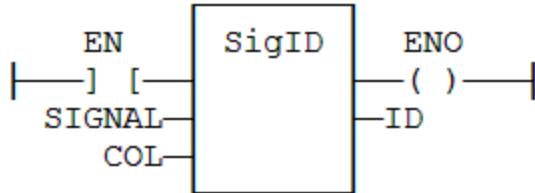

3.29.7 IL Language

```
Op1: FFLD 'MySignal'
      SigID 'FirstColumn'
      ST ID
```

See also

SigPlay SigScale

3.30 SigPlay

Function block - Generate a signal defined in a resource

3.30.1 Inputs

IN : BOOL	Triggering command
ID : DINT	ID of the signal resource, provided by SigID function
RST : BOOL	Reset command
TM : TIME	Minimum time in between two changes of the output

3.30.2 Outputs

Q : BOOL	TRUE when the signal is finished
OUT : REAL	Generated signal
ET : TIME	Elapsed time

3.30.3 Remarks

The "ID" argument is the identifier of the "signal" resource. Use the SigID function to get this value.

The "IN" argument is used as a "Play / Pause" command to play the signal. The signal is not reset to the beginning when IN becomes FALSE. Instead, use the "RST" input that resets the signal and forces the OUT output to 0.


The "TM" input specifies the minimum amount of time in between two changes of the output signal. This parameter is ignored if less than the cycle scan time.

This function block includes its own timer. Alternatively, you can use the SigScale function if you want to trigger the signal using a specific timer.


3.30.4 ST Language

Q := SigScale (ID, IN);

3.30.5 FBD Language

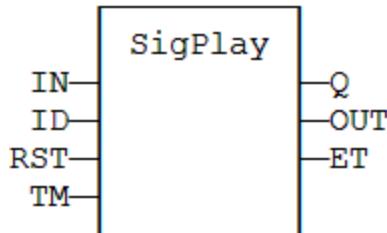

3.30.6 FFLD Language

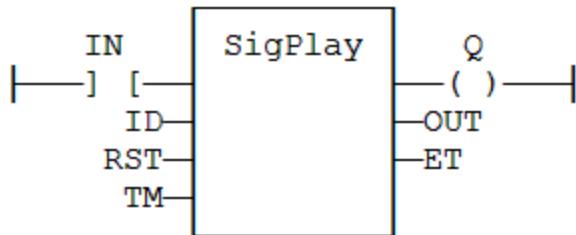

3.30.7 IL Language

Op1: FFLD IN
 SigScale ID
 ST Q

See also

SigScale SigID

3.31 SigScale

Function - Get a point from a "Signal" resource

3.31.1 Inputs

ID : DINT ID of the signal resource, provided by SigID function
 IN : TIME Time (X) coordinate of the wished point within the signal resource

3.31.2 Outputs

Q : REAL Value (Y) coordinate of the point in the signal

3.31.3 Remarks


The "ID" argument is the identifier of the "signal" resource. Use the SigID function to get this value.

This function converts a time value to a analog value such as defined in the signal resource. This function can be used instead of SigPlay function block if you want to trigger the signal using a specific timer.


3.31.4 ST Language

`Q := SigScale (ID, IN);`

3.31.5 FBD Language

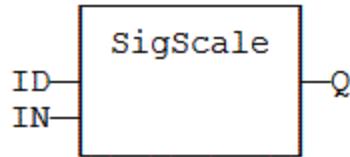

3.31.6 FFLD Language

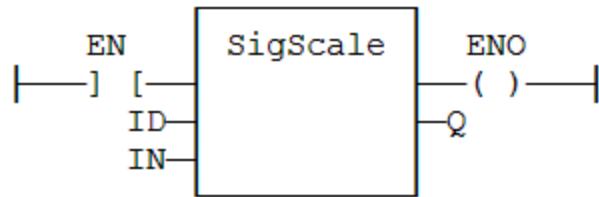

3.31.7 IL Language

Op1: FFLD IN
SigScale ID
ST Q

See also

SigPlay SigID

3.32 STACKINT

Function Block - Manages a stack of DINT integers.

3.32.1 Inputs

PUSH : BOOL Command: when changing from FALSE to TRUE, the value of IN is pushed on the stack
POP : BOOL Pop command: when changing from FALSE to TRUE, deletes the top of the stack
R1 : BOOL Reset command: if TRUE, the stack is emptied and its size is set to N
IN : DINT Value to be pushed on a rising pulse of PUSH
N : DINT maximum stack size - cannot exceed 128

3.32.2 Outputs

EMPTY : BOOL TRUE if the stack is empty
OFLO : BOOL TRUE if the stack is full
OUT : DINT value at the top of the stack

3.32.3 Remarks

Push and pop operations are performed on rising pulse of PUSH and POP inputs. In FFLD language, the input rung is the PUSH command. The output rung is the EMPTY output.


The specified size (N) is taken into account only when the R1 (reset) input is TRUE.

3.32.4 ST Language


(* MyStack is a declared instance of STACKINT function block *)

```
MyStack (PUSH, POP, R1, IN, N);
EMPTY := MyStack.EMPTY;
OFLO := MyStack.OFLO;
OUT := MyStack.OUT;
```

3.32.5 FBD Language

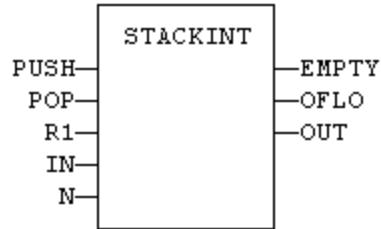

3.32.6 FFLD Language

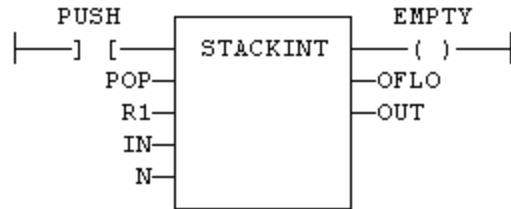

3.32.7 IL Language

(* MyStack is a declared instance of STACKINT function block *)

Op1: CAL MyStack (PUSH, POP, R1, IN, N)

```
FFLD MyStack.EMPTY
ST EMPTY
FFLD MyStack.OFLO
ST OFLO
FFLD MyStack.OUT
ST OUT
```

See also

AVERAGE INTEGRAL DERIVATE LIM_ALRM HYSTER

3.33 SurfLin

Function block- Linear interpolation on a surface.

3.33.1 Inputs

X : REAL X coordinate of the point to be interpolated.

Y : REAL Y coordinate of the point to be interpolated.
 XAxis : REAL[] X coordinates of the known points of the X axis.
 YAxis : REAL[] Y coordinates of the known points of the Y axis.
 ZVal : REAL[,] Z coordinate of the points defined by the axis.

3.33.2 Outputs

Z : REAL Interpolated Z value corresponding to the X,Y input point
 OK : BOOL TRUE if successful.
 ERR : DINT Error code if failed - 0 if OK.

3.33.3 Remarks

This function performs linear surface interpolation in between a list of points defined in XAxis and YAxis single dimension arrays. The output Z value is an interpolation of the Z values of the four rounding points defined in the axis. Z values of defined points are passed in the ZVal matrix (two dimension array).

ZVal dimensions must be understood as: ZVal [iX , iY]

Values in X and Y axis must be sorted from the smallest to the biggest. There must be at least two points defined in each axis. ZVal must fit the dimension of XAxis and YAxis arrays. For instance:

XAxis : ARRAY [0..2] of REAL;

YAxis : ARRAY [0..3] of REAL;

ZVal : ARRAY [0..2,0..3] of REAL;

In case the input point is outside the rectangle defined by XAxis and YAxis limits, the Z output is bound to the corresponding value and an error is reported.

The ERR output gives the cause of the error if the function fails:

Error Code	Meaning
0	OK
1	Invalid dimension of input arrays
2	Invalid points for the X axis
3	Invalid points for the Y axis
4	X,Y point is out of the defined axis

3.34 TCP-IP management functions

The following functions enable management of TCP-IP sockets for building client or server applications over ETHERNET network:

tcpListen	create a listening server socket
tcpAccept	accept client connections
tcpConnect	create a client socket and connect it to a server
tcpIsConnected	test if a client socket is connected
tcpClose	close a socket
tcpSend	send characters
tcpReceive	receive characters
tcpIsValid	test if a socket is valid

Each socket is identified in the application by a unique handle manipulated as a DINT value.

①IMPORTANT

- Even though the system provides a simplified interface, you must be familiar with the socket interface such as existing in other programming languages such as "C".
- Socket management may be not available on some targets. Please refer to OEM instructions for further details about available features.

tcpListen: create a "listening" server socket

```
SOCK := tcpListen (PORT, MAXCNX);

PORT : DINT      TCP port number to be attached to the server socket
MAXCNX : DINT    maximum number of client sockets that can be accepted
SOCK : DINT      ID of the new server socket
```

This function creates a new socket performs the "bind" and "listen" operations using default TCP settings. You will have to call the `tcpClose` function to release the socket returned by this function.

tcpAccept: accept a new client connection

```
SOCK := tcpAccept (LSOCK);

LSOCK : DINT      ID of a server socket returned by the tcpListen function
SOCK : DINT      ID of a new client socket accepted, or invalid ID if no new
connection
```

This function performs the "accept" operation using default TCP settings. You will have to call the `tcpClose` function to release the socket returned by this function.

tcpConnect: create a client socket and connect it to a server

```
SOCK := tcpConnect (ADDRESS, PORT);

ADDRESS : STRING   IP address of the remote server
PORT : DINT       wished port number on the server
SOCK : DINT       ID of the new client socket
```

This function creates a new socket performs the "connect" operation using default TCP settings and specified server address and port. You will have to call the `tcpClose` function to release the socket returned by this function.

①IMPORTANT

It is possible that the function returns a valid socket ID even if the connection to the server is not yet actually performed. After calling this function, you must call `tcpIsConnected` function to know if the connection is ready.

tcpIsConnected: test if a client socket is connected

```
OK := tcpIsConnected (SOCK);

SOCK : DINT      ID of the client socket
OK : BOOL        TRUE if connection is correctly established
```

①IMPORTANT

It is possible that the socket becomes invalid after this function is called, if an error occurs in the TCP connection. You must call the `tcpIsValid` function after calling this function. If the socket is not valid anymore then you must close it by calling `tcpClose`.

tcpClose: release a socket

```
OK := tcpClose (SOCK);

SOCK : DINT      ID of any socket
OK : BOOL        TRUE if successful
```

You are responsible for closing any socket created by `tcpListen`, `tcpAccept` or `tcpConnect` functions, even if they have become invalid.

tcpSend: send characters

```
NBSENT := tcpSend (SOCK, NBCHR, DATA);
```

SOCK : DINT	ID of a socket
NBCHAR : DINT	number of characters to be sent
DATA : STRING	string containing characters to send
NBSENT : DINT	number of characters actually sent

It is possible that the number of characters actually sent is less than the number expected. In that case, you will have to call again the function on the next cycle to send the pending characters.

①IMPORTANT It is possible that the socket becomes invalid after this function is called, if an error occurs in the TCP connection. You must call the `tcpIsValid` function after calling this function. If the socket is not valid anymore then you must close it by calling `tcpClose`.

tcpReceive: receive characters

```
NBRCV := tcpReceive (SOCK, MAXCHR, DATA);
```

SOCK : DINT	ID of a socket
MAXCHR : DINT	maximum number of characters wished
DATA : STRING	string where to store received characters
NBRCV : DINT	number of characters actually received

It is possible that the number of characters actually received is less than the number expected. In that case, you will have to call again the function on the next cycle to receive the pending characters.

①IMPORTANT It is possible that the socket becomes invalid after this function is called, if an error occurs in the TCP connection. You must call the `tcpIsValid` function after calling this function. If the socket is not valid anymore then you must close it by calling `tcpClose`.

tcpIsValid: test if a socket is valid

```
OK := tcpIsValid (SOCK);
```

SOCK : DINT	ID of the socket
OK : BOOL	TRUE if specified socket is still valid

3.35 Text buffers manipulation

Strings are limited to 255 characters. Here is a set of functions and function blocks for working with not limited text buffers. Text buffers are dynamically allocated or re-allocated.

①IMPORTANT

- There must be one instance of the TxbManager declared in your application for using these functions.
- The application should take care of releasing memory allocated for each buffer. Allocating buffers without freeing them will lead to memory leaks.

The application is responsible for freeing all allocated text buffers. However, all allocated buffers are automatically released when the application stops.

Below are the functions and function blocks for managing variable length text buffers:

Memory management / Miscellaneous:

TxbManager: main gatherer of text buffer data in memory

TxbLastError: get detailed error report about last call

Allocation / exchange with files:

TxbNew: Allocate a new empty buffer

TxbNewString: Allocate a new buffer initialized with string

TxbFree: Release a text buffer

TxbReadFile: Allocate a new buffer from file

TxbWriteFile: Store a text buffer to file

Data exchange:

TxbGetLength: Get length of a text buffer

TxbGetData: Store text contents to an array of characters

TxbGetString: Store text contents to a string

TxbSetData: Store an array of characters to a text buffer

TxbSetString: Store string to text buffer

TxbClear: Empty a text buffer

TxbCopy: Copy a text buffer

Sequential reading:

TxbRewind: Rewind sequential reading

TxbGetLine: Sequential read line by line

Sequential writing:

TxbAppend: Append variable value

TxbAppendLine: Append a text line

TxbAppendEol: Append end of line characters


TxpAppendTxb: Append contents of another buffer

UNICODE conversions:

TxbAnsiToUtf8: Convert a text buffer to UNICODE

TxbUtf8ToAnsi: Converts a text buffer to ANSI

3.35.1 TxbManager

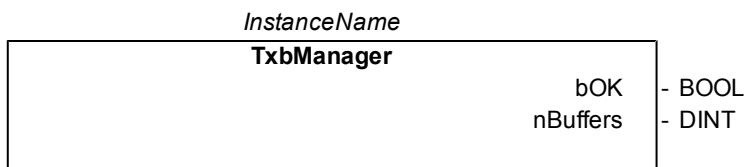

Description:

This function block is used for managing the memory allocated for text buffers. It takes care of releasing the corresponding memory when the application stops, and can be used for tracking memory leaks.

①IMPORTANT There must be one and only one instance of this block declared in the IEC application in order to use any other Txb... function.

Outputs:

bOK : BOOL TRUE if the text buffers memory system is correctly initialized.

nBuffers : DINT Number of text buffers currently allocated in memory.

TxbLastError



Description:

All TXB functions and blocks simply return a boolean information as a return value. This function can be called after any other function giving a FALSE return. It gives a detailed error code about the last detected error.

Outputs:

iErr : DINT Error code reported by the last call:
 0 = OK
 other = error (see below)

Below are possible error codes:

- 1 invalid instance of TXBManager - should be only one
- 2 manager already open - should be only one instance of TxbManager
- 3 manager not open - no instance of TxbManager declared
- 4 invalid handle
- 5 string has been truncated during copy
- 6 cannot read file
- 7 cannot write file
- 8 unsupported data type
- 9 too many text buffers allocated

TxbNew*Description:*

This function allocates a new text buffer initially empty. The application will be responsible for releasing the buffer by calling the TxbFree() function.

Outputs:

hTxb : DINT Handle of the new buffer

TxbNewString

Description:

This function allocates a new text buffer initially filled with the specified string.
The application will be responsible for releasing the buffer by calling the TxbFree() function.

Inputs:

szText : STRING Initial value of the text buffer

Outputs:

hTxb : DINT Handle of the new buffer

TxbFree*Description:*

This function releases a text buffer from memory.

Inputs:

hTxb : DINT Handle of a valid text buffer

Outputs:

bOK : BOOL TRUE if successful

TxbReadFile*Description:*

This function allocates a new text buffer and fills it with the contents of the specified file. The application will be responsible for releasing the buffer by calling the **TxbFree()** function.

Inputs:

szPath : STRING Full qualified path name of the file to be read

Outputs:

hTxb : DINT Handle of the new buffer

TxbWriteFile*Description:*

This function stores the contents of a text buffer to a file. The text buffer remains allocated in memory.

Inputs:

hTxb : DINT Handle of the text buffer

szPath : STRING Full qualified path name of the file to be created.

Outputs:

bOK : BOOL TRUE if successful

TxbGetLength*Description:*

This function returns the current length of a text buffer.

Inputs:

hTxb : DINT Handle of the text buffer

Outputs:

len : DINT Number of characters in the text buffer

TxbGetData*Description:*

This function copies the contents of a text buffer to an array of characters.

Inputs:

hTxb : DINT Handle of the text buffer

arData : SINT[] Array of characters to be filled with text

Outputs:

bOK : BOOL TRUE if successful

TxbGetString*Description:*

This function copies the contents of a text buffer to a string. The text is truncated if the string is not large enough.

Inputs:

hTxb : DINT Handle of the text buffer

Outputs:

szText : STRING String to be filled with text

TxbSetData

Description:


This function copies an array of characters to a text buffer. All characters of the input array are copied.

Inputs:

hTxb : DINT	Handle of the text buffer
arData : SINT[]	Array of characters to copy

Outputs:

bOK : BOOL	TRUE if successful
------------	--------------------

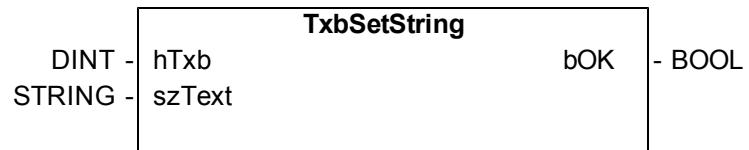TxbSetString*Description:*

This function copies the contents of a string to a text buffer.


Inputs:

hTxb : DINT	Handle of the text buffer
szText : STRING	String to be copied

Outputs:

bOK : BOOL

TRUE if successful

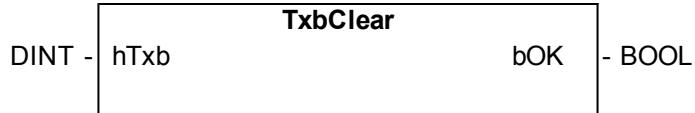TxbClear*Description:*

This function empties a text buffer.

Inputs:


hTxb : DINT

Handle of the text buffer

Outputs:

bOK : BOOL

TRUE if successful

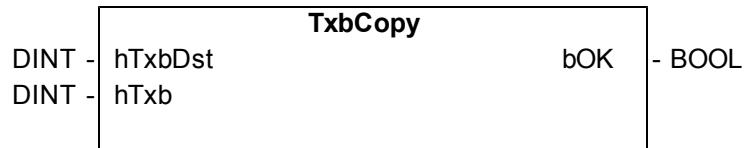TxbCopy*Description:*

This function copies the contents of the hTxb buffer to the hTxbDst buffer.

Inputs:

hTxbDst : DINT Handle of the destination text buffer

hTxb : DINT Handle of the source text buffer

Outputs:

bOK : BOOL TRUE if successful

TxbRewind



Description:

This function resets the sequential reading of a text buffer (rewind to the beginning of the text).


Inputs:

hTxb : DINT Handle of the text buffer

Outputs:

bOK : BOOL TRUE if successful

TxbGetLine

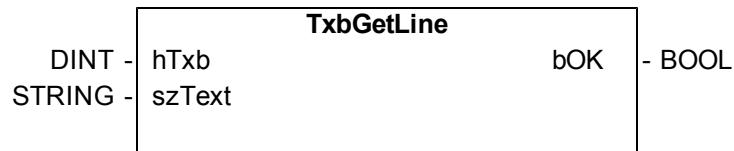

Description:

This function sequentially reads a line of text from a text buffer. End of line characters are not copied to the output string.

Inputs:

hTxb : DINT	Handle of the text buffer
szText : STRING	String to be filled with read line

Outputs:

bOK : BOOL	TRUE if successful
------------	--------------------

TxbAppend



Description:

This function adds the contents of a variable, formatted as text, to a text buffer. The specified variable can have any data type.

Inputs:

hTxb : DINT	Handle of the text buffer
data : ANY	Any variable

Outputs:

bOK : BOOL	TRUE if successful
------------	--------------------

TxbAppendLine*Description:*

This function adds the contents of the specified string variable to a text buffer, plus end of line characters.

Inputs:

hTxb : DINT Handle of the text buffer

szText : STRING String to be added to the text

Outputs:

bOK : BOOL TRUE if successful

TxbAppendEol*Description:*

This function adds end of line characters to a text buffer.

Inputs:


hTxb : DINT

Handle of the text buffer

Outputs:

bOK : BOOL

TRUE if successful

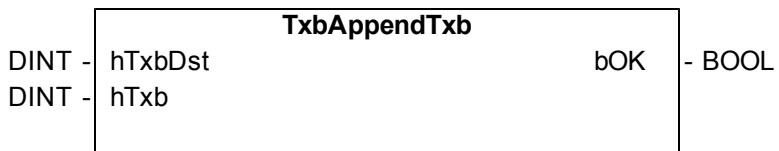TxbAppendTxb*Description:*

This function adds the contents of the "hTxb" text buffer to the "hTxbDst" text buffer.

Inputs:

hTxbDst : DINT

Handle of the text buffer to be completed

hTxb : DINT

Handle of the text buffer to be added

Outputs:

bOK : BOOL

TRUE if successful

TxbAnsiToUtf8

Description:

This function converts the whole contents of a text buffer from ANSI to UNICODE UTF8 encoding.

①IMPORTANT This function may be time and memory consuming for large buffers.

①IMPORTANT UNICODE conversion may be not available on some operating systems

Inputs:

hTxb : DINT Handle of the text buffer

Outputs:

bOK : BOOL TRUE if successful

TxbUtf8ToAnsi*Description:*

This function converts the whole contents of a text buffer from UNICODE UTF8 to ANSI encoding.

①IMPORTANT This function may be time and memory consuming for large buffers.

①IMPORTANT UNICODE conversion may be not available on some operating systems

Inputs:

hTxb : DINT Handle of the text buffer

Outputs:

bOK : BOOL	TRUE if successful
------------	--------------------

3.36 UDP management functions

The following functions enable management of UDP sockets for building client or server applications over ETHERNET network:

udpCreate	create a UDP socket
udpAddrMake	build an address buffer for UDP functions
updSendTo	send a telegram
udpRcvFrom	receive a telegram
udpClose	close a socket
udpIsValid	test if a socket is valid

Each socket is identified in the application by a unique handle manipulated as a DINT value.

① IMPORTANT

- Even though the system provides a simplified interface, you must be familiar with the socket interface such as existing in other programming languages such as "C".
- Socket management may be not available on some targets. Please refer to OEM instructions for further details about available features.

udpCreate: create a UDP socket

```
SOCK := udpCreate (PORT);
PORT : DINT      TCP port number to be attached to the server socket or 0 for a
client socket
SOCK : DINT      ID of the new server socket
```

This function creates a new UDP socket. If the PORT argument is not 0, the socket is bound to the port and thus can be used as a server socket.

udpAddrMake: build an address buffer for UDP functions

```
OK := udpAddrMake (IPADDR, PORT, ADD);
IPADDR : STRING  IP address in form xxx.xxx.xxx.xxx
PORT : DINT      IP port number
ADD : USINT[32]  buffer where to store the UDP address (filled on output)
OK : BOOL        TRUE if successful
```

This functions is required for building a internal "UDP" address to be passed to the `udpSendTo` function in case of UDP client processing.

udpSendTo: send a UDP telegram

```
OK := udpSendTo (SOCK, NB, ADD, DATA);
SOCK : DINT      ID of the client socket
NB : DINT       number of characters to send
ADD : USINT[32]  buffer containing the UDP address (on input)
DATA : STRING    characters to send
OK : BOOL        TRUE if successful
```

The "ADD" buffer must contain a valid UDP address either constructed by the `udpAddrMake` function or returned by the `udpRcvFrom` function.

udpRcvFrom: receive a UDP telegram

```
OK := udpRcvFrom (SOCK, NB, ADD, DATA);
```

SOCK : DINT ID of the client socket
 NB : DINT maximum number of characters received
 ADD : USINT[32] buffer containing the UDP address of the transmitter (filled on output)
 DATA : STRING buffer where to store received characters
 Q : DINT number of actually received characters

If characters are received, the function fills the `ADD` argument with the internal "UDP" of the sender. This buffer can then be passed to the `udpSendTo` function to send the answer.

udpClose: release a socket

```
OK := udpClose (SOCK);
```

SOCK : DINT ID of any socket
 OK : BOOL TRUE if successful

You are responsible for closing any socket created by `tcpListen`, `tcpAccept` or `tcpConnect` functions, even if they have become invalid.

udplIsValid: test if a socket is valid

```
OK := udplIsValid (SOCK);
```

SOCK : DINT ID of the socket
 OK : BOOL TRUE if specified socket is still valid

3.37 VLID

Function - Get the identifier of an embedded list of variables

3.37.1 Inputs

FILE : STRING Path name of the .TXT list file - *must be a constant value!*

3.37.2 Outputs

ID : DINT ID of the list - to be passed to other blocks

3.37.3 Remarks

Some blocks have arguments that refer to a list of variables. For all these blocks, the "list" argument is materialized by a numerical identifier. This function enables you to get the identifier of a list of variables.

Embedded lists of variables are simple ".TXT" text files with one variable name per line (note that you can only declare global variable).

Lists must contain single variables only. Items of arrays and structures must be specified one by one. The length of the list is not limited by the system.



List files are read at compiling time and are embedded into the downloaded application code. This implies that a modification performed in the list file after downloading will not be taken into account by the application.

3.37.4 ST Language

ID := VLID ('MyFile.txt');

3.37.5 FBD Language



3.37.6 FFLD Language

(* The function is executed only if EN is TRUE *)



3.37.7 IL Language

Op1: FFLD 'MyFile.txt'
VLID COL
ST ID

Global Support Contacts

North America

KOLLMORGEN
203A West Rock Road
Radford, VA 24141 USA

Web: www.kollmorgen.com
Mail: support@kollmorgen.com
Tel.: +1 - 540 - 633 - 3545
Fax: +1 - 540 - 639 - 4162

Europe

KOLLMORGEN Europe GmbH
Pempelfurtstraße 1
40880 Ratingen, Germany

Web: www.kollmorgen.com
Mail: technik@kollmorgen.com
Tel.: +49 - 2102 - 9394 - 0
Fax: +49 - 2102 - 9394 - 3155

Asia

KOLLMORGEN
Rm 2205, Scitech Tower, China
22 Jianguomen Wai Street

Web: www.kollmorgen.com
Mail: sales.asia@kollmorgen.com
Tel.: +86 - 400 666 1802
Fax: +86 - 10 6515 0263